

# **GOT 1000**

Video/RGB Input Unit

User's Manual

**GT15V-75V4R1**

**GT15V-75V4**

**GT15V-75R1**

## ●SAFETY PRECAUTIONS●

(Always read these precautions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product.

In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".




**DANGER**

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



**CAUTION**

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  caution level may lead to a serious accident according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

## [DESIGN PRECAUTIONS]

### CAUTION

- Do not bundle the control and communication cables with main-circuit, power or other wiring.  
Run the above cables separately from such wiring and keep them a minimum of 100mm (3.94in.) apart. Not doing so noise can cause a malfunction.

## [MOUNTING PRECAUTIONS]

### DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing this unit onto/from the GOT.  
Not doing so can cause the unit to fail or malfunction.

### CAUTION

- Use this unit in the environment that satisfies the general specifications described in User's Manual.  
Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- Tighten the mounting screws within the specified torque range.  
Undertightening can cause the GOT to drop, short circuit or malfunction.  
Overtightening can cause a drop, short circuit or malfunction due to the damage of the screws or the GOT.
- Do not touch the conductive and electronic parts of the unit directly.  
Doing so can cause a unit malfunction or failure.

## [WIRING PRECAUTIONS]

### **DANGER**

- Be sure to shut off all phases of the external power supply used by the system before wiring.  
Failure to do so may result in an electric shock, product damage or malfunctions.

### **CAUTION**

- Exercise care to avoid foreign matter such as chips and wire offcuts entering the GOT. Not doing so can cause a fire, failure or malfunction.
- Make sure to securely connect the cable to the connector of unit.  
Incorrect connection may cause malfunctions.
- Do not hold the cable by hand and pull it out from the unit.  
When removing the cable from the unit, make sure to hold the connector by hand and pull it.  
Failure to do so may cause malfunctions or damage to the unit or cable.
- Solder the coaxial cable connector correctly.  
Incomplete soldering may cause a malfunction.

## [STARTUP/MAINTENANCE PRECAUTIONS]

### DANGER

- When power is on, do not touch the terminals.  
Doing so can cause an electric shock or malfunction.
- Before starting cleaning, always shut off GOT power externally in all phases.  
Not doing so can cause a unit failure or malfunction.  
Undertightening can cause a short circuit or malfunction.  
Overtightening can cause a short circuit or malfunction due to the damage of the screws or unit.

### CAUTION

- Do not disassemble or modify the unit.  
Doing so can cause a failure, malfunction, injury or fire.
- Do not drop the module or subject it to strong shock.  
A module damage may result.
- Before touching the unit, always touch grounded metal, etc. to discharge static electricity from human body, etc.  
Not doing so can cause the unit to fail or malfunction.

## [DISPOSAL PRECAUTIONS]

### CAUTION

- When disposing of the product, handle it as industrial waste.

## [TRANSPORTATION PRECAUTIONS]

### CAUTION

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of GT15 User's manual, as they are precision devices.  
Failure to do so may cause the unit to fail.  
Check if the unit operates correctly after transportation.

## REVISIONS

\* The manual number is noted at the lower right of the top cover.

Print Date	*Manual Number	Revision
Mar., 2006	IB(NA)-0800348-A	First edition
Feb., 2007	IB(NA)-0800348-B	<p>Partial addition</p> <p>Chapter1, Section 2.4.1</p> <p>Addition</p> <p>Compliance with the EMC and Low Voltage Directives</p>
Jul., 2007	IB(NA)-0800348-C	<p>Partial corrections</p> <p>Compliance with the EMC and Low Voltage Directives, Chapter 2, 3, 4</p>

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2006 MITSUBISHI ELECTRIC CORPORATION

---

---

# CONTENTS

---

---

1. Overview .....	1
2. Specifications .....	4
2.1 Video input unit specifications .....	4
2.2 RGB input unit specifications .....	5
2.3 Video/RGB input unit specifications .....	6
2.4 Cable specifications .....	7
2.4.1 Specifications of the cables (coaxial cables) used when displaying video images .....	7
2.4.2 Specifications of the cables (9-core combined cables) used when displaying RGB screens .....	10
3. Part Names and External Dimensions .....	11
3.1 Part names and external dimensions of the video input unit .....	11
3.2 Part names and external dimensions of the RGB input unit .....	12
3.3 Part names and external dimensions of the video/RGB input unit .....	13
3.4 External dimensions of the extension interface relay board .....	14
4. Installation Procedure .....	15

## Manuals

The following shows manuals relevant to this product.

### Detailed Manual

Manual name	Manual number (Model code)
GT15 User's Manual (Sold separately)	SH-080528ENG (1D7M23)
GOT1000 Connection Manual (Sold separately)	SH-080532ENG (1D7M26)

### Relevant Manuals

For relevant manuals, refer to the PDF manual stored within the drawing software used.

## Packing List

The following items are included.

Model	Product	Quantity
GT15V-75V4	Video input unit	1
	Mounting screw set (2 screws,2 stickers)	2
	Extend interface relay board	1
GT15V-75R1	RGB input unit	1
	Mounting screw set (2 screws,2 stickers)	2
	Extend interface relay board	1
GT15V-75V4R1	Video/RGB input unit	1
	Mounting screw set (2 screws,2 stickers)	2
	Extend interface relay board	1

## Compliance with the EMC and Low Voltage Directives

When incorporating the Mitsubishi GOT into other machinery or equipment and keeping compliance with the EMC and low voltage directives, refer to "EMC AND LOW VOLTAGE DIRECTIVE" of GT15 User's Manual.

The CE logo is printed on the rating plate of the GOT, indicating compliance with the EMC and low voltage directives.



---

---

# 1. Overview

---

---


This User's Manual is related to the following units.

- MODEL GT15V-75V4 Video Input Unit (referred to as the Video Input Unit hereinafter)
- MODEL GT15V-75R1 RGB Input Unit (referred to as the RGB Input Unit hereinafter)
- MODEL GT15V-75V4R1 Video/RGB Input Unit (referred to as the Video/RGB Input Module hereinafter).

When mounting the above units with the GT1585V-STBA, GT1575V-STBA (referred to as GOT hereinafter), the images taken by video cameras or screens on personal computers can be displayed on the GOT.

The video input unit can display the images taken by up to 4 video cameras on the GOT.

GOT can be used as a vision sensor monitor.

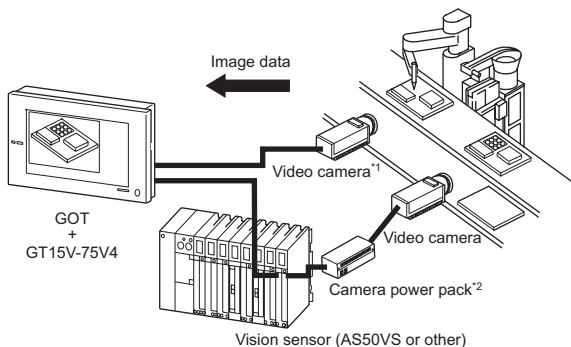

\*1: Power on the video camera simultaneously with the GOT.

\*2: Power supply for the camera may be necessary depending on the vision sensor to be used.


The RGB input unit can display a personal computer display on the GOT. Video input is also available using an RGB output type vision sensor.

When connecting to a personal computer




\*1: When connecting with a personal computer, ground wire of the computer should be grounded.

When connecting to a video camera using an RGB output type vision sensor.

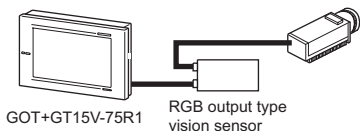

For the video/RGB input unit, functions of both video input unit (GT15V-75V4) and RGB input unit (GT15V-75R1) are available.

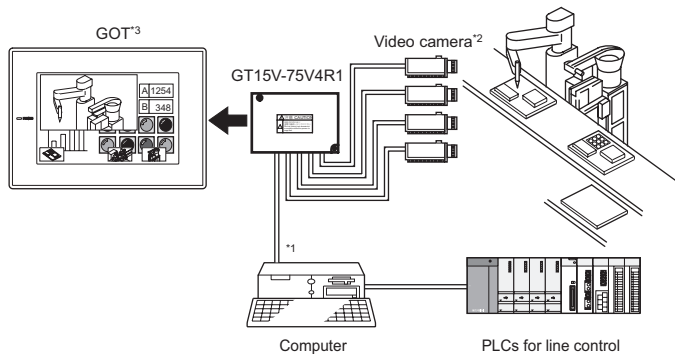

- \*1: When connecting the unit to a personal computer, ground wire of the computer should be grounded.
- \*2: Power on the video camera simultaneously with the GOT.
- \*3: Video images and personal computer screens cannot be displayed on the GOT at the same time.

To use the Video input unit, RGB input unit and Video/RGB input unit, make the Communication Settings.

For setting details, refer to GOT1000 Series Connection Manual.

For details of system configuration, refer to GOT1000 Series Connection Manual.

For video input and RGB input functions, refer to the GT Designer2 Version□ Screen Design Manual.

---

---

## 2. Specifications

---

---

### 2.1 Video input unit specifications

Item		Specifications	
Video input section	Video input system	Color	NTSC format, PAL format (interlaced format)
		Monochrome	EIA format, CCIR format (interlaced format)
	Number of video input channels	4 channel	
	Input signal	IVp-p, 75 $\Omega$ , composite signal	
	Display size [dot's]	640x480 (possible to reduce to 320x240, 160x120) 720x480 (possible to reduce to 360x240, 180x120) *1	
	Video external connection method	Coaxial cable	
	Applicable wire size	75 $\Omega$ coaxial shield cable	
Maximum cable length	Refer to the specifications of the personal computer, vision sensor and video camera to be used *2		
Internal current consumption (3.3VDC)	0.7A		
Weight	0.2kg (0.44lb)		

\*1: Compatible with PAL and CCIR formats only.

\*2: The length of a cable differs depending on the specifications of the vision sensor and video camera to be used.

Be sure to use the cable with specified length for the vision sensor and video camera to be used.

## 2.2 RGB input unit specifications

Item		Specifications
RGB input section	RGB input method (dot's)	Analog RGB(SVGA; 800x600, VGA; 640x480)
	Number of video input channels	1 channel
	Input image signal	1Vp-p, 75 $\Omega$
	Synchronizing signal	TTL, 1k $\Omega$
	Display size [dot's]	800× 600 (refresh rate 60, 72, 75 [Hz]) 640× 480 (refresh rate 60, 72, 75, 85 [Hz])
	RGB external connection method	D-Sub15 pin
	Applicable wire size	9-core combined cable (recommended)
Maximum cable length	Refer to the specifications of the personal computer, vision sensor and video camera to be used <sup>*1</sup>	
Internal current consumption (3.3VDC)	0.91A	
Weight	0.17kg (0.34lb)	

\*1: The length of a cable differs depending on the specifications of the personal computer and vision sensor to be used.  
Be sure to use the cable with specified length for the personal computer and vision sensor to be used.

## 2.3 Video/RGB input unit specifications

Item		Specifications	
Video input section *3	Video input system	Color	NTSC format, PAL format (interlaced format)
		Monochrome	EIA format, CCIR format (interlaced format)
	Number of video input channels		4 channel
	Input signal		1Vp-p, 75Ω, composite signal
	Display size [dot's]		640x480 (possible to reduce to 320x240, 160x120) 720x480 (possible to reduce to 360x240, 180x120) *1
	Video external connection method		Coaxial cable
	Applicable wire size		75Ω coaxial shield cable
RGB input section *3	RGB input method (dot's)		Analog RGB(SVGA; 800x600, VGA; 640x480)
	Number of video input channels		1 channel
	Input image signal		1Vp-p, 75Ω
	Synchronizing signal		TTL, 1kΩ
	Display size [dot's]		800×600 (refresh rate 60, 72, 75 [Hz]) 640×480 (refresh rate 60, 72, 75, 85 [Hz])
	RGB external connection method		D-Sub15 pin
	Applicable wire size		9-core combined cable (recommended)
Maximum cable length		Refer to the specifications of the personal computer, vision sensor and video camera to be used *2	
Internal current consumption (3.3VDC)		0.95A	
Weight		0.21kg (0.42lb)	

\*1: Compatible with PAL and CCIR formats only.

\*2: The length of a cable differs depending on the specifications of the personal computer, vision sensor and video camera to be used.  
Be sure to use the cable with specified length for the personal computer, vision sensor and video camera to be used.

\*3: Both video images and RGB screens cannot be displayed on the GOT at the same time.

## 2.4 Cable specifications

The following shows the cable specifications, connection diagram, and connector used for the video input unit, RGB input unit, and video/RGB input unit.

### 2.4.1 Specifications of the cables (coaxial cables) used when displaying video images

#### (1) Coaxial cable

Use high frequency coaxial cable "3C-2V" or "5C-2V" (conforms to JIS C 3501).

The following shows the coaxial cable specifications.

Item	3C-2V	5C-2V
Construction		
Cable diameter	5.4mm (0.21in)	7.4mm (0.29in)
Allowable bending radius	22mm (0.87in) or more	30mm (41.18in) or more
Internal conductive material diameter	0.5mm (0.02in) (Annealed copper wire)	0.8mm (0.03in) (Annealed copper wire)
Insulation material diameter	3.1mm (0.12in) (Polyethylene)	4.9mm (0.19in) (Polyethylene)
External conductive material diameter	3.8mm (0.15in) (Single annealed copper wire mesh)	5.6mm (0.22in) (Single annealed copper wire mesh)
Applicable connector plug	Connector plug for 3C-2V (BNC-P-3-N1-CAU is recommended.)	Connector plug for 5C-2V (BNC-P-5-N1-CAU is recommended.)


#### (2) Connector

- GOT connector


Use BNC connector for GOT side connector.

The following shows the connection method for BNC connector and coaxial cable.


(a) Construction of BNC connector and coaxial cable.

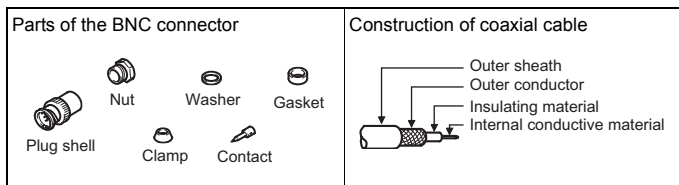

 
(b) Connecting the BNC connector with the coaxial cable.



 
- 1) Remove the outer sheath of the coaxial cable in the specified dimension as shown left.




- 2) Slip a nut, a washer, a gasket, and a clamp through the coaxial cable as shown left, and loosen the outer conductor.

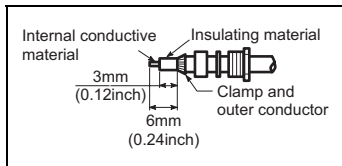

 - 3) Cut off the insulating material and internal conductive material in the specified dimensions as shown left. Cut off the outer conductor in the same dimension as the taper part of the clamp, and extend it over the clamp.



 - 4) Solder the contact to the tip of the internal conductive material.



- 5) Insert the contact assembly of 4) into the plug shell, and engage the plug shell with the nut.



- \*1: Soldered part must not have excess solder mound.
- \*2: The tail end of the contact must come into close contact with the cut end of the insulating material. The contact must not be cutting in the insulating material.
- \*3: Apply solder quickly so that the insulating material will not be deformed by heat.
  - Connector at the video camera and vision sensor  
Use a connector applicable to the video camera or vision sensor to be used.

### (3) Precautions for cable preparation

The maximum cable length differs depending on the specifications of the video camera and vision sensor to be used.

For details, refer to manuals for video camera and vision sensor.


When a cable length gets longer, video signals are attenuated, and video images deteriorate.

When using a cable exceeding the length described in the following table, it is recommended to correct video images using a video signal amplifier.

Cable type	Cable length [m] (feet)
3C-2V	100 (328.1)
5C-2V	200 (656.2)

### (4) Precautions for laying cable

Consider wiring using double-shielded coaxial cable in places that are subject to large amounts of noise.

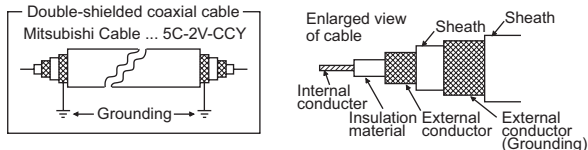

The 5C-2V connector plug is applicable to double-shielded coaxial cable.


Connect the 5C-2V connector plug to the coaxial cable inside a double-shielded coaxial cable. Ground the shielded part outside a double-shielded coaxial cable as shown in the above figure.

## 2.4.2 Specifications of the cables (9-core combined cables) used when displaying RGB screens

### (1) Cable specifications

Item	Specifications
Applicable cable	Equivalent to SP23-23352A UL20276-SB
Applicable wire size	9-core combined cable (recommended)

### (2) Connection diagram

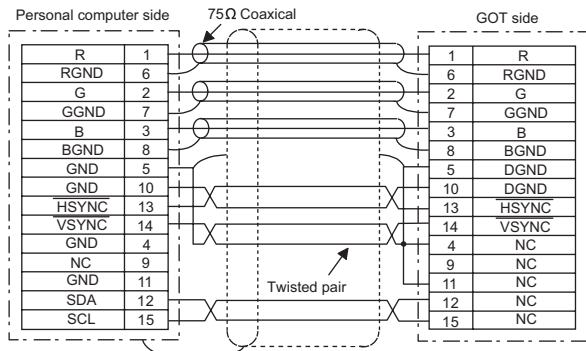

### (3) Connector

- GOT side connector

The following model is used for the GOT connector.

Use a connector that matches the following connector.

15-pin D-sub (male) inch screw type

Manufactured by DDK

17HE-R13150-73MC2

- Connector at the personal computer and vision sensor

Use the connector applicable to the personal computer and vision sensor.


### (4) Precaution for cable creating

The length of a cable differs depending on the personal computer and vision sensor to be used.

Make the cable within the range of personal computer and vision sensor specifications.

## 3. Part Names and External Dimensions

### 3.1 Part names and external dimensions of the video input unit

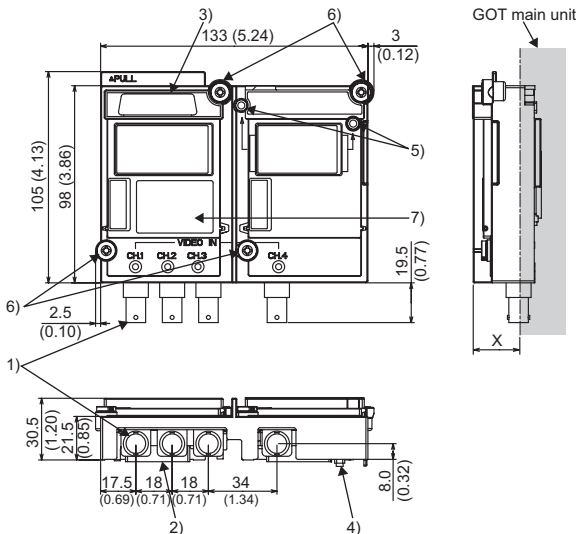


Dimensions of X when the video input unit is mounted to the GOT.

12.1"	18 (0.71)
10.4"	21 (0.83)

Unit: mm (inch)

No.	Name	Description
1)	Connector for video input	Connector for connecting a coaxial cable
2)	Interface connector	Connector mounted to the GOT
3)	Extension connector	Connector to which a back extension unit is installed
4)	Connector for video/RGB connection	Connector connecting with the video/RGB interface of GOT
5)	Board fixing screw	Screw for fixing the extend interface relay board
6)	Mounting screw	Mounting screws for fixing the unit to the GOT
7)	Rating plate	-

### 3.2 Part names and external dimensions of the RGB input unit

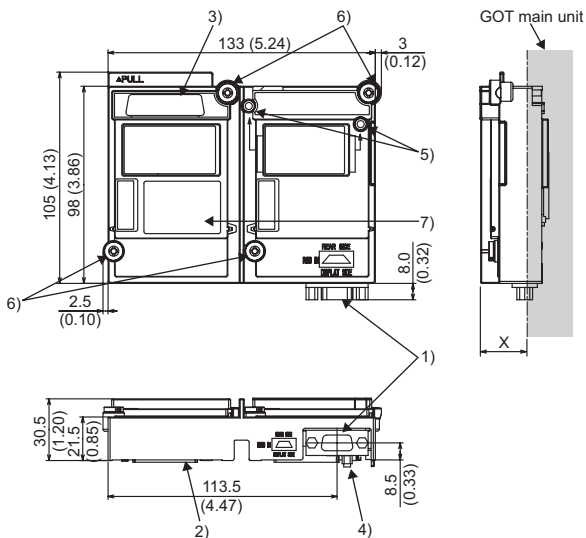


Dimensions of X when the RGB input unit is mounted to the GOT.

12.1"	18 (0.71)
10.4"	21 (0.83)

Unit: mm (inch)

No.	Name	Description
1)	Connector for RGB input	Connector for connecting 9-core combined cables
2)	Interface connector	Connector mounted to the GOT
3)	Extension connector	Connector to which a back extension unit is installed
4)	Connector for video/RGB connection	Connector connecting with the video/RGB interface of GOT
5)	Board fixing screw	Screw for fixing the extend interface relay board
6)	Mounting screw	Mounting screws for fixing the unit to the GOT
7)	Rating plate	-

### 3.3 Part names and external dimensions of the video/RGB input unit

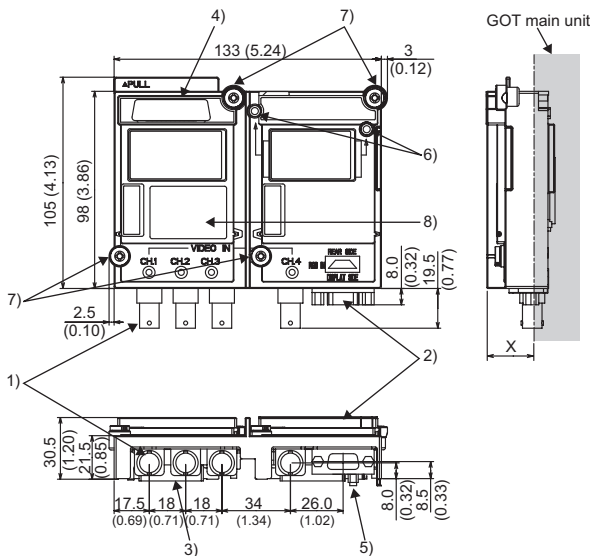


Dimensions of X when the video/RGB input unit is mounted to the GOT.

12.1"	18 (0.71)
10.4"	21 (0.83)

Unit: mm (inch)

No.	Name	Description
1)	Connector for video input	Connector for connecting a coaxial cable
2)	Connector for RGB input	Connector for connecting 9-core combined cables
3)	Interface connector	Connector mounted to the GOT
4)	Extension connector	Connector to which a back extension unit is installed
5)	Connector for video/RGB connection	Connector connecting with the video/RGB interface of GOT
6)	Board fixing screw	Screw for fixing the extend interface relay board
7)	Mounting screw	Mounting screws for fixing the unit to the GOT
8)	Rating plate	-

### 3.4 External dimensions of the extension interface relay board

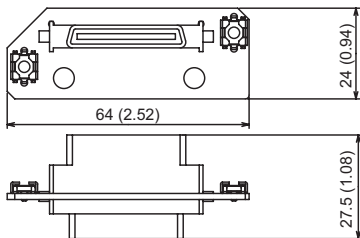

Unit: mm (inch)

---


---

## 4. Installation Procedure


---

---


- (1) Power off the GOT.
- (2) Remove two extension unit covers of the GOT.

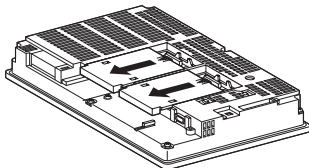


- (3) Attach the extend interface relay board to the extend I/F-2 side on the GOT.  
After the installation, detach the connector cover from the extend interface relay board.
- (4) Fit the video/RGB input unit in the GOT case.

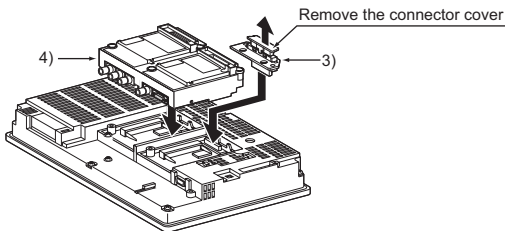

- (5) Fasten the video/RGB input unit by tightening its mounting screws (4 places) with tightening torque 0.36 to 0.48 N•m.
- (6) Fasten the bus connection unit by tightening the board fixing screws (2 places) with the tightening torque of 0.36 to 0.48 N•m.

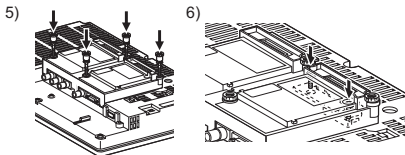

- (7) When installing an extension unit on the unit that has been installed, remove the connector cover and the sticker.
- When not installing an extension unit on the unit that has been installed, in order to avoid receiving electrostatic, stick accessory stickers to cover the top of mounting screws (4 places).
- Keep the connector cover fixed.
- Keep the sticker stuck as it is.

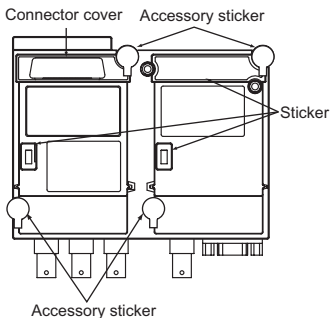

Point

Remove the screws that fixes the extend interface relay board before removing the unit.(Above 6))





**HEADQUARTERS**

MITSUBISHI ELECTRIC EUROPE B.V. **EUROPE**  
 German Branch  
 Gothaer Straße 8  
**D-40880 Ratingen**  
 Phone: +49 (0)2102 / 486-0  
 Fax: +49 (0)2102 / 486-1120

MITSUBISHI ELECTRIC EUROPE B.V. **CZECH REPUBLIC**  
 Czech Branch  
 Radlická 714/113a  
**CZ-158 00 Praha 5**  
 Phone: +420 (0)251 551 470  
 Fax: +420 (0)251-551-471

MITSUBISHI ELECTRIC EUROPE B.V. **FRANCE**  
 French Branch  
 25, Boulevard des Bouvets  
**F-92741 Nanterre Cedex**  
 Phone: +33 (0)1 / 55 68 55 68  
 Fax: +33 (0)1 / 55 68 57 57

MITSUBISHI ELECTRIC EUROPE B.V. **IRELAND**  
 Irish Branch  
 Westgate Business Park, Ballymount  
**IRL-Dublin 24**  
 Phone: +353 (0)1 4198800  
 Fax: +353 (0)1 4198890

MITSUBISHI ELECTRIC EUROPE B.V. **ITALY**  
 Italian Branch  
 Viale Colleoni 7  
**I-20041 Agrate Brianza (MI)**  
 Phone: +39 039 / 60 53 1  
 Fax: +39 039 / 60 53 312

MITSUBISHI ELECTRIC EUROPE B.V. **SPAIN**  
 Spanish Branch  
 Carretera de Rubí 76-80  
**E-08190 Sant Cugat del Vallés (Barcelona)**  
 Phone: 902 131121 // +34 935653131  
 Fax: +34 935891579

MITSUBISHI ELECTRIC EUROPE B.V. **UK**  
 UK Branch  
 Travellers Lane  
**UK-Hatfield, Herts. AL10 8XB**  
 Phone: +44 (0)1707 / 27 61 00  
 Fax: +44 (0)1707 / 27 86 95

MITSUBISHI ELECTRIC CORPORATION **JAPAN**  
 Office Tower "Z" 14 F  
 8-12,1 chome, Harumi Chuo-Ku  
**Tokyo 104-6212**  
 Phone: +81 3 622 160 60  
 Fax: +81 3 622 160 75

MITSUBISHI ELECTRIC AUTOMATION, Inc. **USA**  
 500 Corporate Woods Parkway  
**Vernon Hills, IL 60061**  
 Phone: +1 847 478 21 00  
 Fax: +1 847 478 22 53

**EUROPEAN REPRESENTATIVES**

GEVA **AUSTRIA**  
 Wiener Straße 89  
**AT-2500 Baden**  
 Phone: +43 (0)2252 / 85 55 20  
 Fax: +43 (0)2252 / 488 60

TEHNIKON **BELARUS**  
 Oktyabrskaya 16/5, Off. 703-711  
**BY-220030 Minsk**  
 Phone: +375 (0)17 / 210 46 26  
 Fax: +375 (0)17 / 210 46 26

Koning & Hartman b.v. **BELGIUM**  
 Woluwelaan 31  
**BE-1800 Vilvoorde**  
 Phone: +32 (0)2 / 257 02 40  
 Fax: +32 (0)2 / 257 02 49

INEA BH d.o.o. **BOSNIA AND HERZEGOVINA**  
 Aleja Lipa 56  
**BA-71000 Sarajevo**  
 Phone: +387 (0)33 / 921 164  
 Fax: +387 (0)33 / 524 539

AKHNATON **BULGARIA**  
 4 Andrej Ljapchev Blvd. Pb 21  
**BG-1756 Sofia**  
 Phone: +359 (0)2 / 817 6004  
 Fax: +359 (0)2 / 97 44 06 1

INEA CR d.o.o. **CROATIA**  
 Losinjska 4 a  
**HR-10000 Zagreb**  
 Phone: +385 (0)1 / 36 940 - 01 / -02 / -03  
 Fax: +385 (0)1 / 36 940 - 03

AutoCont C.S. s.r.o. **CZECH REPUBLIC**  
 Technologická 374/6  
**CZ-708 00 Ostrava-Pustkovec**  
 Phone: +420 595 691 150  
 Fax: +420 595 691 199

B:TECH A.S. **CZECH REPUBLIC**  
 U Borové 69  
**CZ-58001 Havlíčkův Brod**  
 Phone: +420 (0)569 777 777  
 Fax: +420 (0)569-777 778

Beijer Electronics A/S **DENMARK**  
 Lykkegårdsvej 17, 1.  
**DK-4000 Roskilde**  
 Phone: +45 (0)46 / 75 76 66  
 Fax: +45 (0)46 / 75 56 26

Beijer Electronics Eesti OÜ **ESTONIA**  
 Pärnu mnt.160i  
**EE-11317 Tallinn**  
 Phone: +372 (0)6 / 51 81 40  
 Fax: +372 (0)6 / 51 81 49

Beijer Electronics OY **FINLAND**  
 Jaakonkatu 2  
**FIN-01620 Vantaa**  
 Phone: +358 (0)207 / 463 500  
 Fax: +358 (0)207 / 463 501

UTEKO A.B.E.E. **GREECE**  
 5, Mavrogenous Str.  
**GR-18542 Piraeus**  
 Phone: +30 211 / 1206 900  
 Fax: +30 211 / 1206 999

MELTRADE Ltd. **HUNGARY**  
 Fertő utca 14.  
**HU-1107 Budapest**  
 Phone: +36 (0)1 / 431-9726  
 Fax: +36 (0)1 / 431-9727

Beijer Electronics SIA **LATVIA**  
 Vestienas iela 2  
**LV-1035 Riga**  
 Phone: +371 (0)784 / 2280  
 Fax: +371 (0)784 / 2281

Beijer Electronics UAB **LITHUANIA**  
 Savanoriu Pr. 187  
**LT-02300 Vilnius**  
 Phone: +370 (0)5 / 232 3101  
 Fax: +370 (0)5 / 232 2980

**EUROPEAN REPRESENTATIVES**

INTEHSIS srl **MOLDOVA**  
 bld. Traian 23/1  
**MD-2060 Kishinev**  
 Phone: +373 (0)22 / 66 4242  
 Fax: +373 (0)22 / 66 4280

Koning & Hartman b.v. **NETHERLANDS**  
 Haarlerbergweg 21-23  
**NL-1101 CH Amsterdam**  
 Phone: +31 (0)20 / 587 76 00  
 Fax: +31 (0)20 / 587 76 05

Beijer Electronics AS **NORWAY**  
 Postboks 487  
**NO-3002 Drammen**  
 Phone: +47 (0)32 / 24 30 00  
 Fax: +47 (0)32 / 84 85 77

MPL Technology Sp. z o.o. **POLAND**  
 Ul. Krakowska 50  
**PL-32-083 Balice**  
 Phone: +48 (0)12 / 630 47 00  
 Fax: +48 (0)12 / 630 47 01

Sirius Trading & Services srl **ROMANIA**  
 Aleea Lacul Morii Nr. 3  
**RO-060841 Bucuresti, Sector 6**  
 Phone: +40 (0)21 / 430 40 06  
 Fax: +40 (0)21 / 430 40 02

Craft Con. & Engineering d.o.o. **SERBIA**  
 Bulevar Svetog Cara Konstantina 80-86  
**SER-18106 Nis**  
 Phone: +381 (0)18 / 292-24-4/5  
 Fax: +381 (0)18 / 292-24-4/5

INEA SR d.o.o. **SERBIA**  
 Izletnicka 10  
**SER-113000 Smederevo**  
 Phone: +381 (0)26 / 617 163  
 Fax: +381 (0)26 / 617 163

AutoCont Control s.r.o. **SLOVAKIA**  
 Radlinského 47  
**SK-02601 Dolny Kubin**  
 Phone: +421 (0)43 / 5868210  
 Fax: +421 (0)43 / 5868210

CS MTrade Slovensko, s.r.o. **SLOVAKIA**  
 Vajanského 58  
**SK-92101 Piestany**  
 Phone: +421 (0)33 / 7742 760  
 Fax: +421 (0)33 / 7735 144

INEA d.o.o. **SLOVENIA**  
 Stegne 11  
**SI-1000 Ljubljana**  
 Phone: +386 (0)1 / 513 8100  
 Fax: +386 (0)1 / 513 8170

Beijer Electronics AB **SWEDEN**  
 Box 426  
**SE-20124 Malmö**  
 Phone: +46 (0)40 / 35 86 00  
 Fax: +46 (0)40 / 35 86 02

Econotec AG **SWITZERLAND**  
 Hinterdorfstr. 12  
**CH-8309 Nürensdorf**  
 Phone: +41 (0)44 / 838 48 11  
 Fax: +41 (0)44 / 838 48 12

GTS **TURKEY**  
 Darülaceze Cad. No. 43 KAT. 2  
**TR-34384 Okmeydanı-Istanbul**  
 Phone: +90 (0)212 / 320 1640  
 Fax: +90 (0)212 / 320 1649

CSC Automation Ltd. **UKRAINE**  
 15, M. Raskova St., Fl. 10, Office 1010  
**UA-02002 Kiev**  
 Phone: +380 (0)44 / 494 33 55  
 Fax: +380 (0)44 / 494-33-66

**EURASIAN REPRESENTATIVES**

Kazpromautomatics Ltd. **KAZAKHSTAN**  
 Mustafina Str. 7/2  
**KAZ-470046 Karaganda**  
 Phone: +7 7212 / 50 11 50  
 Fax: +7 7212 / 50 11 50

CONSYS **RUSSIA**  
 Promyshlennaya st. 42  
**RU-198099 St. Petersburg**  
 Phone: +7 812 / 325 36 53  
 Fax: +7 812 / 325 36 53

ELECTROTECHNICAL SYSTEMS **RUSSIA**  
 Derbenevskaya st. 11A, Office 69  
**RU-115114 Moscow**  
 Phone: +7 495 / 744 55 54  
 Fax: +7 495 / 744 55 54

ELEKTROSTILY **RUSSIA**  
 Rubzovskaja nab. 4-3, No. 8  
**RU-105082 Moscow**  
 Phone: +7 495 / 545 3419  
 Fax: +7 495 / 545 3419

NPP "URALELEKTRA" **RUSSIA**  
 Sverdlova 11A  
**RU-620027 Ekaterinburg**  
 Phone: +7 343 / 353 2745  
 Fax: +7 343 / 353 2461

**MIDDLE EAST REPRESENTATIVES**

ILAN & GAVISH Ltd. **ISRAEL**  
 24 Shenkar St., Kiryat Arie  
**IL-49001 Petah-Tiqva**  
 Phone: +972 (0)3 / 922 18 24  
 Fax: +972 (0)3 / 924 0761

**AFRICAN REPRESENTATIVE**

CBI Ltd. **SOUTH AFRICA**  
 Private Bag 2016  
**ZA-1600 Isando**  
 Phone: +27 (0)11 / 928 2000  
 Fax: +27 (0)11 / 392 2354