

GOT1000

CC-Link communication unit

User's Manual

GT15-75J61BT13-Z

●SAFETY PRECAUTIONS●

(Always read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The instructions given in this manual are concerned with this product. In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".




DANGER

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  CAUTION level may lead to a serious accident according to the circumstances.

Always follow the precautions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

[DESIGN PRECAUTIONS]

DANGER

- Some faults of this unit may keep the outputs on or off. An external monitoring circuit should therefore be provided to check for output signals which may lead to a serious accident.
Not doing so can cause an accident due to mis-output or misoperation.
- If a communication error (including cable disconnection) occurs during monitoring with the GOT, communication between the GOT and master station is interrupted, disabling operation.
When using the GOT to configure a system, assume that a GOT communication error will occur and configure a system in which switches used to perform significant operation for the system are provided on any device other than the GOT.
Not doing so can cause an accident due to mis-output or misoperation.

CAUTION

- Do not bunch the control wires or communication cables with the main circuit or power wires, or lay them close to each other.
As a guide, separate the lines by a distance of at least 100 mm (3.94 inch) otherwise malfunctions may occur due to noise.

[INSTALLATION PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before mounting or removing this unit to/from the GOT.
Not doing so can cause a unit failure or misoperation.

[INSTALLATION PRECAUTIONS]

CAUTION

- Use this unit in the environment given in the general specifications of the GT15 User's Manual.
Not doing so can cause an electric shock, fire, malfunction or product damage or deterioration.
- When installing this unit to the GOT, fit it to the connection interface of the GOT and tighten the mounting screws in the specified torque range.
Undertightening can cause a drop, failure or malfunction.
Overtightening can cause a drop, failure or malfunction due to screw or unit damage.

[WIRING PRECAUTIONS]

DANGER

- Be sure to shut off all phases of the external power supply used by the system before wiring.
Not doing so can cause an electric shock, product damage or misoperation.

CAUTION

- When switching power on or starting operation after mounting, wiring or other work, always fit the terminal cover supplied to the product.
Not doing so can cause an electric shock, short circuit or failure.
- Always ground the FG terminal of the GOT power supply and the FG1 terminal of this unit to the protective ground conductor.
Be sure to ground the GOT and this unit separately.
Not doing so may cause an electric shock or misoperation.
- Before wiring the unit, confirm the rated voltage and terminal arrangement of the product.
A fire or failure can occur if the power supply connected is different from the rating or wiring is incorrect.
- Use applicable solderless terminals and tighten them with the specified torque. If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.

[WIRING PRECAUTIONS]

CAUTION

- Be sure to tighten any unused terminal screws within a tightening torque range (0.36 to 0.48•Nm).
Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Tighten the terminal screws within the specified torque range.
Undertightening can cause a short circuit or misoperation.
Overtightening can cause a short circuit or misoperation due to damaged screws or unit.
- Ensure that foreign matters such as chips and wire off-cuts do not enter the unit.
They can cause a fire, failure or misoperation.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the unit.
Not doing so can damage the unit or cables due to dangling, moved or accidentally pulled cables or can cause misoperation due to cable contact fault.
- Do not install the control lines together with the communication cables, or bring them close to each other.
Failure to do so may cause malfunctions due to noise.
- When disconnecting a communication or power supply cable from the unit, do not pull on the cable itself.
Disconnect cables fitted with connectors by holding and pulling the cable connector. Disconnect cables not fitted with a connector by removing the screws from the part connected to the unit.
Pulling on a cable that is connected to the unit can cause damage to the unit or cable, or malfunction due to cable connection faults.

[TEST OPERATION PRECAUTIONS]

DANGER

- Do not output (switch on) any reserved signal among the output signals provided from the master unit to the GOT.
Doing so can cause the PLC system to misoperate.

[STARTUP AND MAINTENANCE PRECAUTIONS]

DANGER

- Do not touch the terminals while power is on.
Doing so can cause an electric shock or misoperation.
- Before starting cleaning or terminal screw retightening, always switch power off externally in all phases.
Not doing so can cause a unit failure or misoperation.
Undertightening can cause a drop, short circuit or misoperation.
Overtightening can cause a drop, short circuit or misoperation due to damaged screws or unit.

CAUTION

- Do not disassemble or modify the unit.
Doing so can cause a failure, misoperation, injury or fire.
- Do not touch the conductive areas and electronic parts of the unit.
Doing so can cause the unit to misoperate or fail.
- Do not change any switch setting while power is on.
Doing so can cause a failure or misoperation.
- Do not drop the unit or subject it to strong impact.
Doing so can damage the unit.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the unit.
Failure to do so may cause a failure or malfunctions of the unit.

[DISPOSAL PRECAUTIONS]

CAUTION

- Dispose of this product as industrial waste.

[TRANSPORTATION PRECAUTIONS]

CAUTION

- Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the GT15 User's Manual, as they are precision devices.
Failure to do so may cause the unit to fail.
Check if the unit operates correctly after transportation.

CONTENTS

1. Overview	1
2. Performance Specifications	2
3. I/O Signals and Remote Register Assignment	4
3.1 I/O Signals Transferred to/from the Master Module	4
3.2 Remote Register Assignment	5
4. Part Names and the Settings	6
5. Installation Procedure	9
6. Wiring Method	11
7. External Dimensions	12

Manuals

The following shows manuals relevant to this product.

Detailed Manual

Manual name	Manual number (Type code)
GT15 User's Manual (Option)	SH-080528ENG (1D7M23)
GOT1000 Series Connection Manual (Option)	SH-080532ENG (1D7M26)

Relevant Manuals

For relevant manuals, refer to the PDF manual stored within the drawing software used.

1. Overview

This user's manual introduces the GT15 CC-Link communication unit (hereinafter referred to as GT15-75J61BT13-Z) used in the Control & Communication Link system (hereinafter referred to as CC-Link).


GT15-75J61BT13-Z is configured with the A8GT-J61BT13 CC-Link communication unit (hereinafter referred to as A8GT-J61BT13) and interface converter unit (hereinafter referred to as GT15-75IF900).

For attachable GOTs, refer to the GT15 User's Manual.

After unpacking the box of GT15-75J61BT13-Z, please check if the following items are contained.

Product name	Model name	Quantity
CC-Link communication unit	(A8GT-J61BT13)	1
Interface converter unit	(GT15-75IF900)	1
Fixing bracket for communication unit	-	3

The A8GT-J61BT13 can be connected to the GOT with the GT15-75IF900, which can perform monitoring as an intelligent device station (number of occupied stations selectable from 1 station / 4 stations) in the CC-Link system.

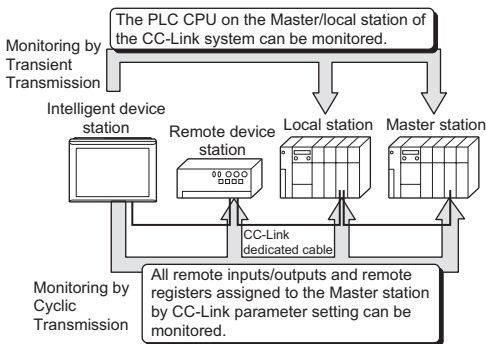

For the details of CC-Link connection, refer to the GOT1000 Series Connection Manual.

2. Performance Specifications

The following is the performance specification of CC-Link communication unit. For the general specifications of CC-Link communication unit, refer to the GT15 User's Manual.*1

Item		Specifications	
CC-Link station type		Intelligent device station	
Number of link occupied stations		May be selected between 1 and 4.	
Maximum number of link points per system		Remote I/O (RX,RY) *2	2048 points
		Remote register (RWw)	256 points
		Remote register (RWr)	256 points
Number of link points per station		Remote I/O (RX,RY) *2	32 points
		Remote register (RWw)	4 points
		Remote register (RWr)	4 points
Number of link points per number of occupied stations	1 station occupied	Remote I/O (RX,RY) *2	32 points
		Remote register (RWw)	4 points
		Remote register (RWr)	4 points
	4 stations occupied	Remote I/O (RX,RY) *2	128 points
		Remote register (RWw)	16 points
		Remote register (RWr)	16 points
Transmission speed		156kbps/625kbps/2.5Mbps/5Mbps/10Mbps	
Max. transmission distance		Depends on the transmission speed.	
Max. number of modules connected		26 The max. number of modules connected depends on the configuration of the CC-Link system to be used. For more details on the max. number of modules connected, refer to the CC-Link System Master-Local Module User's Manual.	
Connection cable		CC-Link dedicated cable	
Terminal block		8-pin terminal block (M3× 8 screws)	
Applicable crimping terminal		RAV1.25-3, RAV2-3.5 (conforming to JIS C2805)	
Internal current consumption (DC5V)		0.27A in total with GT15-75IF900	
Weight		0.36kg (0.79lb) in total with GT15-75IF900	

*1 : The vibration resistance of the CC-Link communication unit is as follows. (Differs with the GT15.)

Item	Specifications					
Vibration resistance	Conforming to JIS B 3502, IEC 61131-2	Under intermittent vibration	10 to 57Hz	---	0.075mm (0.003inch)	10 times each in X, Y, Z directions (for 80 minch)
			57 to 150Hz	9.8m/s ²	---	
		Under continuous vibration	10 to 57Hz	---	0.035mm (0.001inch)	
			57 to 150Hz	4.9m/s ²	---	

*2 : Each of the I/O signals (RX, RY) occupies 16 points of a system area within device points.

For more details on the I/O signals, refer to Section 3.1.

3. I/O Signals and Remote Register Assignment

3.1 I/O Signals Transferred to/from the Master Module

The following table lists the I/O signals assigned to the GOT.

The I/O signals differ according to the set number of occupied stations (1 or 4 stations).

n in the table indicates the address assigned to the Master module by station number setting.

Signal Direction: GOT → Master module		Signal Direction: Master module → GOT			
Device No.		Signal name	Device No.		Signal name
Number of occupied stations			Number of occupied stations		
1 station	4 stations		1 station	4 stations	
RXn0 to RXnF	RXn0 to RX(n+6)F	User area	RYn0 to RYnF	RYn0 to RY(n+6)F	User area
RX(n+1)0 to RX(n+1)A	RX(n+7)0 to RX(n+7)A	Reserved	RY(n+1)0 to RY(n+1)A	RY(n+7)0 to RY(n+7)A	Reserved
RX(n+1)B	RX(n+7)B	Remote READY flag*1	RY(n+1)B	RY(n+7)B	
RX(n+1)C to RX(n+1)F	RX(n+7)C to RX(n+7)F	Reserved	RY(n+1)C to RY(n+1)F	RY(n+7)C to RY(n+7)F	

*1 : The remote READY flag is on during startup of the GOT.

It switches on when GOT power is switched on, hardware reset is made, or the GOT is ready to operate.

If GOT power is on, the remote READY flag is off when offline operation is performed (during OS installation or screen data downloading) or while initial processing is executed.

Use it for the interlock ladder when writing or reading data to or from the CC-Link Master station.

3.2 Remote Register Assignment

The following is the assignment of the remote registers of the GOT.
The remote registers differ according to the set number of occupied stations (1 or 4 stations).


All areas are use areas.


 
 
 
m and n in the table indicate the addresses assigned to the Master module by station number setting.



Transfer Direction	Addresses		Description	Default Value
	Number of occupied stations			
	1 station	4 stations		
Master station ↓ GOT	RWwm to RWwm+3	RWwm to RWwm+F	User write area	0
GOT ↓ Master station	RWrn to RWrn+3	RWrn to RWrn+F	User read area	0

4. Part Names and the Settings

This section provides the names of the A8GT-J61BT13 and GT15-75IF900 parts and how to set the switches.

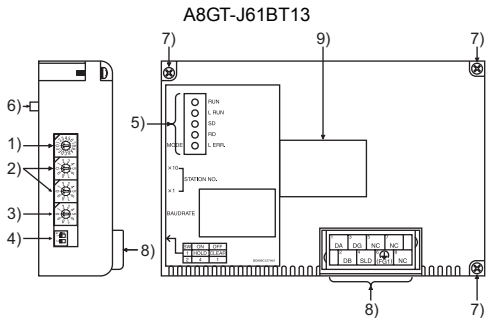


Number	Name	Description															
1)	Mode setting switch 	Used to set the operating status of the module. (Factory setting:0)															
		<table border="1"> <thead> <tr> <th>Number</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Online</td> <td>Data link enabled and automatic return made</td> </tr> <tr> <td>1</td> <td>(Reserved)</td> <td>-</td> </tr> <tr> <td>2</td> <td>Offline</td> <td>Disconnected from data link</td> </tr> <tr> <td>3 to F</td> <td>(Reserved)</td> <td>-</td> </tr> </tbody> </table>	Number	Name	Description	0	Online	Data link enabled and automatic return made	1	(Reserved)	-	2	Offline	Disconnected from data link	3 to F	(Reserved)	-
		Number	Name	Description													
		0	Online	Data link enabled and automatic return made													
		1	(Reserved)	-													
2	Offline	Disconnected from data link															
3 to F	(Reserved)	-															
2)	Station number setting switches 	Used to set the station number of the A8GT-J61BT13 between 1 and 64. (Factory setting: 01) Use "× 10" to set the tens. Use "× 1" to set the units.															
3)	Transmission baudrate setting switch 	Used to set the transmission speed of the module. (Factory setting:0)															
		<table border="1"> <thead> <tr> <th>Number to be Set</th> <th>Transmission Baudrate</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>156kbps</td> </tr> <tr> <td>1</td> <td>625kbps</td> </tr> <tr> <td>2</td> <td>2.5Mbps</td> </tr> <tr> <td>3</td> <td>5Mbps</td> </tr> <tr> <td>4</td> <td>10Mbps</td> </tr> <tr> <td>5 to 9</td> <td>Reserved (If the value you set is 5 to 9, the L.ERR LED is lit to indicate a communication error.)</td> </tr> </tbody> </table>	Number to be Set	Transmission Baudrate	0	156kbps	1	625kbps	2	2.5Mbps	3	5Mbps	4	10Mbps	5 to 9	Reserved (If the value you set is 5 to 9, the L.ERR LED is lit to indicate a communication error.)	
		Number to be Set	Transmission Baudrate														
		0	156kbps														
		1	625kbps														
		2	2.5Mbps														
		3	5Mbps														
4	10Mbps																
5 to 9	Reserved (If the value you set is 5 to 9, the L.ERR LED is lit to indicate a communication error.)																
4)	Condition setting switches 	Used to set the operational conditions. (Factory setting:OFF)															
		<table border="1"> <thead> <tr> <th rowspan="2">Number</th> <th rowspan="2">Setting Item</th> <th colspan="2">Switch Position</th> </tr> <tr> <th>ON</th> <th>OFF</th> </tr> </thead> <tbody> <tr> <td>SW1</td> <td>Input data status of faulty data link station</td> <td>Held</td> <td>Cleared</td> </tr> <tr> <td>SW2</td> <td>Number of occupied stations</td> <td>4 stations</td> <td>1 station</td> </tr> </tbody> </table>	Number	Setting Item	Switch Position		ON	OFF	SW1	Input data status of faulty data link station	Held	Cleared	SW2	Number of occupied stations	4 stations	1 station	
		Number			Setting Item	Switch Position											
			ON	OFF													
SW1	Input data status of faulty data link station	Held	Cleared														
SW2	Number of occupied stations	4 stations	1 station														

  
Number	Name	Description												
5)	Indicator LEDs 	Data link status can be conformed by the on/off statuses of the LEDs. <table border="1" data-bbox="373 165 933 569"> <thead> <tr> <th>LED Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>RUN LED</td> <td>On : Indicates that the module is normal. Off : Indicates a watchdog timer error.</td> </tr> <tr> <td>L RUN LED</td> <td>On : Indicates that communication is normal. Off : Indicates a communication break (time excess error).</td> </tr> <tr> <td>SD LED</td> <td>On : Indicates data transmission.</td> </tr> <tr> <td>RD LED</td> <td>On : Indicates data receive.</td> </tr> <tr> <td>L ERR. LED</td> <td>On : Indicates a communication data error (CRC error). Flicker : Indicates that any switch (1 to 4) position was changed while power is on. Off : Indicates that communication is normal.</td> </tr> </tbody> </table>	LED Name	Description	RUN LED	On : Indicates that the module is normal. Off : Indicates a watchdog timer error.	L RUN LED	On : Indicates that communication is normal. Off : Indicates a communication break (time excess error).	SD LED	On : Indicates data transmission.	RD LED	On : Indicates data receive.	L ERR. LED	On : Indicates a communication data error (CRC error). Flicker : Indicates that any switch (1 to 4) position was changed while power is on. Off : Indicates that communication is normal.
LED Name	Description													
RUN LED	On : Indicates that the module is normal. Off : Indicates a watchdog timer error.													
L RUN LED	On : Indicates that communication is normal. Off : Indicates a communication break (time excess error).													
SD LED	On : Indicates data transmission.													
RD LED	On : Indicates data receive.													
L ERR. LED	On : Indicates a communication data error (CRC error). Flicker : Indicates that any switch (1 to 4) position was changed while power is on. Off : Indicates that communication is normal.													
6)	Connector	Connector for connection to the GOT												
7)	Module fixing screws	Screws for installation to the GOT (M3 × 3 screw)												
8)	Terminal block 	Terminal block for cable connection (M3 × 8 screw)												
9)	Rating plate	-												
10)	Mounting screw	Mounting screw to be fixed with the GOT main unit												
11)	Interface connector	Connector connecting to GOT												
12)	Extension connector	Connector connecting with A8GT-J61BT13												

5. Installation Procedure


- (1) Power off the GOT.
- (2) Remove the two extension unit covers of the GOT.

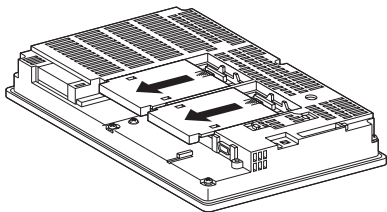


- (3) Fit the GT15-75IF900 along the groove of the GOT case.

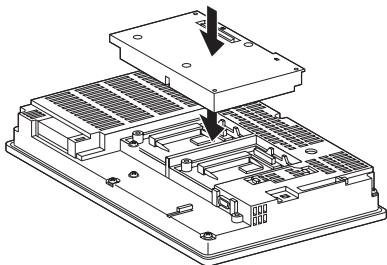


- (4) Fasten the GT15-75IF900 by tightening its mounting screws (3 places) with tightening torque 0.36 to 0.48 N•m.

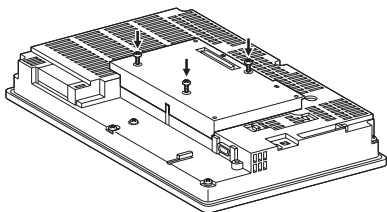


- (5) Attach the communication unit fixing brackets (3 places) to GT15-75IF900, then fasten them with tightening torque of 0.36 to 0.48 N•m.

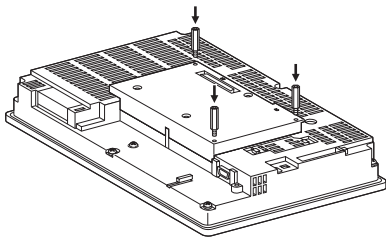

- (6) Mount the A8GT-J61BT13 to GT15-75IF900.

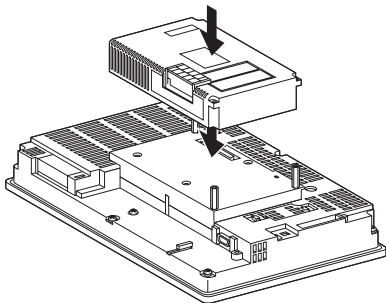


- (7) Fasten the unit fixing brackets (3 places) with tightening torque of 0.36 to 0.48N•m.

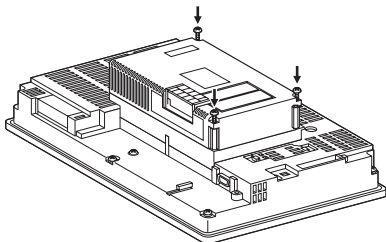

6. Wiring Method

The following diagram shows how to wire the GOT and CC-Link system modules.


- (1) Wiring the GOT and CC-Link system modules by CC-Link dedicated cable

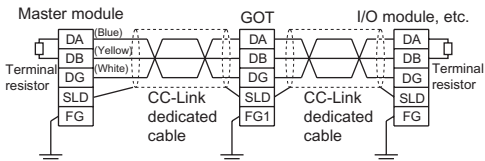

- (2) Connection of terminal resistor to the GOT

When connecting a terminal resistor to the GOT, always connect it in the following position.

The terminal resistor is contained in the package of the Master module.

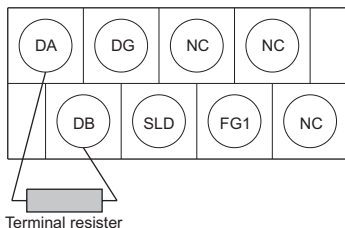


POINT


- Tighten terminal block terminal screws (M3 screw) with the tightening torque of 0.36 to 0.48N•m.
- Tighten terminal block mounting screws (M3.5 screw) with the tightening torque of 0.59 to 0.88N•m.
- The "terminal resistors" supplied with the Master module must be connected to the modules at both ends of data link. (Connect them across DA-DB.)
- Connect the shield wire of the CC-Link dedicated cable to "SLD" of each module.
Since "SLD" is connected to "FG/FG1" internally, always ground the FG terminal and FG1 terminal to the protective ground conductor.
- The FG terminal of the GOT power supply and the FG1 terminal of the A8GT-J61BT13 must be connected separately.

7. External Dimensions

(1) GT15-75IF900

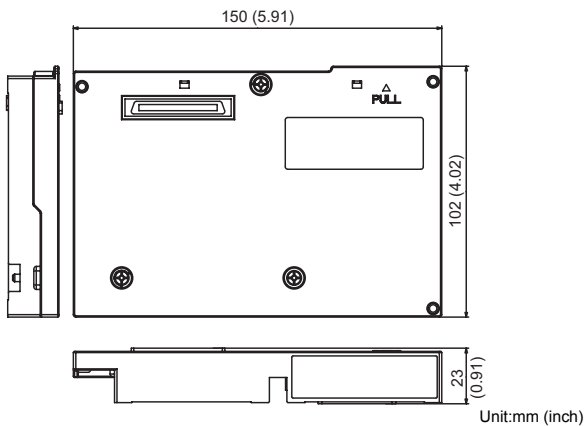

(2) A8GT-J61BT13

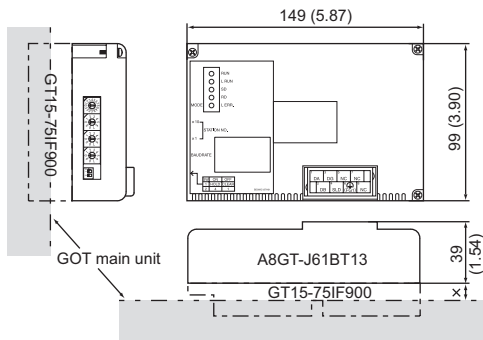

Dimensions of X when mounted to the GOT.

15", 12.1", 10.4"	13.5 (0.53)
8.4"	15.5 (0.61)

Unit:mm (inch)

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 Tel : +1-847-478-2100	Hong Kong	Ryoden Automation Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, HongKong Tel : +852-2887-8870
Brazil	MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Rua Correia Dias, 184, Edificio Paraiso Trade Center-8 andar Paraiso, Sao Paulo, SP Brazil Tel : +55-11-5908-8331	China	Ryoden Automation Shanghai Ltd. 3F Block5 Building Automation Instrumentation Plaza 103 Cao Bao Rd. Shanghai 200233 China Tel : +86-21-6120-0808
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0	Taiwan	Setsuyo Enterprise Co., Ltd. 6F., No.105 Wu-Kung 3rd.RD, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Herts., AL10 8XB,UK Tel : +44-1707-276100	Korea	HAN NEUNG TECHNO CO.,LTD. 1F Dong Seo Game Channel Bldg., 660-11, Deungchon-dong Kangseok-ku, Seoul, Korea Tel : +82-2-3660-9552
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo-Ingr.2 Via Paracelso 12, 20041 Agrate B., Milano, Italy Tel : +39-039-6053344	Singapore	Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building Singapore 159943 Tel : +65-6473-2308
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80 08190 Sant Cugat del Valles, Barcelona, Spain Tel : +34-93-565-3131	Thailand	F. A. Tech Co.,Ltd. 898/28,29,30 S.V.City Building,Office Tower 2, Floor 17-18 Rama 3 Road, Bangkokpang, Yannawa, Bangkok 10120 Tel : +66-2-682-6522
France	Mitsubishi Electric Europe B.V. French Branch 25 Boulevard des Bouvets, F-92741 Nanterre Cedex, France TEL: +33-1-5568-5568	Indonesia	P.T. Autoteknindo SUMBER MAKMUR Jl. Muara Karang Selatan Block a Utara No.1 Kav. No.11 Kawasan Industri/ Pergudangan Jakarta - Utara 14440 Tel : +62-21-663-0833
South Africa	Circuit Breaker Industries LTD. Tripswitch Drive, Elandsfontein Gauteng, South Africa Tel : +27-11-928-2000	India	Messung Systems Pvt.Ltd. Electronic Sadan NO:111 Unit No15, M.I.D.C BHOSARI, PUNE-411026, India Tel : +91-20-712-2807
		Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, PostalBag, No 2, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.
Printed in Japan on recycled paper.

HEADQUARTERS

MITSUBISHI ELECTRIC EUROPE B.V. **EUROPE**
 German Branch
 Gothaer Straße 8
D-40880 Ratingen
 Phone: +49 (0)2102 / 486-0
 Fax: +49 (0)2102 / 486-1120

MITSUBISHI ELECTRIC EUROPE B.V. **CZECH REPUBLIC**
 Czech Branch
 Radlická 714/113a
CZ-158 00 Praha 5
 Phone: +420 (0)251 551 470
 Fax: +420 (0)251-551-471

MITSUBISHI ELECTRIC EUROPE B.V. **FRANCE**
 French Branch
 25, Boulevard des Bouvets
F-92741 Nanterre Cedex
 Phone: +33 (0)1 / 55 68 55 68
 Fax: +33 (0)1 / 55 68 57 57

MITSUBISHI ELECTRIC EUROPE B.V. **IRELAND**
 Irish Branch
 Westgate Business Park, Ballymount
IRL-Dublin 24
 Phone: +353 (0)1 4198800
 Fax: +353 (0)1 4198890

MITSUBISHI ELECTRIC EUROPE B.V. **ITALY**
 Italian Branch
 Viale Colleoni 7
I-20041 Agrate Brianza (MI)
 Phone: +39 039 / 60 53 1
 Fax: +39 039 / 60 53 312

MITSUBISHI ELECTRIC EUROPE B.V. **SPAIN**
 Spanish Branch
 Carretera de Rubí 76-80
E-08190 Sant Cugat del Vallés (Barcelona)
 Phone: 902 131121 // +34 935653131
 Fax: +34 935891579

MITSUBISHI ELECTRIC EUROPE B.V. **UK**
 UK Branch
 Travellers Lane
UK-Hatfield, Herts. AL10 8XB
 Phone: +44 (0)1707 / 27 61 00
 Fax: +44 (0)1707 / 27 86 95

MITSUBISHI ELECTRIC CORPORATION **JAPAN**
 Office Tower "Z" 14 F
 8-12,1 chome, Harumi Chuo-Ku
Tokyo 104-6212
 Phone: +81 3 622 160 60
 Fax: +81 3 622 160 75

MITSUBISHI ELECTRIC AUTOMATION, Inc. **USA**
 500 Corporate Woods Parkway
Vernon Hills, IL 60061
 Phone: +1 847 478 21 00
 Fax: +1 847 478 22 53

EUROPEAN REPRESENTATIVES

GEVA **AUSTRIA**
 Wiener Straße 89
AT-2500 Baden
 Phone: +43 (0)2252 / 85 55 20
 Fax: +43 (0)2252 / 488 60

TEHNIKON **BELARUS**
 Oktyabrskaya 16/5, Off. 703-711
BY-220030 Minsk
 Phone: +375 (0)17 / 210 46 26
 Fax: +375 (0)17 / 210 46 26

Koning & Hartman b.v. **BELGIUM**
 Woluwelaan 31
BE-1800 Vilvoorde
 Phone: +32 (0)2 / 257 02 40
 Fax: +32 (0)2 / 257 02 49

INEA BH d.o.o. **BOSNIA AND HERZEGOVINA**
 Aleja Lipa 56
BA-71000 Sarajevo
 Phone: +387 (0)33 / 921 164
 Fax: +387 (0)33 / 524 539

AKHNATON **BULGARIA**
 4 Andrej Ljapchev Blvd. Pb 21
BG-1756 Sofia
 Phone: +359 (0)2 / 817 6004
 Fax: +359 (0)2 / 97 44 06 1

INEA CR d.o.o. **CROATIA**
 Losinjska 4 a
HR-10000 Zagreb
 Phone: +385 (0)1 / 36 940 - 01 / -02 / -03
 Fax: +385 (0)1 / 36 940 - 03

AutoCont C.S. s.r.o. **CZECH REPUBLIC**
 Technologická 374/6
CZ-708 00 Ostrava-Pustkovec
 Phone: +420 595 691 150
 Fax: +420 595 691 199

B:TECH A.S. **CZECH REPUBLIC**
 U Borové 69
CZ-58001 Havlíčkův Brod
 Phone: +420 (0)569 777 777
 Fax: +420 (0)569-777 778

Beijer Electronics A/S **DENMARK**
 Lykkegårdsvej 17, 1.
DK-4000 Roskilde
 Phone: +45 (0)46 / 75 76 66
 Fax: +45 (0)46 / 75 56 26

Beijer Electronics Eesti OÜ **ESTONIA**
 Pärnu mnt.160i
EE-11317 Tallinn
 Phone: +372 (0)6 / 51 81 40
 Fax: +372 (0)6 / 51 81 49

Beijer Electronics OY **FINLAND**
 Jaakonkatu 2
FIN-01620 Vantaa
 Phone: +358 (0)207 / 463 500
 Fax: +358 (0)207 / 463 501

UTEKO A.B.E.E. **GREECE**
 5, Mavrogenous Str.
GR-18542 Piraeus
 Phone: +30 211 / 1206 900
 Fax: +30 211 / 1206 999

MELTRADE Ltd. **HUNGARY**
 Fertő utca 14.
HU-1107 Budapest
 Phone: +36 (0)1 / 431-9726
 Fax: +36 (0)1 / 431-9727

Beijer Electronics SIA **LATVIA**
 Vestienas iela 2
LV-1035 Riga
 Phone: +371 (0)784 / 2280
 Fax: +371 (0)784 / 2281

Beijer Electronics UAB **LITHUANIA**
 Savanoriu Pr. 187
LT-02300 Vilnius
 Phone: +370 (0)5 / 232 3101
 Fax: +370 (0)5 / 232 2980

EUROPEAN REPRESENTATIVES

INTEHSIS srl **MOLDOVA**
 bld. Traian 23/1
MD-2060 Kishinev
 Phone: +373 (0)22 / 66 4242
 Fax: +373 (0)22 / 66 4280

Koning & Hartman b.v. **NETHERLANDS**
 Haarlerbergweg 21-23
NL-1101 CH Amsterdam
 Phone: +31 (0)20 / 587 76 00
 Fax: +31 (0)20 / 587 76 05

Beijer Electronics AS **NORWAY**
 Postboks 487
NO-3002 Drammen
 Phone: +47 (0)32 / 24 30 00
 Fax: +47 (0)32 / 84 85 77

MPL Technology Sp. z o.o. **POLAND**
 Ul. Krakowska 50
PL-32-083 Balice
 Phone: +48 (0)12 / 630 47 00
 Fax: +48 (0)12 / 630 47 01

Sirius Trading & Services srl **ROMANIA**
 Aleea Lacul Morii Nr. 3
RO-060841 Bucuresti, Sector 6
 Phone: +40 (0)21 / 430 40 06
 Fax: +40 (0)21 / 430 40 02

Craft Con. & Engineering d.o.o. **SERBIA**
 Bulevar Svetog Cara Konstantina 80-86
SER-18106 Nis
 Phone: +381 (0)18 / 292-24-4/5
 Fax: +381 (0)18 / 292-24-4/5

INEA SR d.o.o. **SERBIA**
 Izletnicka 10
SER-113000 Smederevo
 Phone: +381 (0)26 / 617 163
 Fax: +381 (0)26 / 617 163

AutoCont Control s.r.o. **SLOVAKIA**
 Radlinského 47
SK-02601 Dolny Kubin
 Phone: +421 (0)43 / 5868210
 Fax: +421 (0)43 / 5868210

CS MTrade Slovensko, s.r.o. **SLOVAKIA**
 Vajanského 58
SK-92101 Piestany
 Phone: +421 (0)33 / 7742 760
 Fax: +421 (0)33 / 7735 144

INEA d.o.o. **SLOVENIA**
 Stegne 11
SI-1000 Ljubljana
 Phone: +386 (0)1 / 513 8100
 Fax: +386 (0)1 / 513 8170

Beijer Electronics AB **SWEDEN**
 Box 426
SE-20124 Malmö
 Phone: +46 (0)40 / 35 86 00
 Fax: +46 (0)40 / 35 86 02

Econotec AG **SWITZERLAND**
 Hinterdorfstr. 12
CH-8309 Nürensdorf
 Phone: +41 (0)44 / 838 48 11
 Fax: +41 (0)44 / 838 48 12

GTS **TURKEY**
 Darülaceze Cad. No. 43 KAT. 2
TR-34384 Okmeydanı-Istanbul
 Phone: +90 (0)212 / 320 1640
 Fax: +90 (0)212 / 320 1649

CSC Automation Ltd. **UKRAINE**
 15, M. Raskova St., Fl. 10, Office 1010
UA-02002 Kiev
 Phone: +380 (0)44 / 494 33 55
 Fax: +380 (0)44 / 494-33-66

EURASIAN REPRESENTATIVES

Kazpromautomatics Ltd. **KAZAKHSTAN**
 Mustafina Str. 7/2
KAZ-470046 Karaganda
 Phone: +7 7212 / 50 11 50
 Fax: +7 7212 / 50 11 50

CONSUS **RUSSIA**
 Promyshlennaya st. 42
RU-198099 St. Petersburg
 Phone: +7 812 / 325 36 53
 Fax: +7 812 / 325 36 53

ELECTROTECHNICAL SYSTEMS **RUSSIA**
 Derbenevskaya st. 11A, Office 69
RU-115114 Moscow
 Phone: +7 495 / 744 55 54
 Fax: +7 495 / 744 55 54

ELEKTROSTILY **RUSSIA**
 Rubzovskaja nab. 4-3, No. 8
RU-105082 Moscow
 Phone: +7 495 / 545 3419
 Fax: +7 495 / 545 3419

NPP "URALELEKTRA" **RUSSIA**
 Sverdlova 11A
RU-620027 Ekaterinburg
 Phone: +7 343 / 353 2745
 Fax: +7 343 / 353 2461

MIDDLE EAST REPRESENTATIVES

ILAN & GAVISH Ltd. **ISRAEL**
 24 Shenkar St., Kiryat Arie
IL-49001 Petah-Tiqva
 Phone: +972 (0)3 / 922 18 24
 Fax: +972 (0)3 / 924 0761

AFRICAN REPRESENTATIVE

CBI Ltd. **SOUTH AFRICA**
 Private Bag 2016
ZA-1600 Isando
 Phone: +27 (0)11 / 928 2000
 Fax: +27 (0)11 / 392 2354