

BCN-P5817-D(1703)KWIX

Q80BD-J61BT11 Q81BD-J61BT11

Before Using the Product

Before using the product, please read this manual. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

■ Relevant manuals

Before using the product, please read the following manual.

- Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B)

SH-080527ENG (13JR77)

Confirm the following descriptions:

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- WARRANTY

Please develop familiarity with the functions and performance of the product to handle the product correctly.

The manual is stored in the "Manual" folder on the included CD-ROM.

■ *Manuels correspondants*

Avant d'utiliser le produit, prière de consulter le manuel suivant.

- Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B)

SH-080527ENG (13JR77)

Respecter les points suivants:

- PRÉCAUTIONS DE SÉCURITÉ
- CONDITIONS D'UTILISATION DE PRODUIT
- DIRECTIVES CEM ET BASSE TENSION
- GARANTIE

■ Packing list

Check that the following items are included in the package of the product.

Item	Quantity
Board	1
Terminating resistor 110Ω, 1/2W (brown, brown, brown) ^{*1}	2
Terminating resistor 130Ω, 1/2W (brown, orange, brown) ^{*1}	2
Before Using the Product (this manual)	1
Software package (CD-ROM)	1
Software license agreement	1

^{*1} Terminal resistors are required for stations at both ends of network in the CC-Link system. For details on a terminal resistor, refer to the related manual described above.

■ Operating ambient temperature

Use the product within the range of 0 to 55°C.

■ *Température ambiante de fonctionnement*

Ce produit doit être utilisé entre 0 et 55°C.

■ Information and services

For further information and services, please consult your local Mitsubishi representative.