

MITSUBISHI

MELSOFT

FR Configurator SW3

INSTRUCTION MANUAL



INVERTER SETUP SOFTWARE

FR-SW3-SETUP-WE

-Windows®(English) Version-

OUTLINE

1

**WHEN USING FOR
THE FIRST TIME**

2

SETTING WIZARD

3

FUNCTION

4

**TROUBLE
INDICATION**

5

INTRODUCTION

Thank you for choosing this Mitsubishi Inverter Setup Software.

This instruction manual gives handling information and precautions for use of this software. Incorrect handling might cause an unexpected fault. Before using the software, please read this manual carefully to use the software to its optimum performance.

Please forward this manual to the end user.

When reading this manual, note the following.

- This manual is written on the basis that Windows® XP (English version) is the operating system.
- Drive D is described as the CD-ROM drive and Drive C as the hard disk drive.

Trademarks

- Microsoft Windows and Excel are registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

(1) The formal name of Windows® 2000 is Microsoft Windows® 2000 operating system.

(2) The formal name of Windows® XP is Microsoft Windows® XP operating system.

- "FR Configurator" is a registered trademark of Mitsubishi Electric Corporation.

The copyright and other rights of this software all belong to Mitsubishi Electric Corporation.

- No part of this manual may be copied or reproduced without the permission of Mitsubishi Electric Corporation.
- Other company and product names herein are the trademarks and registered trademarks of their respective owners.
- SPREAD
Copyright 2004 FarPoint Technologies, Inc..
- Visual Combo
Copyright 2006 MCOR Co., Ltd



For Maximum Safety

- This product has not been designed or manufactured for use with any equipment or system operated under life-threatening conditions.
- Please contact our sales office when you are considering using this product in special applications such as passenger mobile, medical, aerospace, nuclear, power or undersea relay equipment or system.
- Although this product was manufactured under conditions of strict quality control, you are strongly advised to install safety devices to prevent serious accidents when it is used in facilities where breakdowns of the product are likely to cause a serious accident.

—CONTENTS—

1	OUTLINE	1
1.1	Before Using This Software	2
1.1.1	Packing Confirmation	2
1.2	System Configuration	3
1.2.1	System Requirement	3
1.2.2	Compatible inverters	3
1.2.3	System configuration	4
1.3	Installation and Uninstallation	5
1.3.1	Installation of FR Configurator	5
1.3.2	Uninstallation of FR Configurator	8
1.4	Connection and Parameter Setting	9
1.4.1	Connection Method	9
1.4.2	Connection using USB connector	11
1.4.3	Connection using PU connector	14
1.4.4	Connection of multiple inverters using RS-485 terminal	16
1.4.5	Connection through GOT (FA transparent function)	18
1.5	Setting of Operation Mode of the Inverter	21
1.5.1	Operation mode setting	21
1.6	Start and Close	23
1.6.1	Starting FR Configurator	23
1.6.2	Start flow of FR Configurator	24
1.6.3	Closing FR Configurator	25
1.7	Explanation of Window	26
1.7.1	Main frame	26
1.7.2	Navigation area	28
1.7.3	System area	29
1.7.4	Monitor area	30
1.7.5	Menu and Tool bar	31
1.7.6	Status bar	33
1.7.7	Communication manager	33
2	WHEN USING FOR THE FIRST TIME	35
2.1	Startup	36
2.2	Easy Setup	37
2.2.1	System Property	38
2.2.2	Communication Setting	39

2.2.3	Inverter Setting Method	41
2.2.4	Automatic Detection	42
2.2.5	Model Setting.....	43
2.2.6	Inverter Selection.....	44
2.2.7	Control Method	45
2.2.8	Motor setting	46
2.2.9	Start Command and Frequency (Speed) Setting Method	47
2.2.10	Parameter List	48

3 SETTING WIZARD 49

3.1	Overview of Setting Wizard	50
3.1.1	Function outline	50
3.1.2	Individual setting window of Setting Wizard	51
3.1.3	Parameter List	52
3.2	Details of Setting Wizard.....	53
3.2.1	Acceleration/Deceleration Pattern and Time Setting	53
3.2.2	Output Terminal(FM, AM) Calibration.....	54
3.2.3	Analog Input Terminal Calibration	55
3.2.4	Tuning.....	57
3.3	Troubleshooting.....	59
3.3.1	Function Outline	59
3.3.2	Status Display.....	60
3.3.3	Cause Estimate	61
3.3.4	Parameter Setting.....	62
3.4	Details of troubleshooting.....	63
3.4.1	Motor does not rotate as commanded	63
3.4.2	Motor does not rotate, or motor rotation direction does not change	64
3.4.3	Motor coasts	66
3.4.4	Motor current is large.....	67
3.4.5	Acceleration/deceleration is not as commanded	68
3.4.6	External device (peripherals) malfunctions.....	69
3.4.7	Operation mode does not change	70
3.4.8	Unable to write parameter setting.....	73
3.4.9	Unable to communicate	75

4 FUNCTION 77

4.1	Model Setting.....	78
------------	---------------------------	-----------

4.2	Options	79
4.2.1	Communication.....	79
4.2.2	Preferences	80
4.3	File Management and Print.....	81
4.3.1	Type of files	81
4.3.2	Open	81
4.3.3	Save.....	81
4.3.4	Data import and export (File input and output)	82
4.3.5	Print	83
4.4	Test Operation (Navigation area).....	84
4.4.1	Test Operation screen	84
4.4.2	Indication of inverter frequency and fault.....	85
4.4.3	Indication of operation mode and switching.....	85
4.4.4	Setting of running frequency (speed, machine speed)	86
4.4.5	Sending of forward/reverse rotation command.....	87
4.5	System View (Navigation area)	88
4.5.1	System Setting.....	89
4.5.2	Setting Wizard	90
4.6	Parameter List (System area).....	91
4.6.1	Explanation of screen	92
4.6.2	Parameter List Display Format	93
4.6.3	Parameter clear and all parameter clear	95
4.6.4	Read (Batch Read), Write (Batch Write) and Verification.....	96
4.6.5	Edit Individual List.....	97
4.6.6	Parameter Search.....	97
4.7	Convert (System area)	98
4.7.1	Convert image	99
4.7.2	Explanation of window	100
4.7.3	Example of converting	101
4.7.4	Precautions for Convert.....	107
4.8	Diagnosis (System area).....	108
4.8.1	Explanation of window	108
4.8.2	Procedure of Main circuit capacitor life measuring.....	109
4.9	Graph (Monitor area).....	110
4.9.1	Basic flow of Sampling.....	111
4.9.2	Explanation of window	112
4.9.3	Sampling item setting	113
4.9.4	Sampling setting	115
4.9.5	Trigger setting.....	117

4.9.6	Scale changing	119
4.9.7	Cursor Function	120
4.9.8	History display	121
4.9.9	Example of Graph sampling (monitoring Output Frequency, terminal RUN, terminal FU)	122
4.10	Batch Monitor (Monitor Area).....	125
4.11	I/O Terminal Monitor (Monitor Area)	126
4.12	I/O Terminal Assignment.....	127
4.13	Help.....	128
4.13.1	Help	128
4.13.2	Version Information	130

5 TROUBLE INDICATION 131

5.1	Error Code.....	132
5.1.1	Communication error with inverter.....	132
5.1.2	Communication error when connected through GOT	136
5.1.3	Other error (Task busy)	138
5.2	Error Display on a Dialog.....	139

<Abbreviations>

- **PU:** Operation panel and parameter unit (FR-PU04, FR-PU07)
- **Inverter:** Mitsubishi inverter
- **FR-E700:** Mitsubishi inverter FR-E700 series
- **Pr. :** Parameter number
- **PU operation:** Operation using the PU (FR-PU04/FR-PU07)
- **External operation:** Operation using the control circuit signals
- **Combined operation:** Operation using the PU (FR-PU04/FR-PU07) and external operation
- **Standard motor:** SF-JR
- **Constant torque motor:** SF-HRCA

<Mark>



REMARKS: Additional helpful contents and relations with other functions are written.



Note: Contents requiring caution or cases when set functions are not activated are written.



POINT: Useful contents and points are written.



: Indicates a button displayed in a window.



: Indicates a tab displayed in a window.

[]: Indicates a menu selected from menu bar.

" ": Indicates a title name of a window.

1 OUTLINE

This chapter explains the "OUTLINE" for use of this product.
Always read the instructions before using the software.

1.1	Before Using This Software	2
1.2	System Configuration.....	3
1.3	Installation and Uninstallation	5
1.4	Connection and Parameter Setting	9
1.5	Setting of Operation Mode of the Inverter	21
1.6	Start and Close.....	23
1.7	Explanation of Window	26

1

2

3

4

5

1.1 Before Using This Software

- This software is an effective support tool for startup and maintenance of the Mitsubishi transistorized inverter. The following functions can be performed efficiently on the personal computer.
 - Startup (Desired function can be performed soon after starting up of this software)
 - Easy Setup (From station number to parameter setting, setting with wizard style dialog (interactive) is available)
 - Setting Wizard (Function setting without regard to parameter number)
 - Tuning (Available from Setting wizard)
 - Troubleshooting (Estimating cause and counter measure at trouble occurrence)
 - Parameter List (Displaying of parameter list, functional list, initial value change list and editing of the parameters is available)
 - Convert (Converting a parameter setting of the conventional model into FR-E700 parameter setting)
 - Diagnosis (Displaying faults history and parts life, and measuring main circuit capacitor life)
 - Graph (Monitoring by High Speed sampling or Monitor sampling, and displays in graph form)
 - Batch Monitor (Displaying monitor items of the inverter at the same time)
 - I/O Terminal Monitor (Monitoring the state of input and output terminal)
 - I/O Terminal Assignment (Signal assignment of input and output terminal)
 - Test Operation (Send a start/stop command, or change the set frequency as if using the operation panel of the inverter)
 - Help (Instruction manual of the inverter and this software can be displayed in a window)



Note

- If a file name or folder name is using Unicode, system file writing or reading may not be performed correctly. Please use a file name and folder name without Unicode.
- The following functions of Windows® XP are not compatible with this software.
 - Application starting with Windows® compatibility mode
 - Starting using "Run As..."
 - Remote Desktop
- A part of this software is using a function of Internet Explorer. This software may not function properly depending on Internet Explorer setting. For example, if the user assistant is set in "Option", file opening or selecting function in "Startup" window may become unavailable. Please change the Internet Explorer setting into a default setting, or select the desired function from a main screen of the FR Configurator.
- FR Configurator is not available when inverter is activated with FR-PU07BB Battery mode. FR Configurator may not function properly.

1.1.1 Packing Confirmation

After unpacking, check that the following items are contained in the package:

Item	Quantity
CD-ROM	1
Install Manual	1

1.2 System Configuration

1.2.1 System Requirement

Components	Description *1	
Personal computer *2	IBM PC/AT compatible machine with CD-ROM drive (for installation), USB port or RS-232C port	
	OS	Windows® XP Professional SP2 or later, Windows® XP Home Edition SP2 or later, Windows® 2000 Professional SP4 or later
	Processor	Pentium® 133MHz or more (Windows® 2000 Professional) Pentium® 300MHz or more (Windows® XP Professional, Windows® XP Home Edition)
	Memory	32MB or more (Windows® 2000 Professional) 128MB or more (Windows® XP Professional, Windows® XP Home Edition)
	Hard disk	Free area of 50MB or more
Software	Internet Explorer 5.0 or more	
Display	Applicable to display at resolution of 1024 x 768 or more, and 256 colors or more. Compatible with the above PC.	
Keyboard	Compatible with the above PC.	
Mouse	Compatible with the above PC.	
Printer	Compatible with the above PC.	

*1 Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Pentium is a registered trademark of Intel Corporation.

*2 FR Configurator may not function properly depending on PC used.


1.2.2 Compatible inverters

FR Configurator is compatible with the following inverters.

- FR-E700 series

1.2.3 System configuration

The following devices are required to use FR Configurator. Setup the system in accordance with the instruction manuals of each devices.

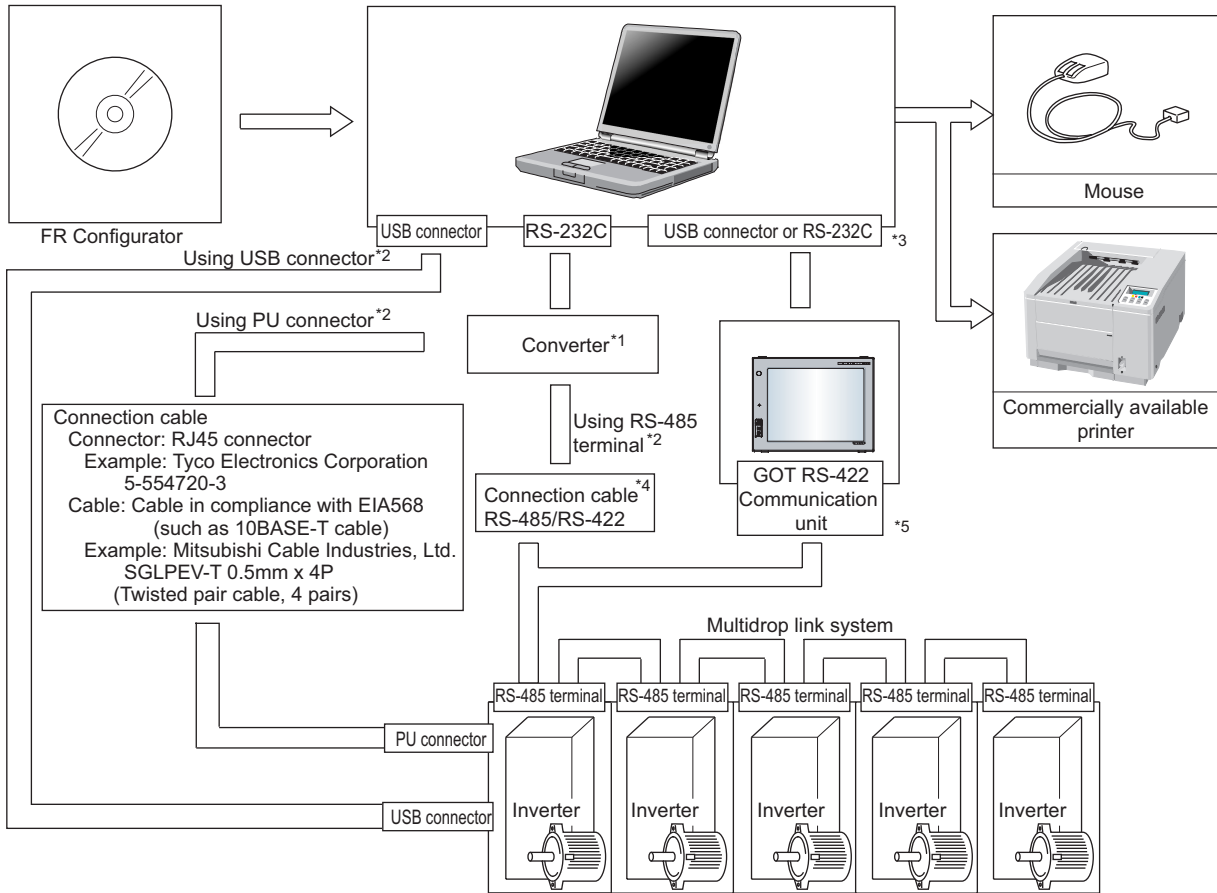

- *1: When using RS-232C of a personal computer, a commercially available converter is required.
Examples of product available on the market (as of September, 2006)
Model: DINV-CABV (with connectors and cable)
Diatrend Corp.
The converter cable cannot connect two or more inverters (the computer and inverter are connected on a 1:1 basis). Since the product is packed with the RS-232C cable and RS-485 cable (10BASE-T cable + RJ-45 connector), the cable and connector need not be prepared separately. Contact a maker for details of the product.
- *2: Communication with PU connector, RS-485 terminal, or USB connector is available.
(Refer to the instruction manual for details.)


- *3: Available communication port is USB or RS-232C (one of port 1 to 63), and set in Communication settings screen of the FR Configurator. (Using multiple port at the same time is unavailable) Connection of a computer to GOT is 1:1 connection.
- *4: Overall length of connection cable: 500m
- *5: GOT RS-422 communication unit (GT15-RS4-9S) is required.
Refer to GOT1000 series connection manual for details of RS-422 connection and compatible version of GOT.
Up to 10 inverters can be connected with RS-422 connection. Inverter station number can be set from 0 to 31 range.

1.3 Installation and Uninstallation

1.3.1 Installation of FR Configurator

To use the Configurator (FR-SW3-SETUP-WE), the files included in the setup disk (CD-ROM) or downloaded file must be installed onto the personal computer.

Check following items before the installation.

- Close any other applications that have already been started.
- For the installation, log on as an administrator (Administrator account) and start installation.
- If an inverter is connected by the USB cable, disconnect the USB cable.
- If the following window is displayed during the installation, click  to continue the installation.



- Installation files are compressed. FR Configurator does not function with just copying the installation files. Please install the software with using the installation program.
- To install the software, follow the installation procedure in Windows screen.
- If VFD Setup Software (FR-SW1-SETUP-WE) of an older version (CD-ROM) is installed after the installation of FR Configurator, FR Configurator does not function. In this case, please uninstall FR Configurator (*Refer to page 8*), and then install FR Configurator again.
- If the older version of FR Configurator has been installed, the older version will be uninstalled during the installation.

Installation procedure

 
The following describes the procedures of installing FR Configurator.

- (1) Insert the CD-ROM to an available CD-ROM drive. Installation starts automatically.





REMARKS


Installation can be started with double-clicking the icon of CD-ROM drive or the following procedure.


- 1) Choose the [Run...] command from [Start] menu.
- 2) "Run" window appears.
- 3) Type "D:\SETUP" (with one-byte characters) in "Open" field and click . (When CD-ROM drive is D drive)

 - (2) The window shown on the right is displayed. Click

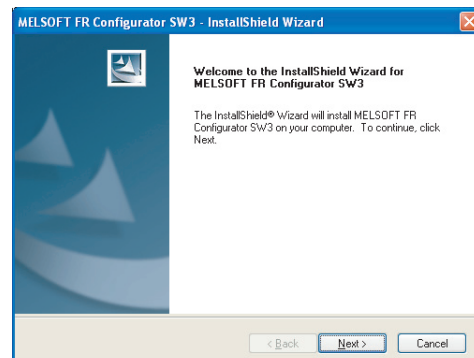

(3) The window shown on the right is displayed.


Click  .

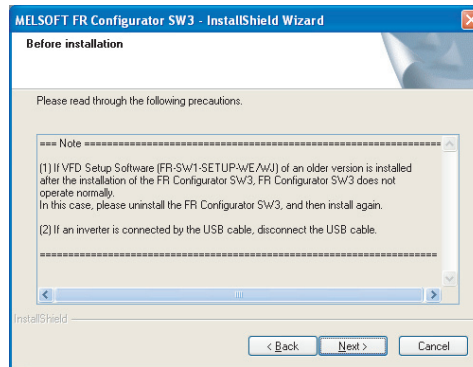



(4) Enter user name and company name.

Click  after entering.


 
(User name and company name is required to proceed to the next step.)

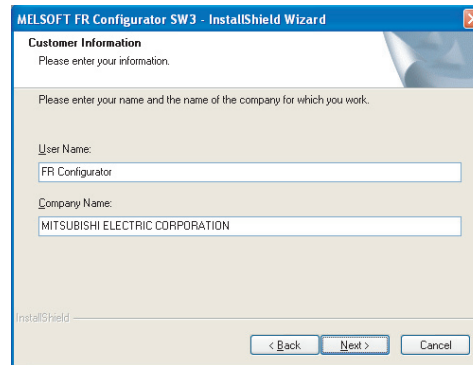


(5) Check the installation folder and click  .


To change the installation folder, click  and select the installation folder. A new folder "invsup3" is created at the selected installation folder. This software is installed in there.


(If the installation folder is not changed, the software is installed at "C:\Program Files\MELSOFT\invsup3_e")

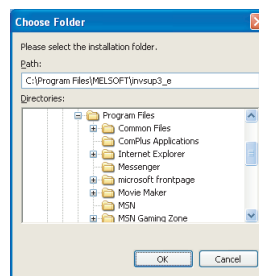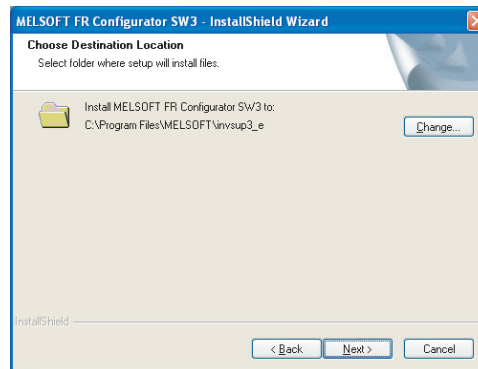


(6) Review the installation setting, and click


 .

To change the setting, click  , and correct the setting.

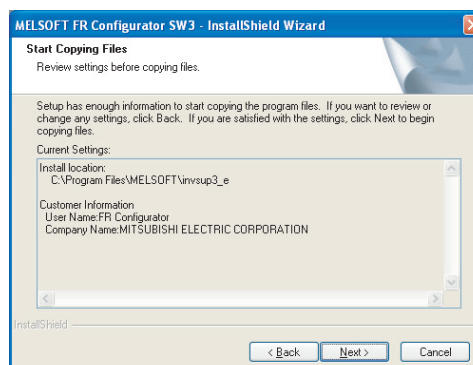

(7) Installation is completed.

Click  to close the window. Restart the personal computer before using the software.

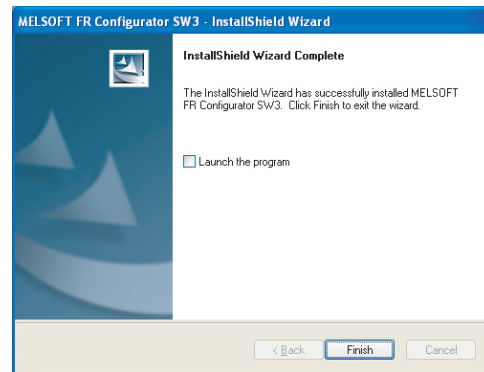

(8) A shortcut is created in [Start] menu of Windows after installation is completed.




REMARKS

- If the user is not an administrator (Administrator account) with Windows XP/2000 OS, the installation cannot be made. Log in as a user with administrator permission, and start the installation again.


1.3.2 Uninstallation of FR Configurator

Open the [Start] menu of Windows, and then click [Control panel]. Click "Add or Remove Programs" in the "Control panel" window.

When "Add or Remove Programs" window is displayed, select "MELSOFT FR Configurator SW3" and click to start uninstallation.

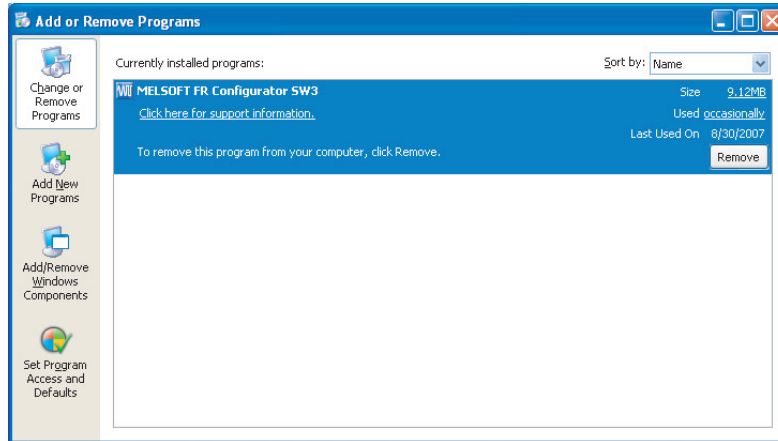


Click , and a following dialog appears.

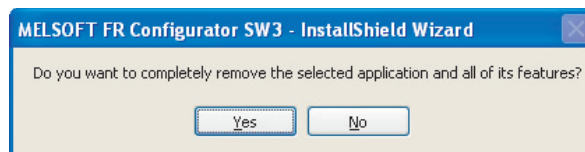

Click to proceed the uninstallation. (Click to cancel the uninstallation.)

A following window is displayed when the uninstallation is completed. Click to close the window.

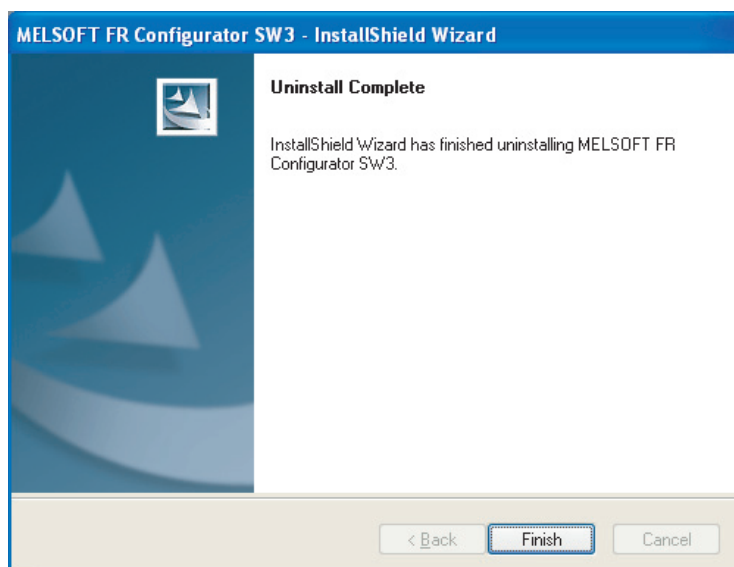

Note

Uninstallation is unavailable while the application is running. Perform the uninstallation after closing the application.


1.4 Connection and Parameter Setting

1.4.1 Connection Method

For FR Configurator, communication with USB connector or PU connector is available. Serial communication (PU connector) is the default setting.


(1) USB connection *(Refer to page 11)*

Connect to USB connector of the inverter. 1:1 connection is supported. Connection with using USB hub is not supported.

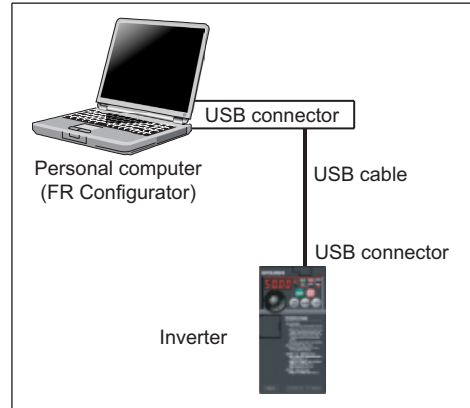


(2) Serial communication using PU connector *(Refer to page 14)*

Connect to PU connector of the inverter. RS-232C/RS-485 converter (cable) is required.

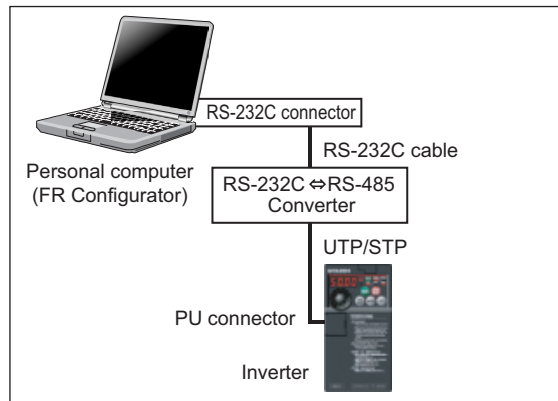


(3) Serial communication using RS-485 terminal *(Refer to page 16)*

Connected to RS-485 terminal of the inverter. Up to 32 inverters can be connected. (FR-E700 series requires RS-485 terminal block (Control terminal option FR-E7TR))

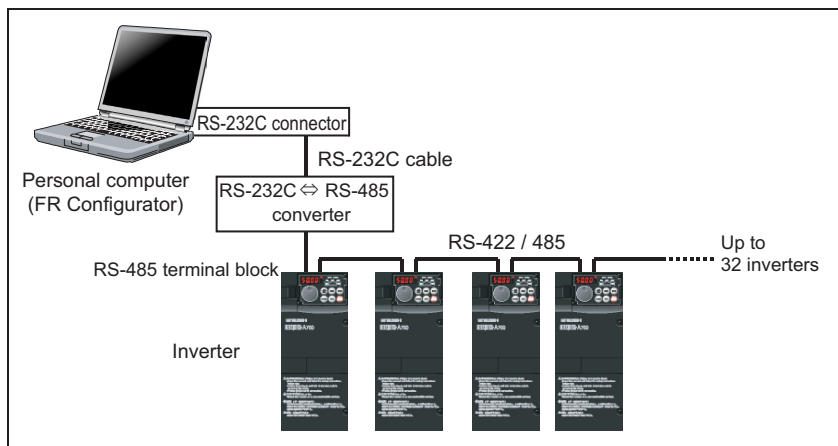

(4) Communication through GOT (USB / Serial communication) (Refer to page 18)

Connect to RS-485 terminal through GOT (Display). Up to 10 inverters can be connected when using RS-485 terminal. RS-422 communication unit is necessary for GOT.

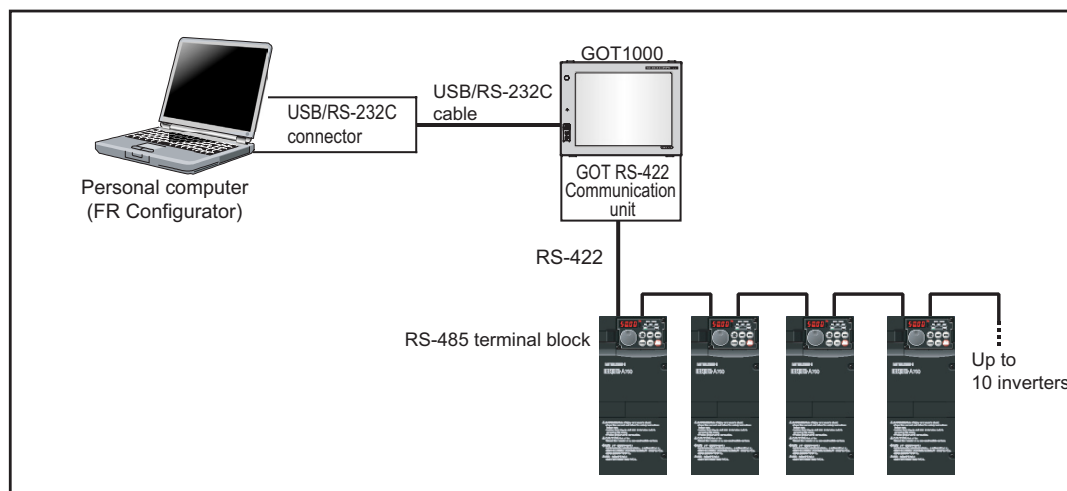


Note

- Taking out and putting in the USB cable when FR Configurator is working may cause the inverter not to be recognized. Perform taking out and putting the USB cable for some times, or perform inverter reset (reset GOT when communication through GOT) with the USB cable connected to PC.

1.4.2 Connection using USB connector

A personal computer and inverter can be easily connected with one USB cable. 1:1 connection is supported. Connection with using USB hub is not supported.

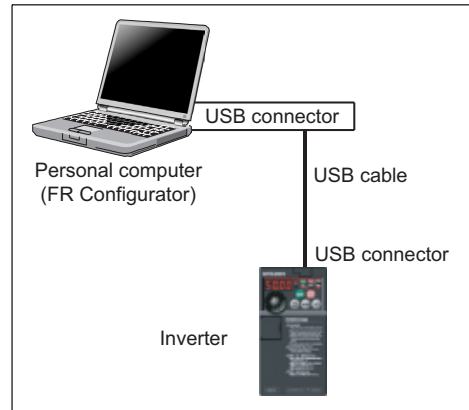


REMARKS

Multiple connection with USB connector is not supported. (Connection of a computer to the inverter is 1:1 connection.) Also noted that USB HUB is not supported.

(1) Cable

Interface	Conforms to USB1.1	
Transmission Speed	12Mbps	
Wiring Length	Maximum 5m	
Connector	FR-E700	USB mini B-connector (receptacle mini B type)
Power supply	Self-power supply	

Example of FR-E700

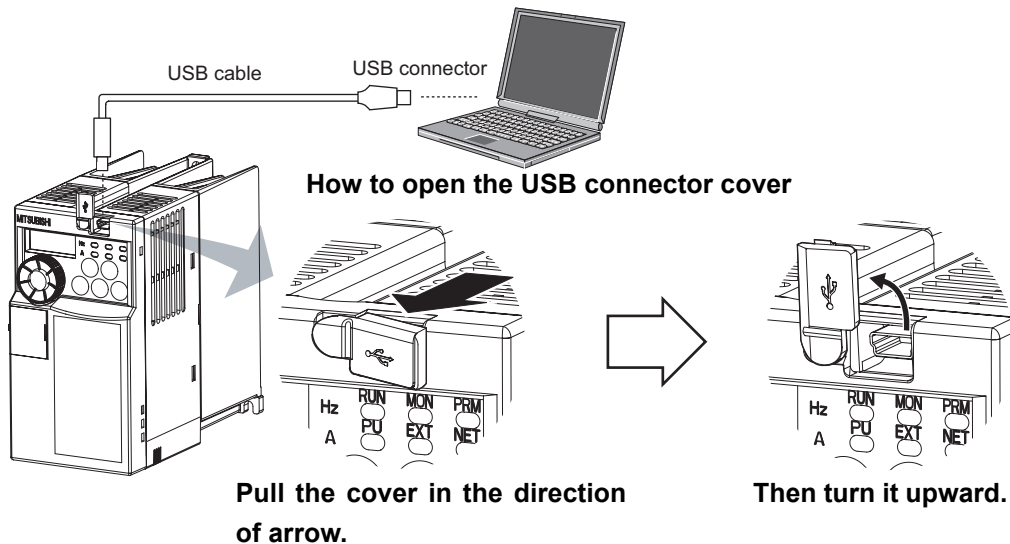

REMARKS

•Recommended USB cable for computer-inverter connection (For FR-E700)

	Type	Specifications	
Recommended USB cable	MR-J3USBCBL3M Cable length 3m	Connector for inverter mini B-connector (5 pin)	Connector for personal computer A-connector

(2) Related parameters for USB connection

Set the following communication parameter when connecting USB connector of the inverter. When performing parameter writing or run command input, set the following command source parameters, and switch the operation mode to PU operation mode.

Inverter	Parameter Setting		Operation Mode
	Communication Parameter	Command Source Parameter	
FR-E700	<i>Pr. 548 USB communication check time interval</i> ≠ 0 (initial value 9999)	Initial value	PU



REMARKS

- Switching of the operation mode is available at "Test Operation" window (*Refer to page 84*) in Navigation area.
- Set 3s or more (or 9999) in *Pr. 548 USB communication check time interval*.
- Set the station number of the each inverters in *Pr. 547 USB communication station number*. Perform inverter reset after setting the parameter.

Parameter Number	Name	Initial Value	Setting Range	Description
547	USB communication station number	0	0 to 31	Inverter station number specification
548	USB communication check time interval	9999	0	USB communication is possible. Trips in the PU operation mode (E.USB)
			0.1 to 999.8.0s	Sets the interval of communication check time. If a no-communication state persists for longer than the permissible time, the inverter will come to trip (E.USB).
			9999	No communication check
551*1	PU mode operation command source selection	FR-E700 : 9999	2	Selects the PU connector as the PU operation mode command source.
			3	Selects the USB connector as the PU operation mode command source.
			4	Selects the operation panel as the PU operation mode command source.
			9999	USB automatic recognition Normally, operation panel is the command source. When the parameter unit is connected to the PU connector, PU is valid. When USB is connected, USB is the command source.

*1 *Pr. 551* is always write-enabled.



 
Note

- Always reset the inverter after making the setting of the parameters. After you have changed the communication-related parameters, communication cannot be made until the inverter reset.


(3) When connecting USB for the first time


If a personal computer and inverter are connected via USB for the first time with the inverter power ON, "Found New Hardware Wizard" window is displayed.


The following additional wizard is displayed for Windows XP only. For Windows 2000, inverter is automatically detected.



1) Check "No, not this time", and click  .




2) Check "Install the software automatically (Recommended)" and click  .

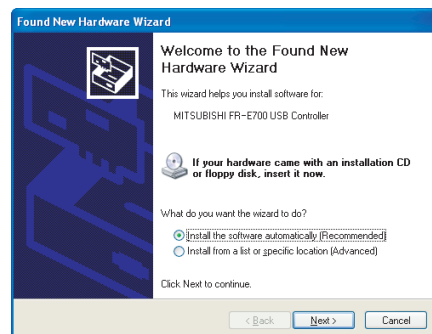


3) If the screen shown on the right is displayed when using Windows XP, click  to proceed the installation.

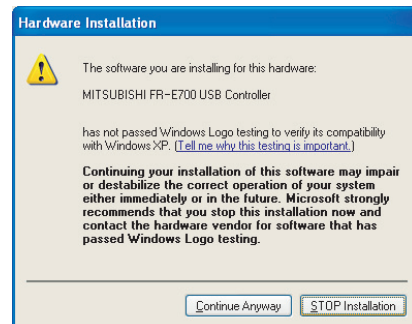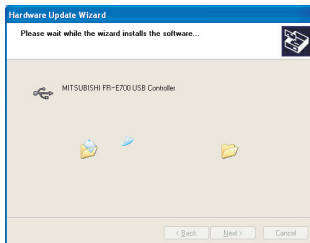

 4) The installation of the driver is completed.

Click  to close the window.

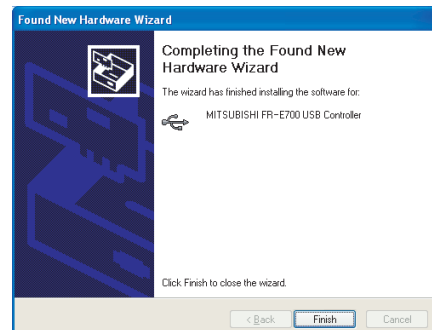


(Example of FR-E700)

1

OUTLINE



1.4.3 Connection using PU connector

PU connector is used for connecting with RS-232C port of a computer. RS-232C/RS-485 converter (cable) is required. 1:1 connection is supported.

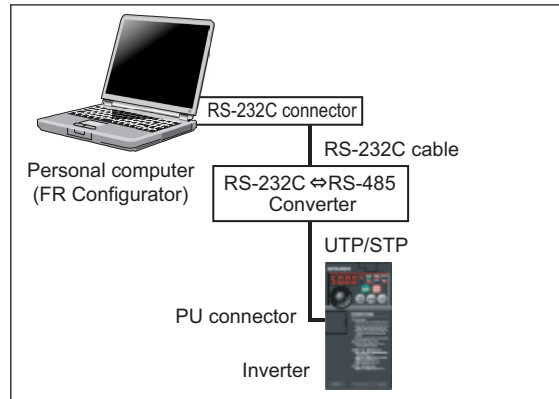

(1) PU connector pin-outs

Example of FR-E700

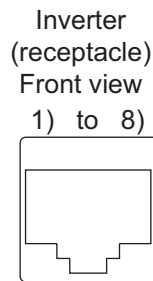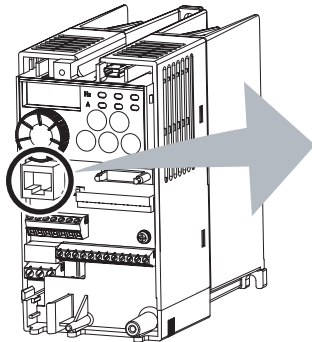

Pin Number	Name	Description
1)	SG	Earth (Ground) (Connected to terminal 5)
2)	—	Operation panel power supply
3)	RDA	Inverter receive+
4)	SDB	Inverter send-
5)	SDA	Inverter send+
6)	RDB	Inverter receive-
7)	SG	Earth (Ground) (Connected to terminal 5)
8)	—	Operation panel power supply



REMARKS

- Refer to the following when fabricating the cable on the user side.
Commercially available product example (as of November, 2006)

Product Name	Type	Maker
10BASE-T cable	SGLPEV-T 0.5mm x 4P *1	Mitsubishi Cable Industries, Ltd.
RJ-45 connector	5-554720-3	Tyco Electronics Corporation

*1 Do not use pins No. 2, 8 of the 10BASE-T cable.

- Distributor is necessary when connecting multiple inverters.
Refer to the inverter manual for connecting multiple inverters.



Note

- Pins No. 2 and 8 provide power to the operation panel or parameter unit. Do not use these pins for RS-485 communication. (Refer to the inverter Instruction Manual for details.)
- Do not connect the PU connector to the computer's LAN board, FAX modem socket or telephone modular connector. The product could be damaged due to differences in electrical specifications.

(2) Related parameters for connection using PU connector

Set the following communication parameter when connecting PU connector of the inverter.

When performing parameter writing or run command input, set the following command source parameters, and switch the operation mode to the following operation mode.

Inverter	Communication Option	Parameter Setting		Operation Mode
		Communication Parameter	Command Source Parameter	
FR-E700	No	<i>Pr. 122 PU communication check time interval</i> ≠ "0" (initial value 9999)	Initial value	NET
	Yes	<i>Pr. 123 PU communication waiting time setting</i> ≠ "9999" (initial value)	<i>Pr. 551 PU mode operation command source selection</i> ≠ "2" (initial value 9999)	PU



REMARKS

- Switching of the operation mode is available at "Test Operation" (Refer to page 84) window in Navigation area.
- Set 3s or more (or 9999) in *Pr. 122 PU communication check time interval*.
- Set the station number of the each inverters in *Pr. 117 PU communication station number* when connecting multiple inverters.
- Perform inverter reset after setting the parameter.

Parameter Number	Name	Initial Value	Setting Range	Description
117	PU communication station number	0	0 to 31 (0 to 247) *1	Inverter station number specification Set the inverter station numbers when two or more inverters are connected to one personal computer.
122	PU communication check time interval	0	0	RS-485 communication can be made. Note that a communication fault (E.PUE) occurs as soon as the inverter is switched to the operation mode with control source.
			0.1 to 999.8.0s	Communication check (signal loss detection) time interval If a no-communication state persists for longer than the permissible time, the inverter will come to trip (depends on <i>Pr. 502</i>).
			9999	No communication check (signal loss detection).
123	PU communication waiting time setting	9999	0 to 150ms	Set the waiting time between data transmission to the inverter and response.
			9999	Set with communication data.
551 *2	PU mode operation command source selection	FR-E700 : 9999	2	Selects the PU connector as the PU operation mode command source.
			3	Selects the USB connector as the PU operation mode command source.
			4	Selects the operation panel as the PU operation mode command source.
			9999	USB automatic recognition Normally, operation panel is the command source. When the parameter unit is connected to the PU connector, PU is valid. When USB is connected, USB is the command source.

*1 When "1" (Modbus-RTU protocol) is set in *Pr. 549*, the setting range within parenthesis is applied.

*2 *Pr. 551* is always write-enabled.




Note

- Always reset the inverter after making the setting of the parameters. After you have changed the communication-related parameters, communication cannot be made until the inverter reset.


1.4.4 Connection of multiple inverters using RS-485 terminal

RS-485 terminal is used for connecting multiple inverters with RS-232C port of a computer.
 Up to 32 inverters can be connected. RS-232C/RS-485 converter (Refer to page 14) is required.
 (FR-E700 series requires control terminal option FR-E7TR.)

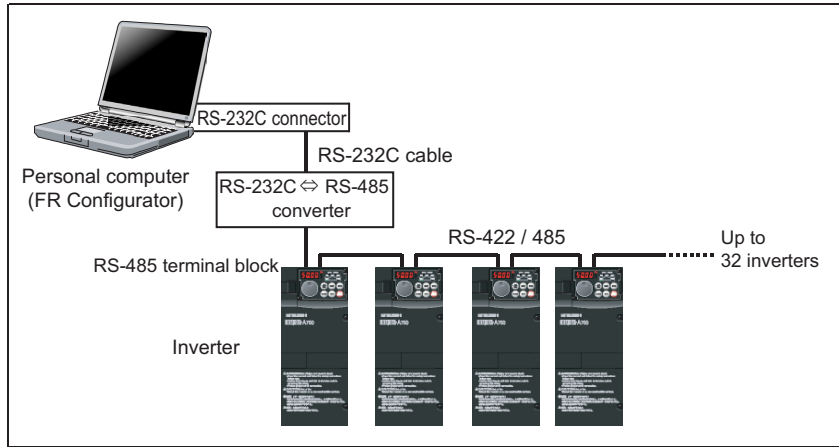

(1) Wiring

The following indicates connection diagram of the multiple inverters. Refer to the inverter manual for details.

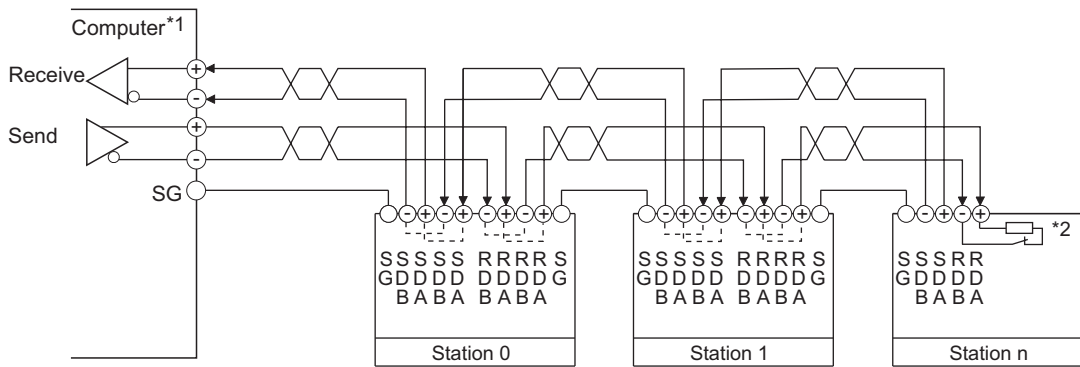

*1 Make connection in accordance with the instruction manual of the computer to be used with.

Fully check the terminal numbers of the computer since they change with the model.

*2 For the inverter farthest from the computer, set the terminating resistor switch to ON (100Ω position).

(2) Related parameters for multiple connection using RS-485 terminal

Set the following communication parameter when connecting RS-485 terminal of the inverter.

When performing parameter writing or run command input, set the following command source parameters, and switch the operation mode to the following operation mode.

Inverter	Communication Option	Parameter Setting		Operation Mode
		Communication Parameter	Command Source Parameter	
FR-E700	No	Set the station number of the each inverters in Pr. 117 PU communication station number (when connecting multiple inverters) Pr. 122 PU communication check time interval ≠ "0" (initial value 0)	Initial value	NET
	Yes	Pr. 123 PU communication waiting time setting ≠ "9999" (initial value)	Pr. 551 PU mode operation command source selection = "2" (initial value 9999)	PU



REMARKS

- Switching of the operation mode is available at "Test Operation" window (Refer to page 84) in Navigation area.
- Set 3s or more (or 9999) in Pr. 122 PU communication check time interval, Pr. 336 RS-485 communication check time interval.
- Set the station number of the each inverters in Pr. 117 PU communication station number, Pr. 331 RS-485 communication station number when connecting multiple inverters.

Parameter Number	Name	Initial Value	Setting Range	Description
117	PU communication station number	0	0 to 31 (0 to 247) *1	Inverter station number specification Set the inverter station numbers when two or more inverters are connected to one personal computer.
122	PU communication check time interval	FR-E700 : 0	0	RS-485 communication can be made. Note that a communication fault (E.PUE) occurs as soon as the inverter is switched to the operation mode with control source.
			0.1 to 999.8s	Communication check (signal loss detection) time interval If a no-communication state persists for longer than the permissible time, the inverter will come to trip (depends on Pr. 502).
			9999	No communication check (signal loss detection).
123	PU communication waiting time setting	9999	0 to 150ms	Set the waiting time between data transmission to the inverter and response.
			9999	Set with communication data.
551 *2	PU mode operation command source selection	FR-E700 : 9999	2	Selects the PU connector as the PU operation mode command source.
			3	Selects the USB connector as the PU operation mode command source.
			4	Selects the operation panel as the PU operation mode command source.
			9999	USB automatic recognition Normally, operation panel is the command source. When the parameter unit is connected to the PU connector, PU is valid. When USB is connected, USB is the command source.

*1 When "1" (Modbus-RTU protocol) is set in Pr. 549, the setting range within parenthesis is applied.

*2 Pr. 551 is always write-enabled.



Note

- Always reset the inverter after making the setting of parameters. After you have changed the communication-related parameters, communication cannot be made until the inverter reset.


1.4.5 Connection through GOT (FA transparent function)

Using FA transparent function of GOT1000 series, connecting inverter to FR Configurator is available through GOT (up to 10 inverters).

FA transparent function enables reading, writing and monitoring of programmable controller of Mitsubishi Electric Corporation through GOT, while connecting Mitsubishi programmable controller and PC.

RS-232C or USB is used for connecting between FR Configurator and GOT. RS-422 is used for connecting between GOT and inverter.

[Example of PU connector connection (FR-E700)]

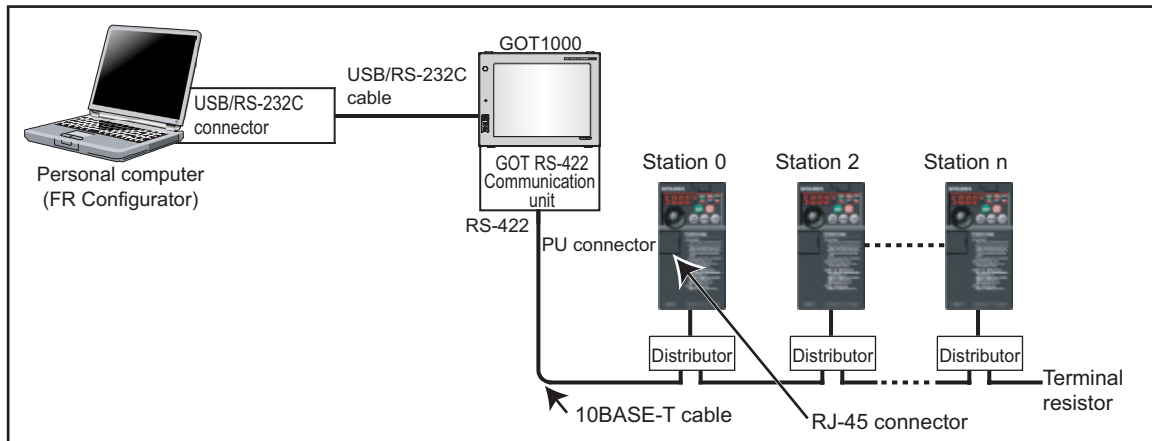

GOT RS-422 communication unit (GT15-RS4-9S) is required.

Refer to GOT1000 series connection manual for details of RS-422 connection and compatible version of GOT.



Note

- Do not perform the following operation during FA transparent function is valid and FR Configurator is ONLINE.
 - Online operation (project download, etc.) from GT Designer/GT Designer2 to GOT
 - Online operation to programmable controller CPU by using FA transparent function of GX Developer

When using FA transparent communication, communication error (Time Out) may occur when FR Configurator starts communication during Time Out occurrence in GOT (when GOT is monitoring the inverter which is not connected). In that case, set the Time Out value more than the following. (Refer to page 39)

Time Out value of GOT[s] x (Retry count of GOT + 1) x 3 x 1000[ms] (500ms increments)

If the value above is more than 30[s], make adjustment to "Time Out value"[s] and "Retry count" of GOT to make the value above become less than 30[s]. Refer to page 39 for communication setting.

(1) Related parameter for connection of multiple inverters through GOT

Check a connection between the inverter and GOT, and set the following communication parameter when connecting through GOT.

When performing parameter writing or run command input, set the following command source parameters, and switch the operation mode to the following operation mode.

Inverter	Communication port	Parameter Setting		Operation Mode
		Communication Parameter	Command Source Parameter	
FR-E700	PU connector (Without communication option)	Set the station number of the each inverters in Pr. 117 PU communication station number (when connecting multiple inverters) Pr. 122 PU communication check time interval ≠ "0" (initial value 0) Pr. 123 PU communication waiting time setting = "0" (initial value 9999)	Initial value	NET
	PU connector (With communication option)		Pr. 551 PU mode operation command source selection = "2" (initial value 9999)	PU
	RS-485 terminal block (Without communication option)		Initial value	NET
	RS-485 terminal block (With communication option)		Pr. 551 PU mode operation command source selection = "2" (initial value 9999)	PU



REMARKS

- Switching of the operation mode is available at "Test Operation" window (Refer to page 84) in Navigation area.
- Set the station number of the each inverters in Pr. 117 PU communication station number, Pr.331 RS-485 communication station number when connecting multiple inverters. Perform inverter reset after setting the parameter.

Parameter Number	Name	Initial Value	Setting Range	Description
117	PU communication station number	0	0 to 31 (0 to 247) *1	Inverter station number specification Set the inverter station numbers when two or more inverters are connected to one personal computer.
122	PU communication check time interval	0	0	RS-485 communication can be made. Note that a communication fault (E.PUE) occurs as soon as the inverter is switched to the operation mode with control source.
			0.1 to 999.8s	Communication check (signal loss detection) time interval If a no-communication state persists for longer than the permissible time, the inverter will come to trip (depends on Pr. 502).
			9999	No communication check (signal loss detection).
123	PU communication waiting time setting	9999	0 to 150ms	Set the waiting time between data transmission to the inverter and response.
			9999	Set with communication data.
551 *2	PU mode operation command source selection	FR-E700 : 9999	2	Selects the PU connector as the PU operation mode command source.
			3	Selects the USB connector as the PU operation mode command source.
			4	Selects the operation panel as the PU operation mode command source.
			9999	USB automatic recognition Normally, operation panel is the command source. When the parameter unit is connected to the PU connector, PU is valid. When USB is connected, USB is the command source.

*1 When "I" (Modbus-RTU protocol) is set in Pr. 549, the setting range within parenthesis is applied.

*2 Pr. 551 is always write-enabled.



Note

- Always reset the inverter after making the setting of the parameters. After you have changed the communication-related parameters, communication cannot be made until the inverter reset.

1.5 Setting of Operation Mode of the Inverter


1.5.1 Operation mode setting

The inverter has three operation modes.

- (1) PU operation [PU]..... Controls the inverter from the key of the control panel (FR-DU07) mounted on the inverter.
- (2) External operation [EXT]..... Controls the inverter by switching on/off external signals connected to the control circuit terminals of the inverter. (The inverter is initially-set to this mode.)
- (3) Network operation [NET] Controls the inverter with instructions from the network via the communication option. (The operation signal and running frequency can be entered from the control circuit terminals depending on the Pr. 338 Communication operation command source and Pr. 339 Communication speed command source setting.)

Pr. 79 Setting	Operation Mode at Power on or Power Restoration Operation Mode	Operation Mode Switchover
0 (initial value)	External operation mode	Switching among the external, PU, and NET operation mode is enabled *1
1	PU operation mode	PU operation mode fixed
2	External operation mode	Switching between the external and NET operation mode is enabled Switching to PU operation mode is disabled
3, 4	External/PU combined operation mode	Operation mode switching is disabled
6	External operation mode	Switching among the external, PU, and NET operation mode is enabled while running.
7	X12 (MRS) signal ON...external operation mode	Switching among the external, PU, and NET operation mode is enabled *1
	X12 (MRS) signal OFF...external operation mode	External operation mode fixed (Forcibly switched to external operation mode)

*1 Operation mode can not be directly changed between the PU operation mode and network operation mode.

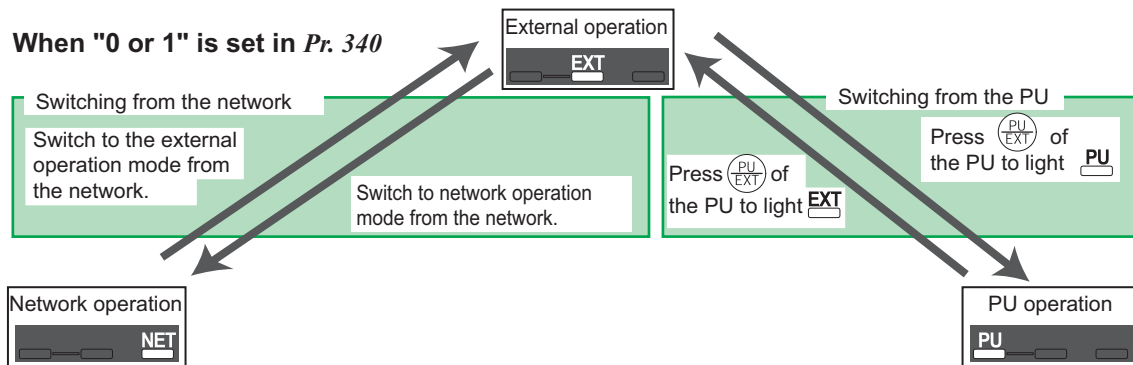

* When using USB connection, operation mode changing is available from FR Configurator. (Refer to page 84)

Setting of Operation Mode of the Inverter

Refer to the following table to select the appropriate operation mode for the connection. Switching of the operation mode is available at "Test Operation" window (Refer to page 84) in Navigation area.

Refer to the inverter manual (applied) for details of each parameters.

Controllability through communication

·Monitoring and parameter read can be performed from any operation regardless of operation mode.

●FR-E700 series

Operation Location	Condition (Pr. 551 Setting)	Operation Mode		Exrnal/PU Combined Operation Mode 1 (Pr. 79 = 3)	Exrnal/PU Combined Operation Mode 2 (Pr. 79 = 4)	NET Operation (when using PU connector) *6	NET Operation (when using communication option) *7	
		Item	PU Operation					External Operation
Control by RS-485 communication from PU connector	2 (PU connector)	Run command (Start, stop)	○	△ *3	△ *3	○	△ *3	
		Running frequency setting	○	×	○	×	×	
		Parameter write	○ *4	×	○ *4	○ *4	×	
		Inverter reset	○	○	○	○	○	
	Other than the above	Run command (Start, stop)	×	×	×	×	○ *1	×
		Running frequency setting	×	×	×	×	○ *1	×
		Parameter write	×	×	×	×	○ *4	×
		Inverter reset	×	×	×	×	○ *2	×
Operation from the USB connector	3 (USB connector) 9999 (automatic recognition)	Run command (Start, stop)	○	×	×	○	×	
		Running frequency setting	○	×	○	×	×	
		Parameter write	○ *4	×	×	×	×	
		Inverter reset	○	○	○	○	○	
	Other than the above	Run command (Start, stop)	×	×	×	×	×	
		Running frequency setting	×	×	×	×	×	
		Parameter write	×	×	×	×	×	
		Inverter reset	○	○	○	○	○	
Control by communication from communication option	—	Run command (Start, stop)	×	×	×	×	×	○ *1
		Running frequency setting	×	×	×	×	×	○ *1
		Parameter write	×	×	×	×	×	○ *4
		Inverter reset	×	×	×	×	×	○ *2

○: Enabled, ×: Disabled, △: Some are enabled

*1 As set in Pr. 338 Communication operation command source, Pr. 339 Communication speed command source

*2 At occurrence of RS-485 communication error from PU connector, the inverter cannot be reset from the computer.

*3 Enabled only when stopped by the PU At a PU stop, PS is displayed on the operation panel. As set in Pr. 75 PU stop selection.

*4 Some parameters may be write-disabled according to the Pr. 77 Parameter write selection setting and operating status.

*5 Some parameters are write-enabled independently of the operation mode and command source presence/absence. When Pr. 77 = 2, write is enabled. Parameter clear is unavailable.

*6 When Pr. 550 NET mode operation command source selection = "2" (PU connector valid) or Pr. 550 NET mode operation command source selection = "9999" and the communication option is not fitted.

*7 When Pr. 550 NET mode operation command source selection = "0" (communication option valid) or Pr. 550 NET mode operation command source selection = "9999" and the communication option is fitted.

1.6 Start and Close

1.6.1 Starting FR Configurator

There are following ways to start FR Configurator.

(1) Start from Start menu

Click [Start] on the Taskbar of Windows, and point to [All Programs], [MELSOFT Application], [FR Configurator], [SW3 (700 Series)], and click [FR Configurator SW3] to start FR Configurator.




(2) Start from system file (me3)


Double-click (or type Enter key) a desired system file (me3) to start FR Configurator with reading the setting of the system file. [Startup] window is not displayed. (Refer to page 81 for system file (me3))

(3) Start from command line

Specify an executable file of FR Configurator (invsup3_e.exe) to [Run...] window in the [Start] menu of Windows, to start FR Configurator.

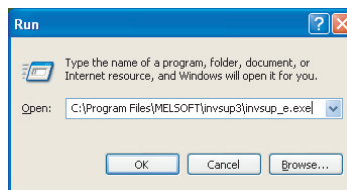


Specify the system file (me3) after the executable file, and the setting of the system file (me3) is read at the starting up of the software. [Startup] window is not displayed at starting up of the software when the system file (me3) is specified.

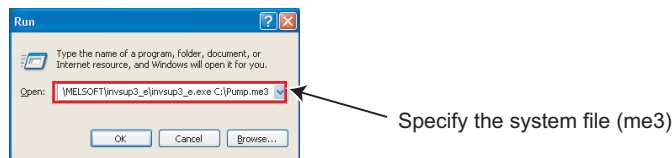

(4) Start from Windows Explorer


Select the executable file of FR Configurator (invsup3_e.exe) by using Windows Explorer, and double-click (or type Enter key) to start FR Configurator.

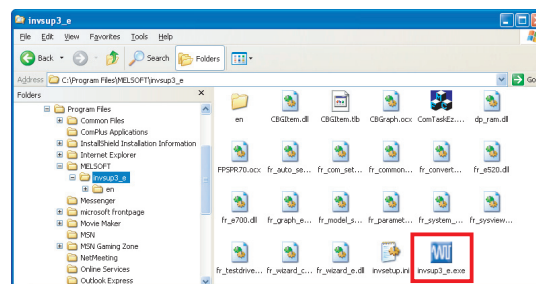


1.6.2 Start flow of FR Configurator

After starting FR Configurator, splash screen is displayed, and proceeds the starting up.



"Startup" windows is displayed when FR Configurator is started. Each functions can be directly selected from the "Startup" window. (Refer to page 36 for the detail of "Startup") Click  to close "Startup" window and switch to the main window of FR Configurator.

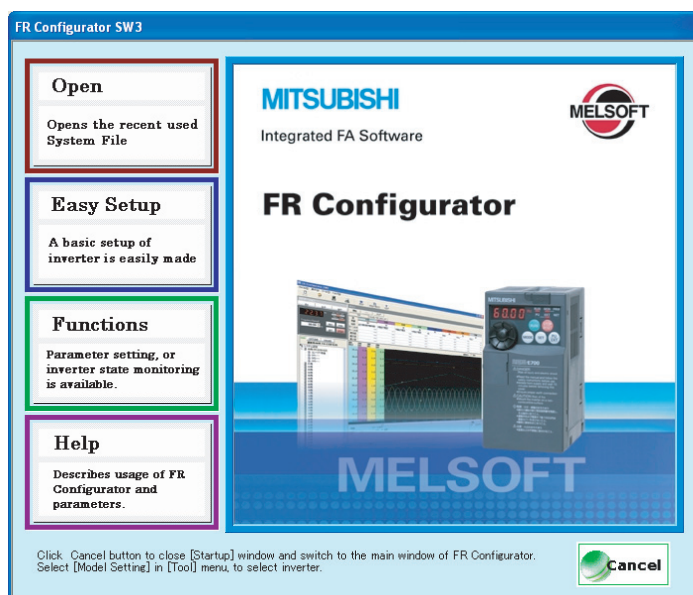

1.6.3 Closing FR Configurator


There are following ways to close FR Configurator.

(1) Close from menu

Select [E]xit in [F]ile menu to close FR Configurator.

(Typing Alt + F to open [F]ile menu, and type Ctrl + X also closes FR Configurator)


(2) Close from title bar

 
Click  on the right end of the title bar to close FR Configurator.




REMARKS

If a system file (me3) is not saved yet when closing FR Configurator, a dialog box is displayed to confirm the closing.

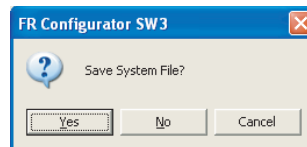

Click  to open "Save As" window for saving the system file (me3).

 Click  to close FR Configurator without saving the system file (me3).

Click  to cancel the closing of FR Configurator, and switch to the Main frame window.


1.7 Explanation of Window

The following describes FR Configurator window.

1.7.1 Main frame

The Main frame (main window) of FR Configurator consists of 3 areas.

- **Navigation area** (Refer to page 28)
An area for showing information of the registered inverter, or for making settings. "Test Operation", "System Settings", "Setting Wizard", and "Troubleshooting" are available in this area.
- **Monitor area** (Refer to page 30)
An area for showing obtained monitor data of inverter. "Graph", "I/O Terminal Monitor", "Batch Monitor" are available in this area.
- **System area** (Refer to page 29)
An area for showing and read/write parameters, or for converting from parameter setting of conventional model. "Parameter List", "Diagnosis" and "Convert" are available in this area.

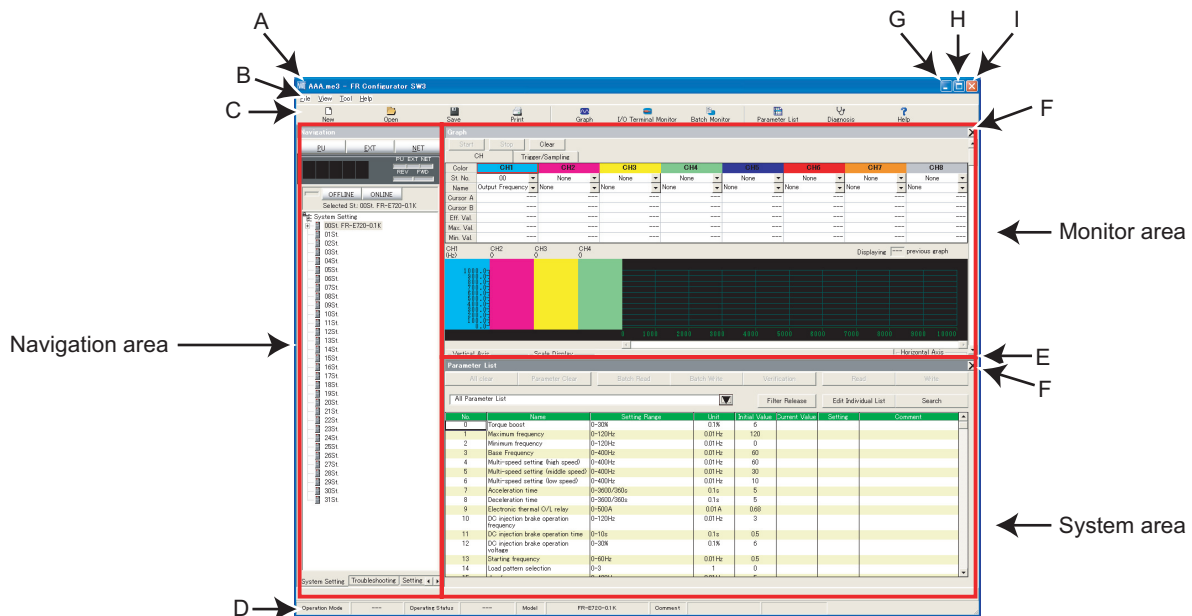


• Explanation of Main frame

No.	Name	Function and description	Refer to Page
A	Title bar	"FR Configurator SW3" is displayed on the title bar. If a system file has been read, or has been saved, the file name and file location is displayed.	—
B	Menu bar	Each functions are available by selecting from the menu.	31
C	Tool bar	Each functions are available by clicking icons of the tool bar.	31
D	Status bar	A model name, Operating status, etc. are shown.	33
E	Split line	Adjustment of System area size and Monitor area size is available.	—
F	Conceal button	Conceals the Monitor area and System area.	—
G	Minimize button	Minimizes the Main frame window size of FR Configurator.	—
H	Maximize button	Maximizes the Main frame window size of FR Configurator.	—
I	Close button	Closes FR Configurator.	—




REMARKS


Adjustment of System area size and Monitor area size is available with using the split line. You can adjust the area size to enlarge the current using area.

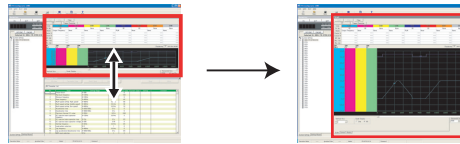


Point a mouse cursor on the boundary, and when an arrow is displayed with pointing to an available direction of size changing. If only one area is displayed, size adjustment is unavailable. Adjusting window size beyond the maximum size or minimum size of each window is unavailable.

• **Detection of fault and communication error**

FR Configurator checks operating status of connected inverter, and detects fault and communication error (Refer to page 132). If a fault or communication error is detected, a following dialog appears. Click  to show a related Help information.

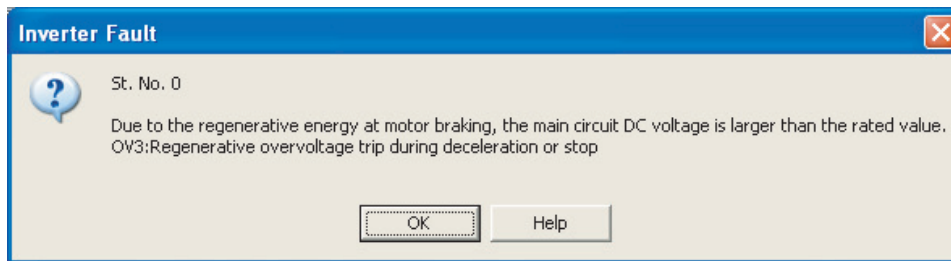

• When a fault is detected

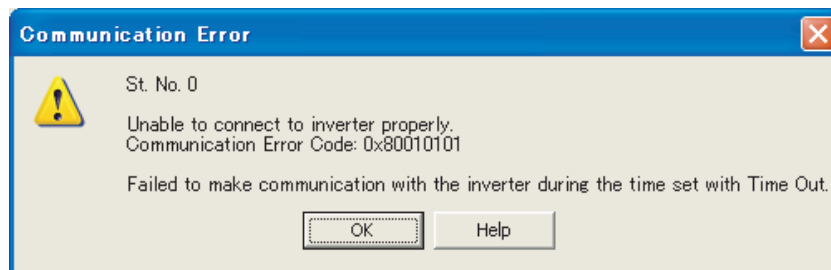


• When a communication error is detected

1.7.2 Navigation area

Navigation area is for showing registered inverter information, switching of operation mode and ONLINE/OFFLINE, sending of start/stop command, changing of the set frequency, or starting Setting Wizard. "Test Operation", "System Settings", "Setting Wizard" and "Troubleshooting" are available in this area.

Upper part of Navigation area displays "Test Operation" (Refer to page 84), and lower part displays "System View" (Refer to page 88).


Select [System Setting] or [Setting Wizard] under [View] menu to switch the function displayed in "System View".

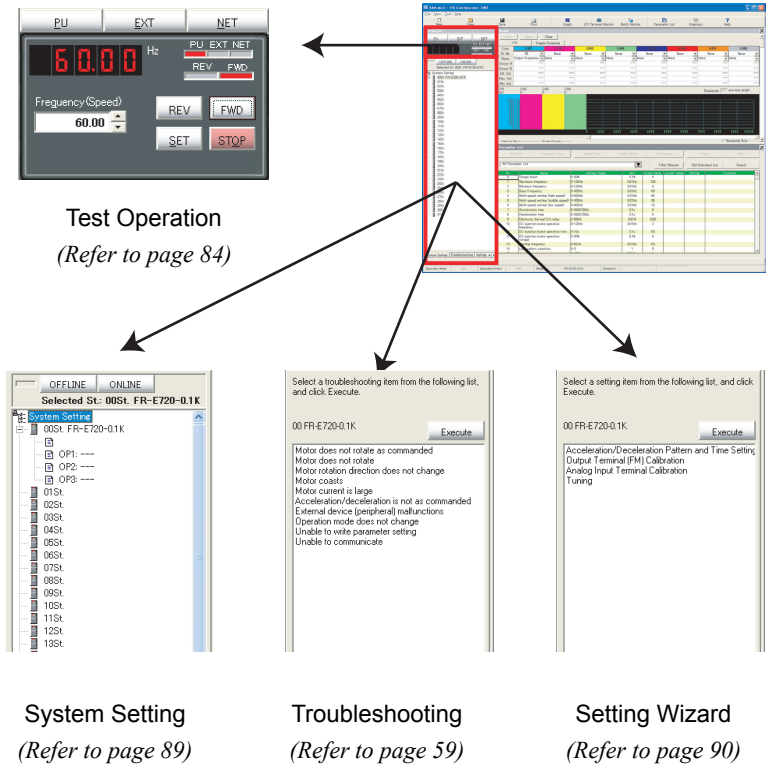

1.7.3 System area

System area is for showing and reading/writing parameters, or converting from parameter setting of conventional model. "Parameter List", "Diagnosis", and "Convert" are available in this area.


Select [Parameter List], [Diagnosis], or [Convert] under [View] menu, or click icons on the tool bar to switch the function displayed in System area.

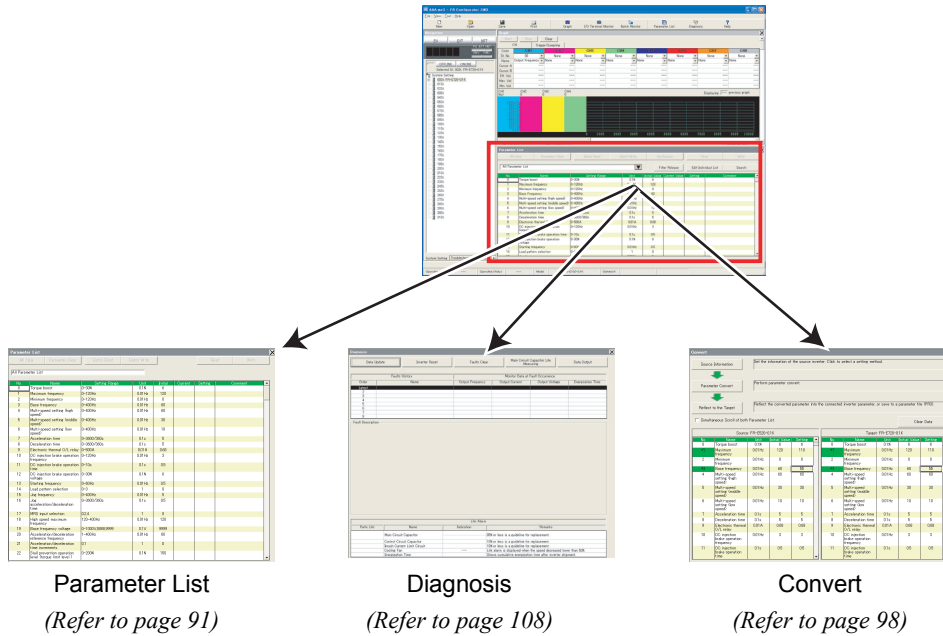

1.7.4 Monitor area


Monitor area is for showing obtained monitor data of inverter. "Graph", "I/O Terminal Monitor", and "Batch Monitor" are available in this area.

Select [Graph], [I/O Terminal Monitor], or [Batch Monitor] under [View] menu, or click an icon on the tool bar to display the function in System area.

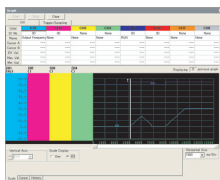

Graph

(Refer to page 110)

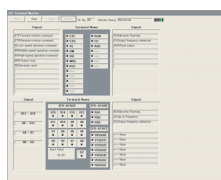


I/O Terminal Monitor

(Refer to page 126)



Batch Monitor

(Refer to page 125)

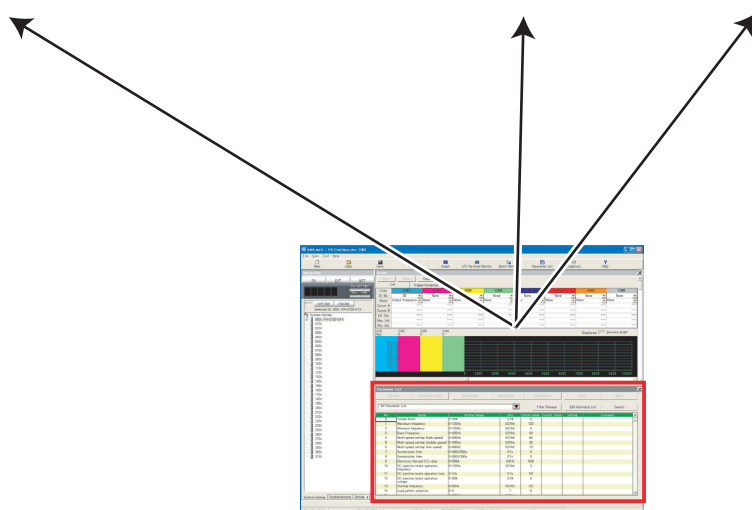











 1.7.5 Menu and Tool bar

Desired function is available by selecting them from the menu or the tool bar.

 (1) Menu/Tool bar list

Following functions are available from the menu.


Menu	Pull-down menu	Too bar Icon	Function/Operation	Refer to Page	
File	New ...		Clears the all current settings to create a new setting. Confirmation dialog for new setting appears, and then displays "Startup" window.	24	
	Open ...		Opens the system file (me3).	81	
	Save		Overwrites the system file (me3) by current data. When the system file (me3) has not been read or not created yet, then "Save As" window is displayed, and saving of the system file is available.	81	
	Save As...	—	Puts a name and creates a new system file (me3) from the current setting.	81	
	Property	—	Checks and edits system name, application and comments.	38	
	Import...	—	Imports an exported saved file of the currently using function. Confirmation dialog for erasing the current data appears, and then the import window is displayed.	82	
	Export ...	—	Exports the data of currently using function and creates a file.	82	
	Print ...		Prints a whole window.	83	
Exit	—	Closes FR Configurator.	—		
View	Batch Monitor		Displays "Batch Monitor" window in Monitor area.	125	
	Graph		Displays "Graph" window in Monitor area.	110	
	I/O Terminal Monitor		Displays "I/O Terminal Monitor" window in Monitor area.	126	
	Parameter List		Displays "Parameter List" window in System area.	91	
	Diagnosis		Displays "Diagnosis" window in System area.	108	
	Convert	—	Displays "Convert" window in System area.	98	
	Navigation	System Setting	—	Displays "System Setting" window in System View of Navigation area.	89
		Troubleshooting	—	Displays "Troubleshooting" window in System View of Navigation area.	59
		Setting Wizard	—	Displays "Setting Wizard" in System View of Navigation area.	90
		Test Operation	—	Displays or hides the command sending part of "Test Operation".	84
Tool	Model Setting...	—	Displays "Model Setting" window.	78	
	Options...	—	Displays "Option" window.	79	
Help	Help		Displays "Help" window.	128	
	About FR Configurator SW3	—	Displays "About FR Configurator SW3" window.	130	

1


OUTLINE

(2) [View] menu and Main frame

Each function screen of FR Configurator is displayed from [View] menu. Inside of [View] menu is divided into 3 segments. Function screen in Monitor area from above, and screen in System area, screen in Navigation area follows.

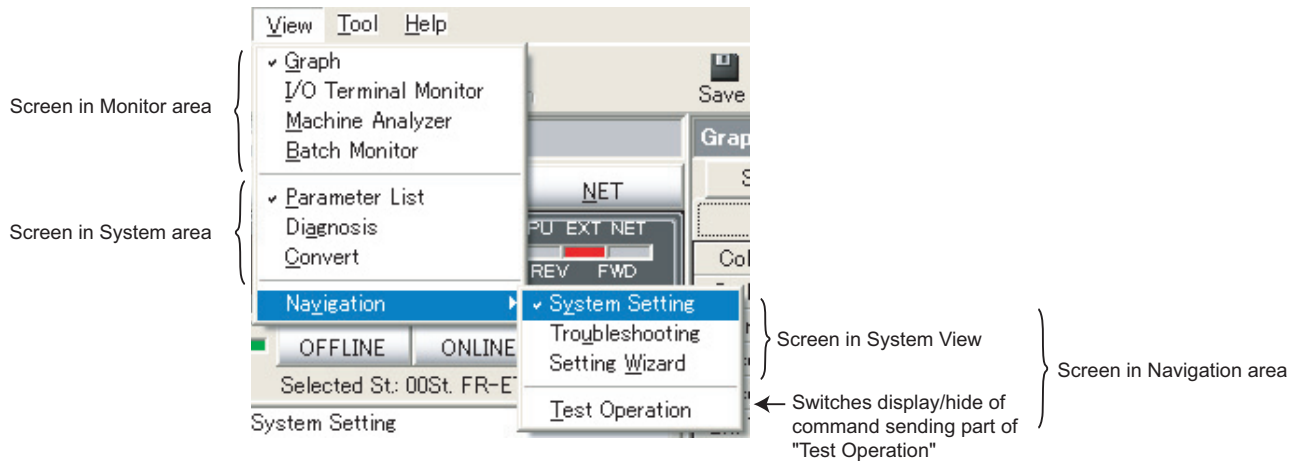

A check mark appears on a left of the item inside the [View] menu for each screen displayed in each area. One function each from Monitor area, System area and Navigation area can be displayed. Check on the [Test Operation] under [Navigation] menu to display the command sending part of "Test Operation".

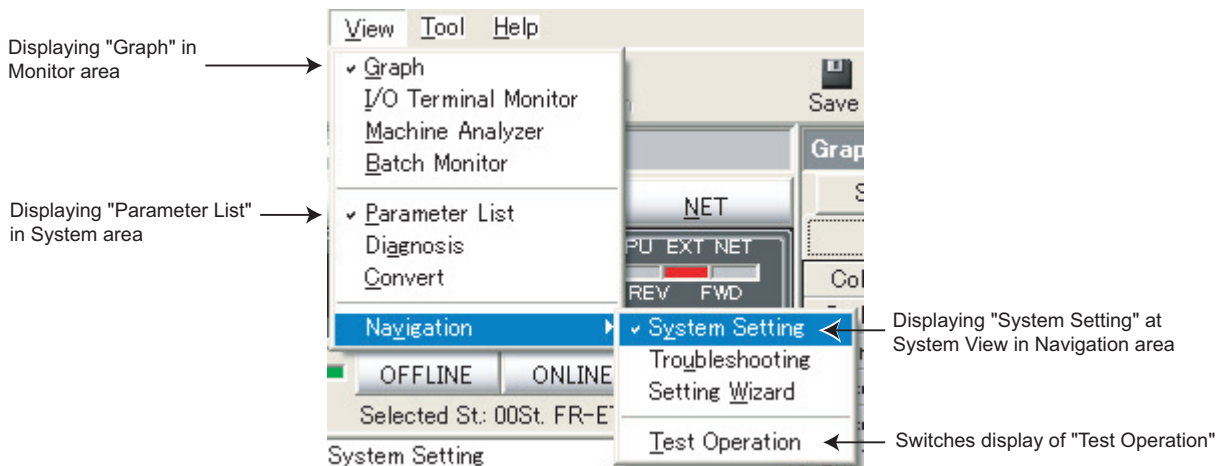

Click and uncheck the checked item of the currently displaying function to hide. To hide Navigation area itself, click and uncheck the item of the System View under [Navigation] menu.

When a function in Monitor area is performing monitoring, all functions in Monitor area are unavailable. Stop the monitoring, and then select a menu.


REMARKS

- Depending on connected inverter, with or without of Model Setting, or ONLINE/OFFLINE condition, some functions are unavailable. If an item in menu is displayed in gray, the item is unavailable.
- When functions in both Monitor area and System area are checked, click and uncheck the one of them will maximize the window size of another.



1.7.6 Status bar

Status bar shows operation mode of the inverter and model information etc.

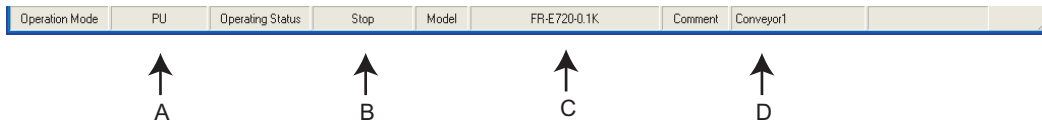




No.	Name	Function and description
A	Operation Mode	Shows the operation mode of the selected inverter (station). When model setting (system setting) has not made, "---" is displayed. At an occurrence of warning, both operation mode and warning are displayed. Example: Stall prevention (overcurrent) occurred at external operation mode "EXT(OL)"
B	Operating Status	Shows the operating status of the selected inverter (station).
C	Model	Shows a model of the selected inverter (station).
D	Comment	Shows a comment.

1.7.7 Communication manager

When FR Configurator is started, an icon appears at Windows taskbar indicating communication status. When FR Configurator is closed, the icon disappears.



The icon displays ONLILNE/OFFLINE status of FR Configurator.

Indication	Status	Connection
	OFFLINE	—
	ONLINE	RS-232C connection(Blue) RS-232C connection through GOT(Blue)
		USB connection (Green) USB connection through GOT(Green)

MEMO

2 WHEN USING FOR THE FIRST TIME

This chapter explains the "Startup" and "Easy Setup" of this product.

Always read the instructions before using the software.

2.1	Startup.....	36
2.2	Easy Setup.....	37

1

2


3

4

5

2.1 Startup


"Startup" window is displayed when FR Configurator is started. Each functions can be directly selected from the "Startup" window.

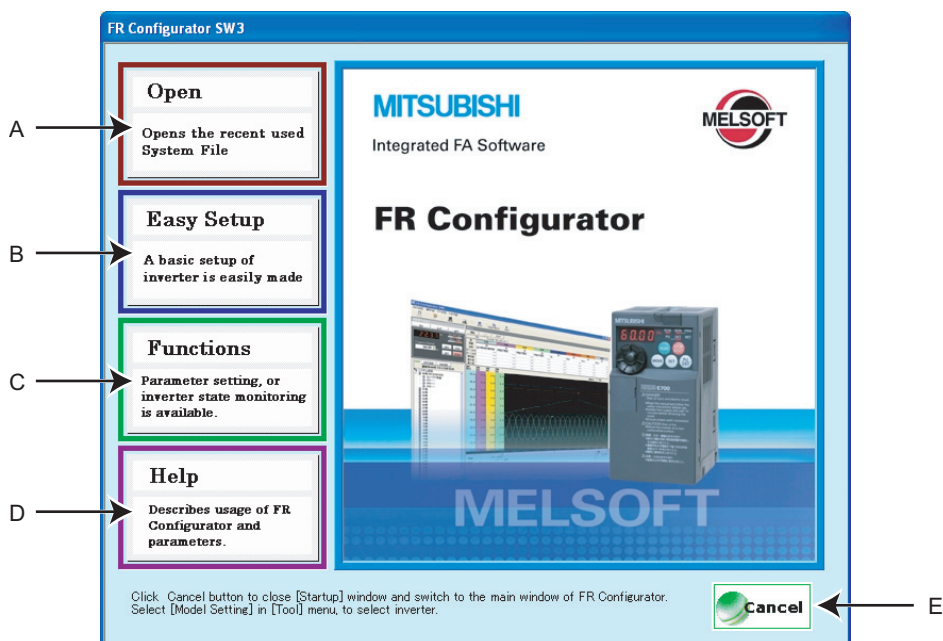

No.	Name	Function and description
A	Open	Shows up to 5 recent used files. Point a cursor on "Open File", and 5 recent used files are shown. Click the file name, then "Startup" window is closed, and Main frame is displayed with the file contents reflected.
B	Easy Setup	Click to start Easy Setup. From System Property setting to Model setting and parameter setting, the setting up is easily made with wizard style (interactive). (Refer to page 37)
C	Functions	Shows a list of functions.
D	Help	Displays Help window. (Refer to page 128)
E	Cancel	Click to close this window, and returns to Main frame.

2.2 Easy Setup

Setting from system setting to parameter setting is easily made with Easy Setup. Even without FR Configurator knowledge, without regard to the parameter number, system setting and basic parameter setting is easily made.

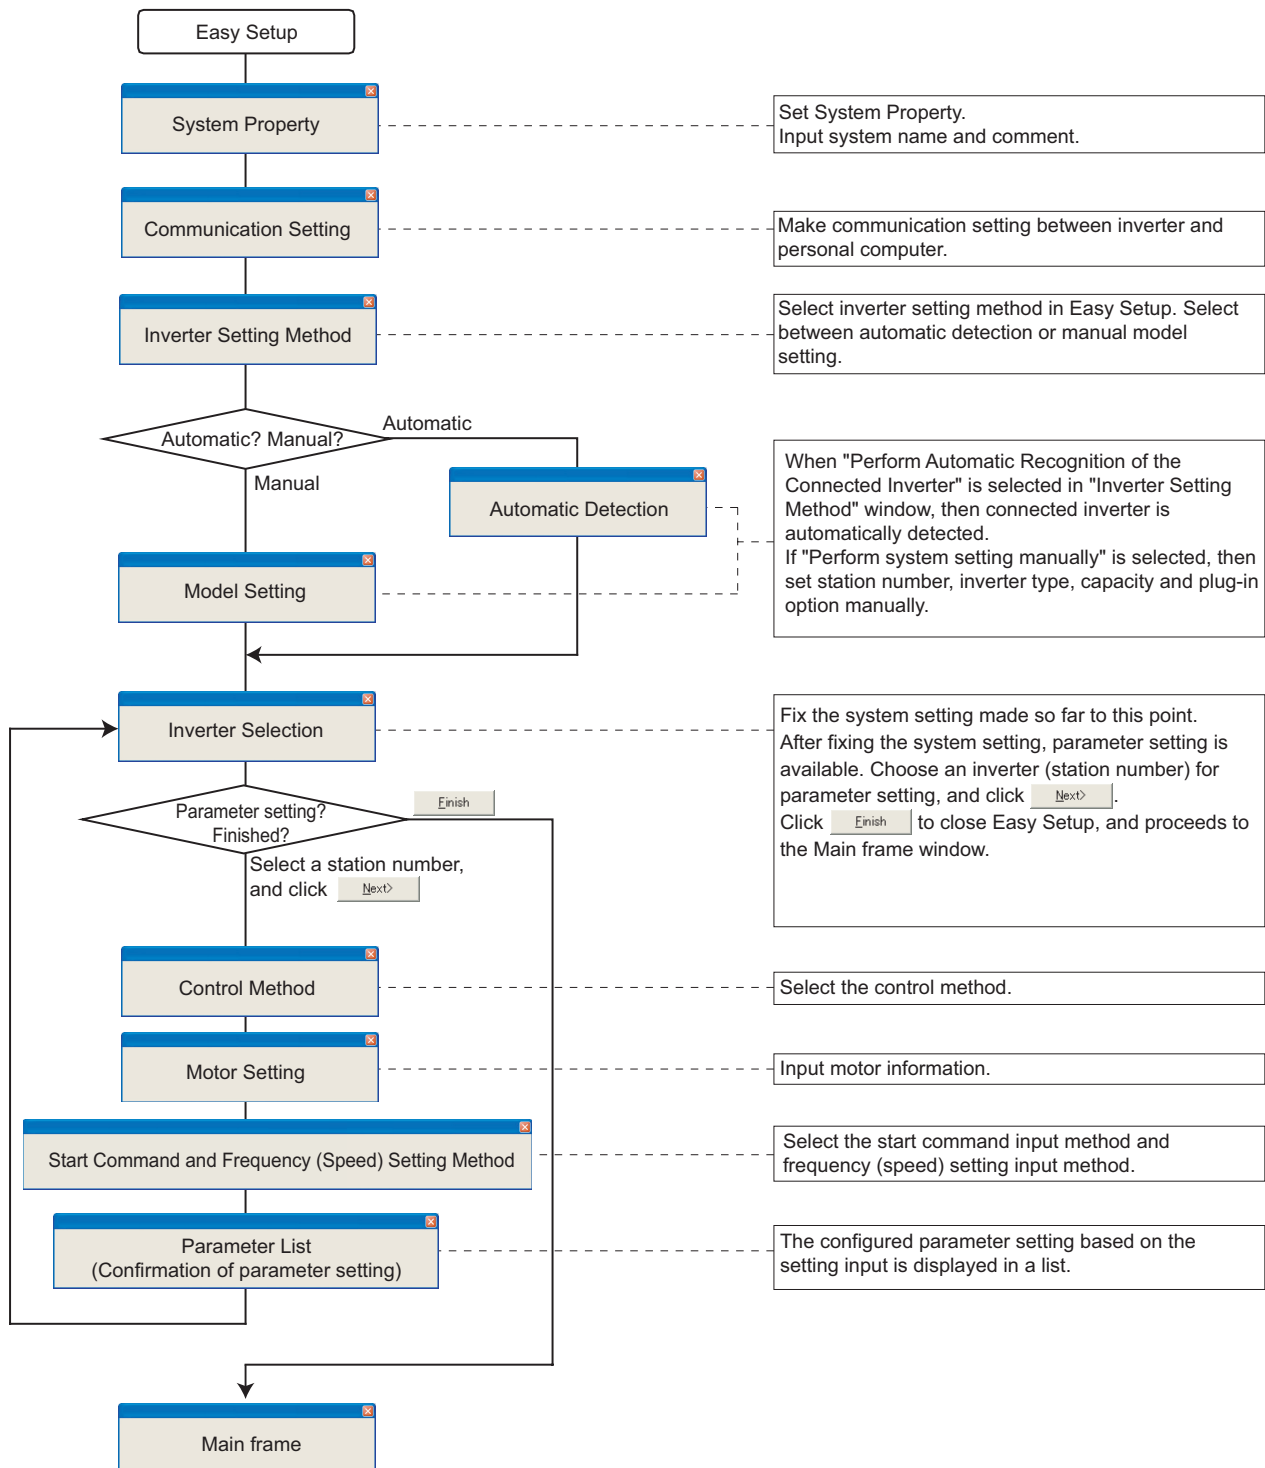

REMARKS


When **[Cancel]** is clicked in each setting screen, the setting input made so far becomes invalid, and the window returns to "Startup".

(Communication setting is saved even when **[Cancel]** is clicked.)

2.2.1 System Property

Input an information for creating system file.

Type a system name (up to 32 one byte characters) for this system file. Click after input the system name. When is clicked, the screen proceeds to "Communication Setting".

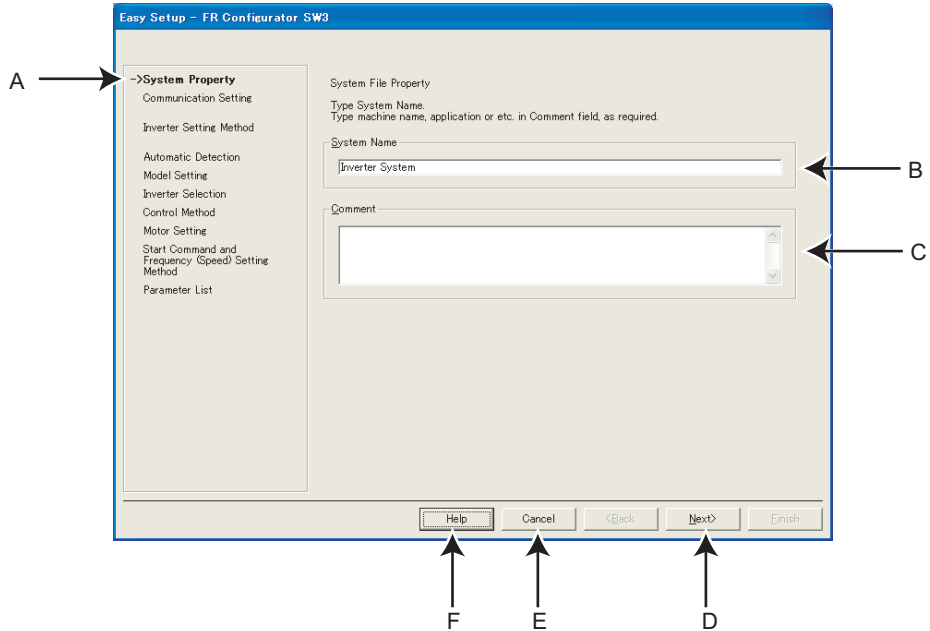

No.	Name	Function and description
A	Setting procedure	Shows description of current setting and next/previous setting in Easy Setup.
B	System Name	Type a system name up to 32 one byte characters.
C	Comment	A field for comments (up to 256 one byte characters) to describe the system.
D	Next>	Proceeds to "Communication Setting" (Refer to page 39).
E	Cancel	Closes Easy Setup with the setting made invalid.
F	Help	Displays Help window. (Refer to page 128)

2.2.2 Communication Setting

Making a communication setting between a personal computer and inverter.

When communicating with inverter using an USB port of the personal computer, select "USB" in "PC side Port" field, and click




When communicating with inverter using a RS-232C of the personal computer, select "RS-232C" in "PC side Port" field.



POINT

Default communication setting is matching to an initial value of inverter.

Check the personal computer side port (RS-232C/USB) and personal computer port number (1 to 10).

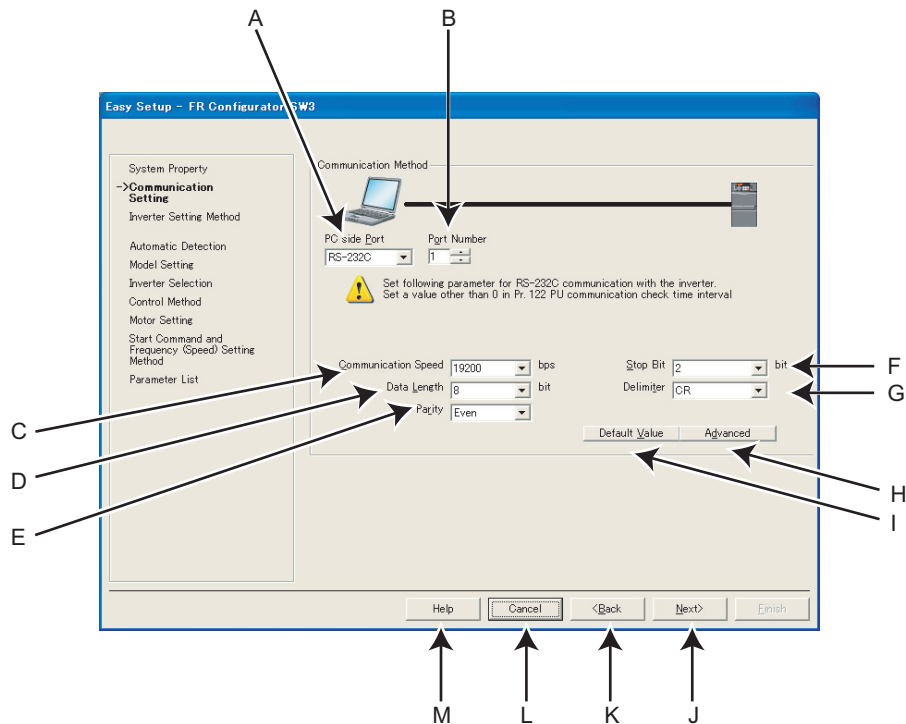

No.	Name	Initial value	Function and description
A	PC side Port	RS-232C	Select the communication port from RS-232C or USB.
B	Port Number	1	Select the personal computer communication port number. (Refer to page 40)
C	Through	--	Select when connecting through GOT.
D	Communication Speed	19200	Set the communication speed. (Refer to Pr. 118, Pr. 332)
E	Data Length	8	Set the data bit length. (Refer to Pr. 119, Pr. 333)
F	Parity	Even	Specify the parity bit. (Refer to Pr. 120, Pr. 334)
G	Stop Bit	2	Set the stop bit length. (Refer to Pr. 119, Pr. 333)
H	Delimiter	CR	Specify the delimiter of the data end. (Refer to Pr. 124, Pr. 341)
I	Advanced		Displays "Advanced" window. Setting of TimeOut and Retry Count is available.
J	Default Value		Restores default value of communication setting.
K	>Next		Proceeds to "Inverter Setting Method" (Refer to page 41).
L	<Back		Returns to "System Setting" (Refer to page 38).
M	Cancel		Closes Easy Setup with the setting made invalid.
N	Help		Displays Help window. (Refer to page 128)



REMARKS


- When "USB" is selected for personal computer side port, unnecessary setting item turns to gray and unavailable for making setting.
- Communication Setting is also available from [Option] in a [Tool] menu.
- Refer to the inverter manual for details of the parameters.



REMARKS


The communication port can be checked by the following procedure.

1. Click [Start] of the Taskbar of Windows, and point to [All Programs], point to [Accessories], point to [System Tools], and then click [System Information]. [System Information] window shown on the right is displayed.
2. Select [Serial] in [Port] folder of [Component] in the left pane.
3. Check the [COM] number of "Communication port" displayed in the right pane.
Example: "1" for "Communication port (COM1)"
4. Set the confirmed value to the "Port Number" of B.

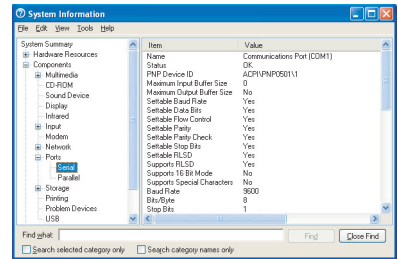

(1) Advanced

Click **Advanced** to display "Advanced" window.

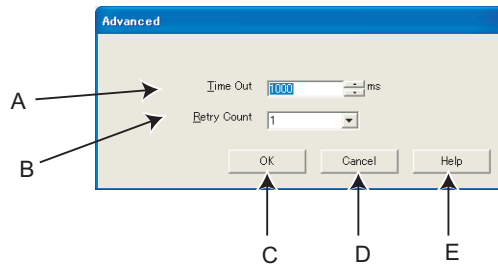

No.	Name	Initial	Function and description
A	Time Out *	100ms	Set a time between personal computer sends a data for inverter, and then personal computer receives a reply. When there is no reply after the set time, "Time Out Occurrence" error dialog appears.
B	Retry Count	1	Set the number of retries.
C	OK		Returns to "Communication Setting" window with the setting in "Advanced" window made valid.
D	Cancel		Returns to "Communication Setting" window with the setting made invalid.
E	Help		Displays Help window. (Refer to page 128)

*1 When connecting with FA transparent function, set the time-out value in 500ms increments (Example: 500 / 1000 / 1500 /... / 30000).




REMARKS

FR Configurator sends a data with 100ms interval, for the operation mode and error checking. Set 3s or more (or 9999) for communication check time interval setting of the inverter (Pr. 122 or Pr. 548). If the value less than 3s is set, the inverter may come to trip. (Refer to page 11, 14)

2.2.3 Inverter Setting Method


Select inverter setting method between automatic recognition of the connected inverter, or manually model setting for this system.

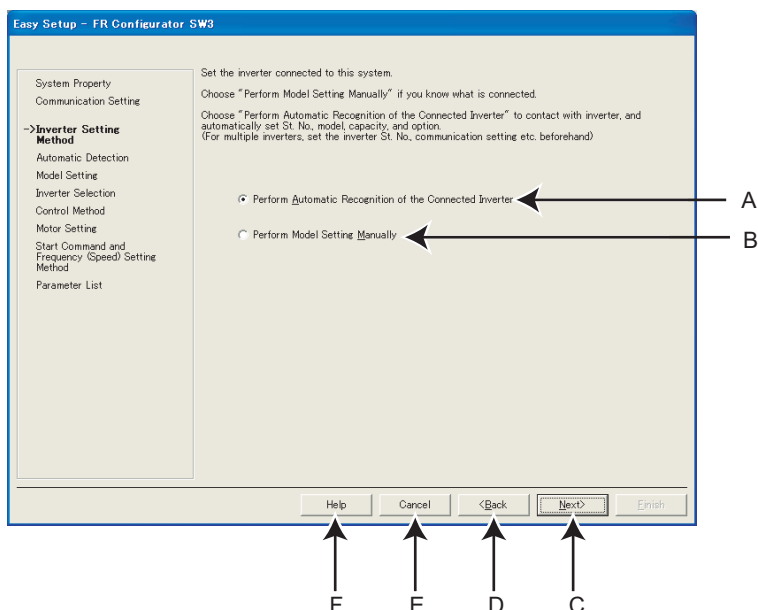

No.	Name	Function and description
A	Perform Automatic Recognition of the Connected Inverter	Choose "Perform Automatic Recognition of the Connected Inverter" and click <input type="button" value="Next>"/> to automatically detect the connected inverter. After finishing the automatic detection of the inverter, the window proceeds to "Inverter Selection" (Refer to page 44)
B	Perform Model Setting Manually	Make the model setting manually. (Refer to page 43)
C	Next>	When "Perform Automatic Recognition of the Connected Inverter" is selected, the window proceeds to "Automatic Detection" (Refer to page 42). If "Perform Model Setting Manually" is selected, the window proceeds to "Model Setting" (Refer to page 43).
D	<Back	Returns to "Communication Setting" (Refer to page 39).
E	Cancel	Closes Easy Setup with the setting made invalid.
F	Help	Displays Help window. (Refer to page 128)

2.2.4 Automatic Detection


Click to detect inverter of which communication is available.

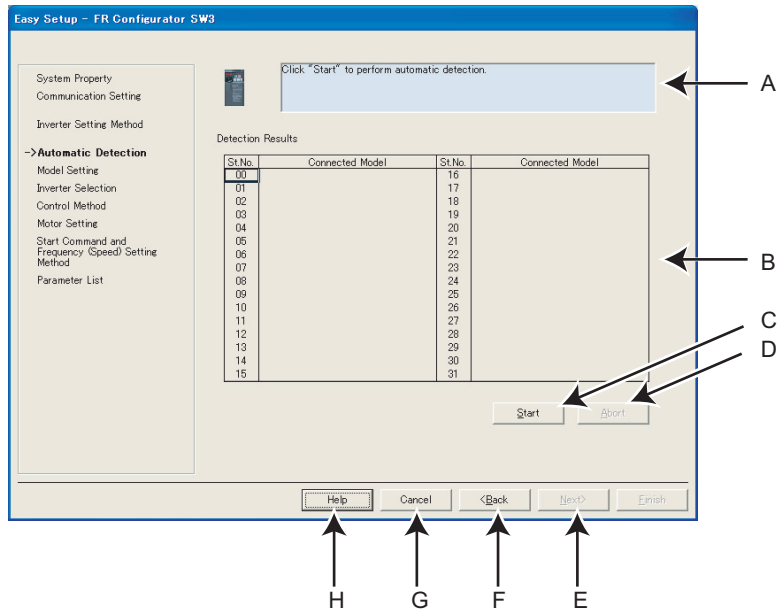

No.	Name	Function and description
A	Message area	Shows a state of automatic detection. When an inverter is detected, the color turns blue, and shows a result of detection. (If an error occurred during automatic detection, the color turns red, and shows error description.)
B	Detection Results	Shows a result of automatic detection. A station during detecting is displayed in blue. And when an inverter is detected, inverter model name is displayed. (For a station failed for detection, the color turns red, and shows error code. <i>Refer to page 132</i> for the error code)
C	<u>S</u> tart	Starts automatic detection when clicked.
D	<u>A</u> bort	Aborts automatic detection.
E	<u>N</u> ext>	Proceeds to "Inverter Selection" (<i>Refer to page 44</i>).
F	< <u>B</u> ack	Returns to "Inverter Setting Method" (<i>Refer to page 41</i>).
G	<u>C</u> ancel	Closes Easy Setup with the setting made invalid.
H	<u>H</u> elp	Displays Help window. (<i>Refer to page 128</i>)

2.2.5 Model Setting

Make the inverter model setting manually.

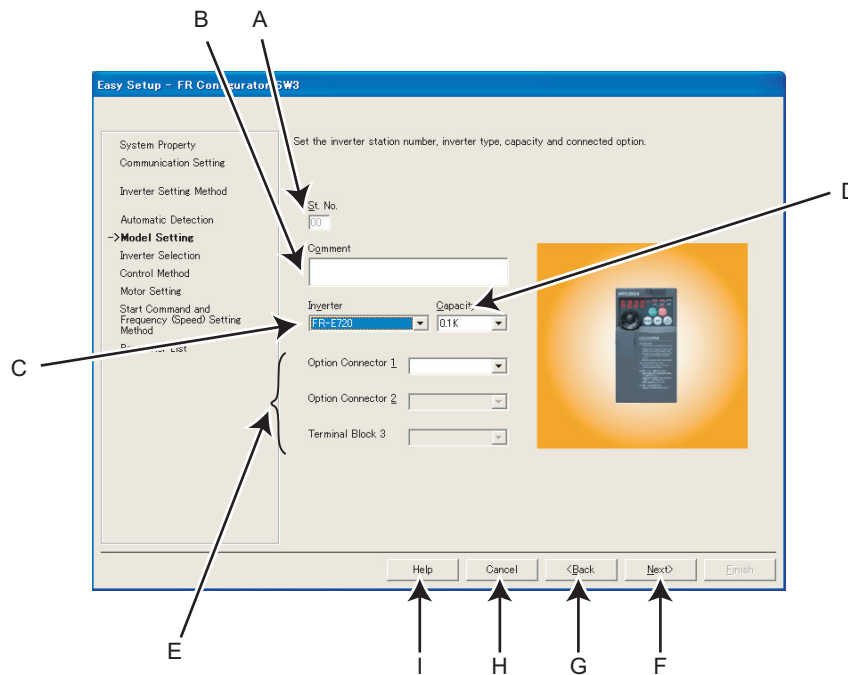

No.	Name	Function and description
A	St. No.	Set the inverter station number from 0 to 36.
B	Comment	A field for comments.
C	Inverter	Select the connected inverter model.
D	Capacity	Select the connected inverter capacity.
E	Option Connector 1, Terminal Block 3	Select the option connected to an option connector of the inverter.
F	Next>	Proceeds to "Inverter Selection" (Refer to page 44).
G	<Back	Returns to "Inverter Setting Method" (Refer to page 41).
H	Cancel	Closes Easy Setup with the setting made invalid.
I	Help	Displays Help window. (Refer to page 128)



REMARKS


"Model Setting" is also available from [Model Setting] in a [Tool] menu.

2.2.6 Inverter Selection

Click **Reflect Basic Setting** to fix the system setting, and then parameter setting is available.

Choose an inverter (station number) for parameter setting, and click **Next>**. After parameter setting is finished, the window returns to "Inverter Selection" again.


Click **Finish** to close Easy Setup, and proceeds to the Main frame window.

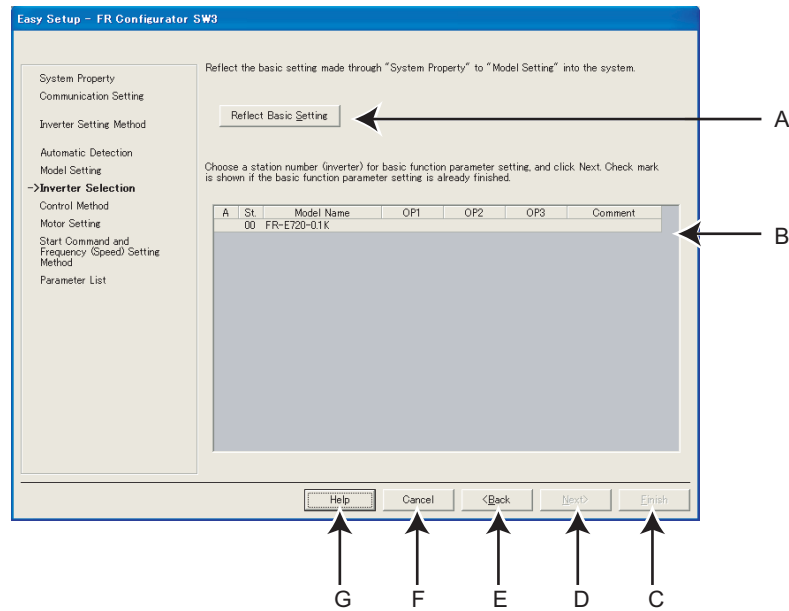

No.	Name	Function and description
A	Reflect Basic Setting	Reflects the system setting made in Easy Setting.
B	Inverter selecting field	Shows the inverter reflected into system setting. Choose a station number for parameter setting, and click Next> . A check mark is displayed on the station number if the parameter setting has already made. (Click Reflect Basic Setting to fix the system setting first, and the field is available.)
C	Finish	Click to close Easy Setup, and proceeds to the Main frame window.
D	Next>	Proceeds to "Control Method" (Refer to page 45).
E	<Back	Returns to "Model Setting" (Refer to page 43) or "Automatic Detection" (Refer to page 42).
F	Cancel	Closes Easy Setup with the setting made invalid.
G	Help	Displays Help window. (Refer to page 128)

2.2.7 Control Method

Sets a control method of the inverter. Select the control method, and click .

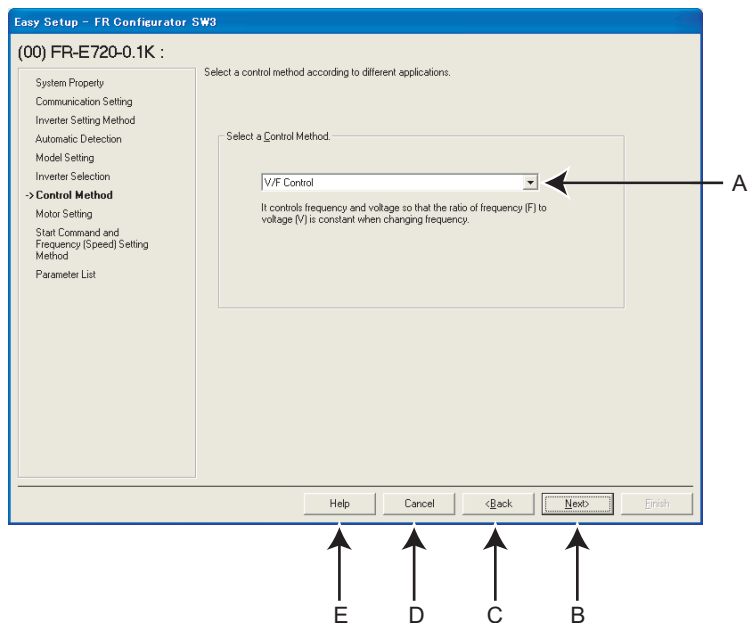

No.	Name	Function and description
A	Select a <u>C</u> ontrol Method.	Select the control method.
B	<u>N</u> ext>	Proceeds to "Motor Setting" (Refer to page 46).
C	< <u>B</u> ack	Returns to "Inverter Selection" (Refer to page 44).
D	<u>C</u> ancel	Closes Easy Setup with the setting made invalid.
E	<u>H</u> elp	Displays Help window. (Refer to page 128)


• Changing parameter

Parameters related to control method. (Refer to the inverter manual for details of the parameters.)

Parameter Number	Name
60	Energy saving control selection
80	Motor capacity
81	Number of motor poles
800	Control method selection

2.2.8 Motor setting

Makes a motor setting of the inverter. Click **Next>** after inputting the motor information.

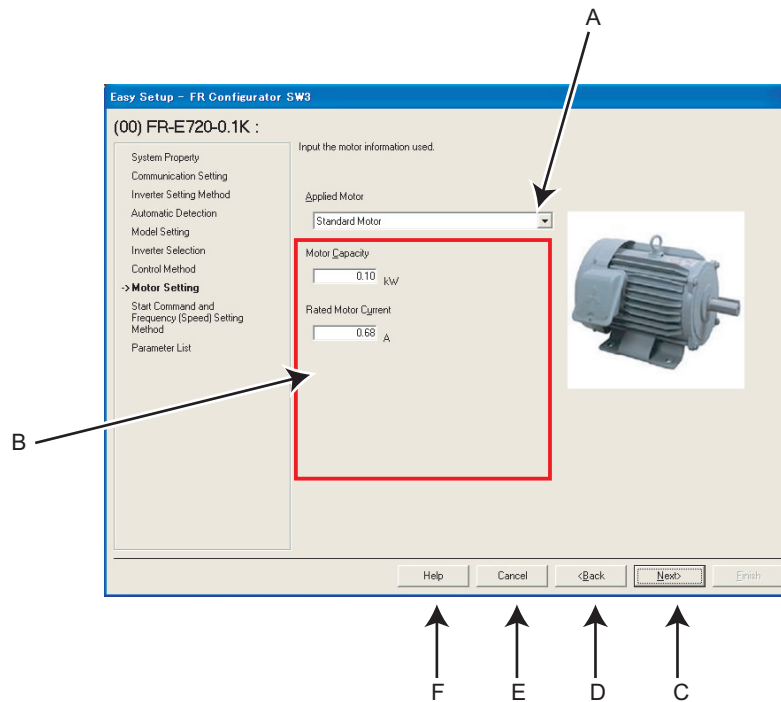

No.	Name	Function and description
A	Applied Motor	Select a type of motor. Type of selectable motors are different according to the control method selected in "Control Method" window (or Pr. 71 setting).
B	Motor information	Input a motor information. Required motor information to fill in is different according to the control method setting selected in "Control Method" window.
C	Next>	Proceeds to "Start Command and Frequency (Speed) Setting Method" (Refer to page 47).
D	<Back	Returns to "Control Method" (Refer to page 45).
E	Cancel	Closes Easy Setup with the setting made invalid.
F	Help	Displays Help window. (Refer to page 128)


• Changing parameter

Parameters related to motor setting. (Refer to the inverter manual for details of the parameters.)

Parameter Number	Name
9	Electronic thermal O/L relay
71	applied motor
80	Motor capacity
81	Number of motor poles
83	Rated motor voltage
84	Rated motor frequency

2.2.9 Start Command and Frequency (Speed) Setting Method

Select an input method of start command and frequency (speed) setting.

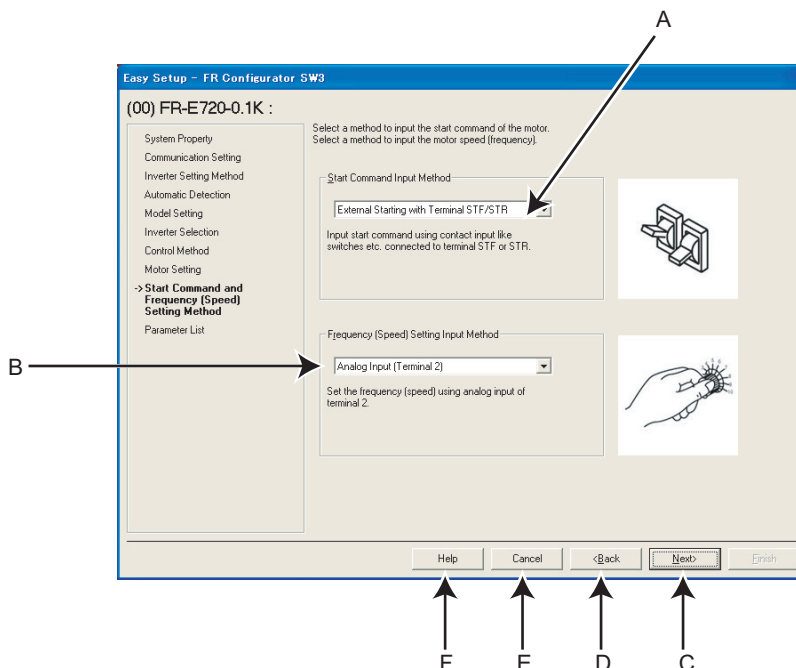

No.	Name	Function and description
A	Start Command Input Method	Select the start command input method of the inverter.
B	Frequency (Speed) Setting Input Method	Select the frequency (speed) setting input method of the inverter.
C	Next>	Proceeds to "Parameter List" (Refer to page 48).
D	<Back	Returns to "Motor Setting" (Refer to page 46).
E	Cancel	Closes Easy Setup with the setting made invalid.
F	Help	Displays Help window. (Refer to page 128)

• Changing parameter


Parameters related to "Start Command and Frequency (Speed) Setting Method". (Refer to the inverter manual for details of the parameters.)

Parameter Number	Name
79	Operation mode selection
338	Communication operation command source
339	Communication speed command source
340	Communication startup mode selection

2.2.10 Parameter List

After the required item is all set, parameter setting is configured based on the input setting. Parameter name and configured value is displayed in the Parameter List. To write the parameter setting to the inverter, write from the Parameter List in the Main frame. (Refer to page 91)

Click **Next>** to return to "Inverter Selection" window (Refer to page 44). To close Easy Setup, click **Finish** in "Inverter Selection" window.

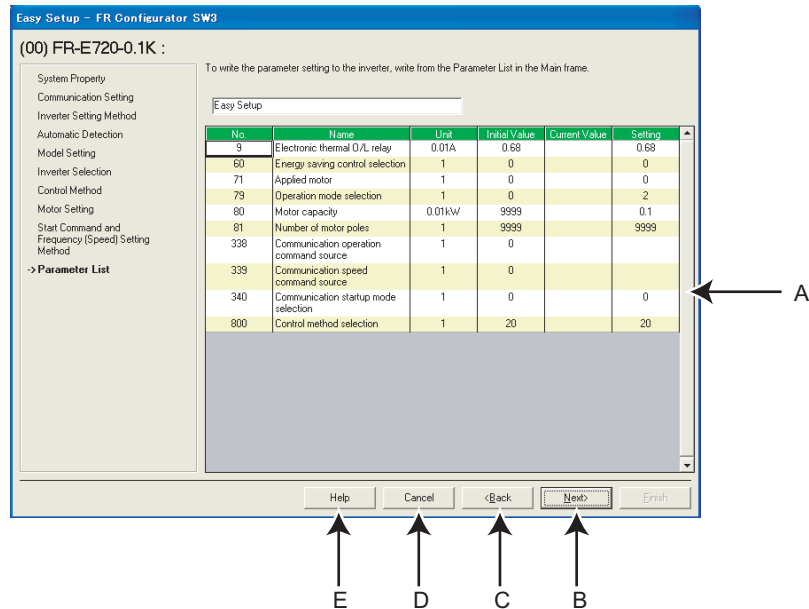

No.	Name	Function and description
A	Parameter setting field	Shows the parameter setting configured by Easy Setup in the list.
B	Next>	Proceeds to "Inverter Selection" (Refer to page 44).
C	<Back	Returns to "Start Command and Frequency (Speed) Setting Method" (Refer to page 47).
D	Cancel	Closes Easy Setup with the setting made invalid.
E	Help	Displays Help window. (Refer to page 128)

3 **SETTING WIZARD**

**This chapter explains the "Setting Wizard" of this product.
Always read the instructions before using the software.**

3.1	Overview of Setting Wizard.....	50
3.2	Details of Setting Wizard.....	53
3.3	Troubleshooting.....	59
3.4	Details of troubleshooting	63

1

2

3

4

5


3.1 Overview of Setting Wizard

3.1.1 Function outline

Setting Wizard can set parameters with wizard style dialog (interactive). Inputting or selecting required items for each function, and parameter setting can be made without regard to parameter number.

Double-click a desired function in the "Setting Wizard" (Refer to page 90) in System View (or select a function and click) to start the Setting Wizard of the selected function. Parameter setting is configured based on the input setting after the required item in each window is filled in. Configured parameter setting is displayed in Parameter List (Refer to page 52) when every setting is finished. Configured setting can be written to the inverter from Parameter List.

(1) Basic flow of Setting Wizard

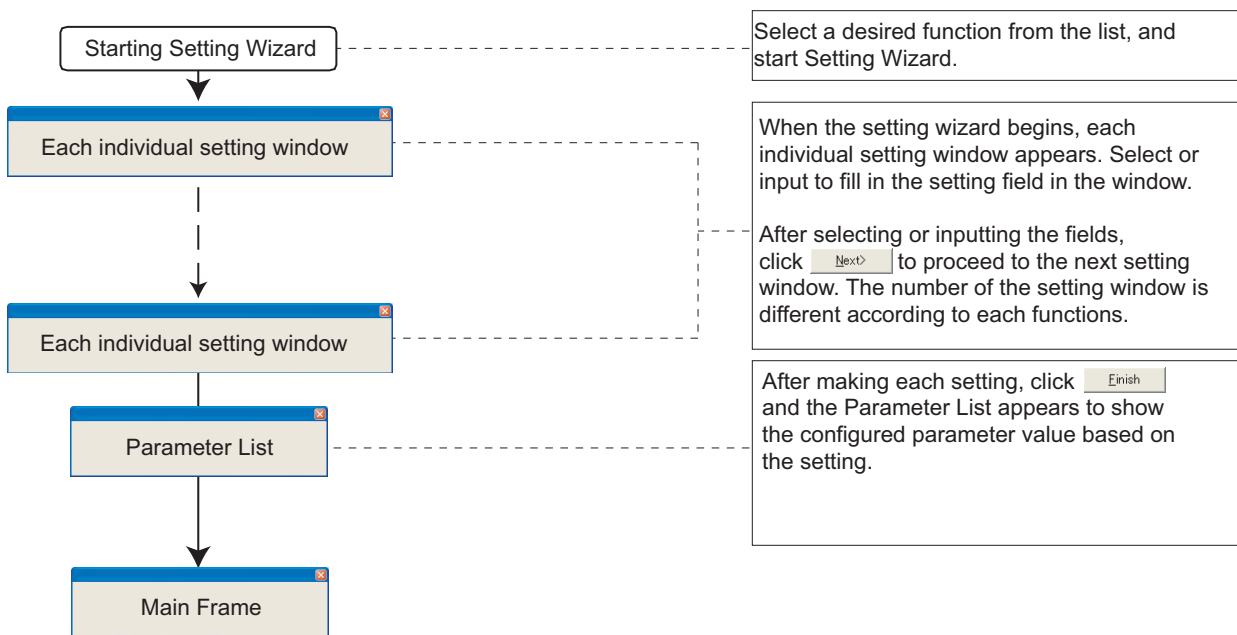


(2) Functions available for Setting Wizard

Function Name	Setting Item	Refer to Page
Acceleration/deceleration pattern and time setting	Acceleration/Deceleration Pattern Acceleration/Deceleration Time	53
Output Terminal (FM, AM) Calibration	Output Terminal (FM, AM) Calibration	54
Analog Input Terminal Calibration	Calibrating Terminal and Method Calibration Method (1) Calibration Method (2)	55
Tuning	Control Method Motor Setting Tuning Method Tuning	57

3.1.2 Individual setting window of Setting Wizard

Select a desired function of the "Setting Wizard" (Refer to page 90) in System View, and start the Setting Wizard. Input or select in a required field of each individual setting window, and click to proceed to the next individual setting window. Number of the items required to fill in is different according to the selected Setting Wizard.

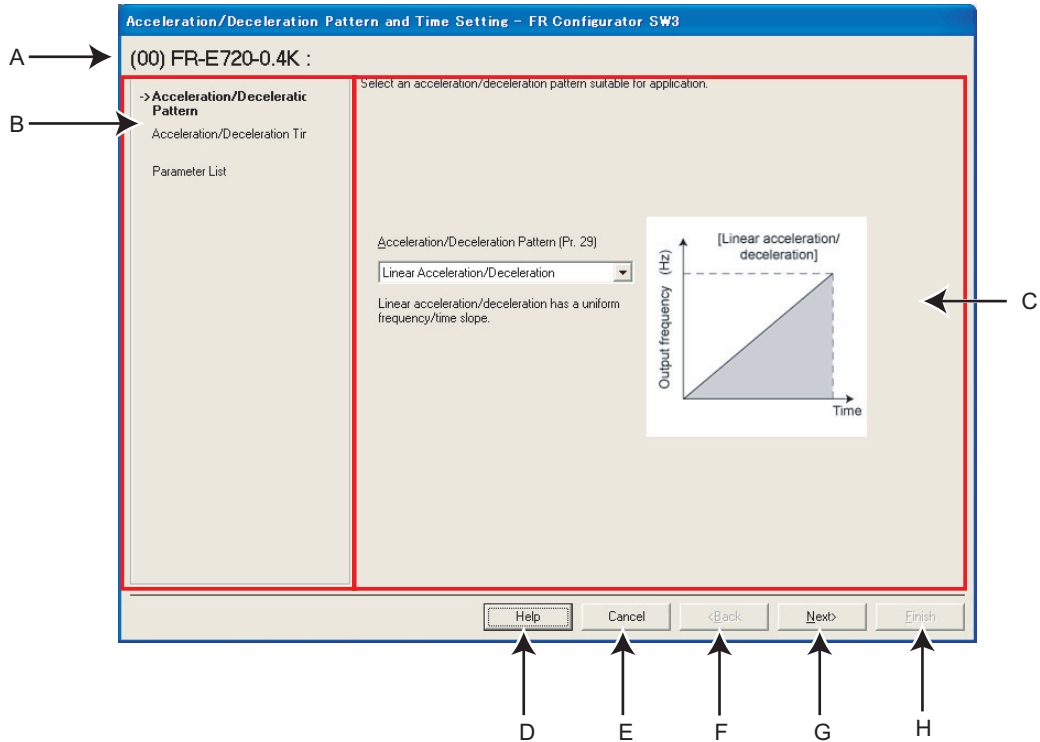


No.	Name	Function and description
A	Selected station number	Shows the selected station number, inverter type and a comment.
B	Setting procedure	Shows current setting description and next/previous setting in Setting Wizard.
C	Setting item field	Make a setting input. (Setting items are different according to each Setting Wizard and individual setting window.)
D	Help	Displays Help window. (Refer to page 128)
E	Cancel	Closes the window with the setting made invalid.
F	<Back	Returns to the previous setting window.
G	Next>	Proceeds to the next window.
H	Finish	Shows "Parameter List" with the setting made valid. (Parameter writing is not performed here.)

3.1.3 Parameter List

Click **Finish** after the required item in each setting is filled in, and then the parameter setting is configured based on the inputted setting. Configured parameter setting is displayed in Parameter List after every setting is finished.

To write the parameter setting to the inverter, write from the Parameter List in the Main frame. (Refer to page 91)

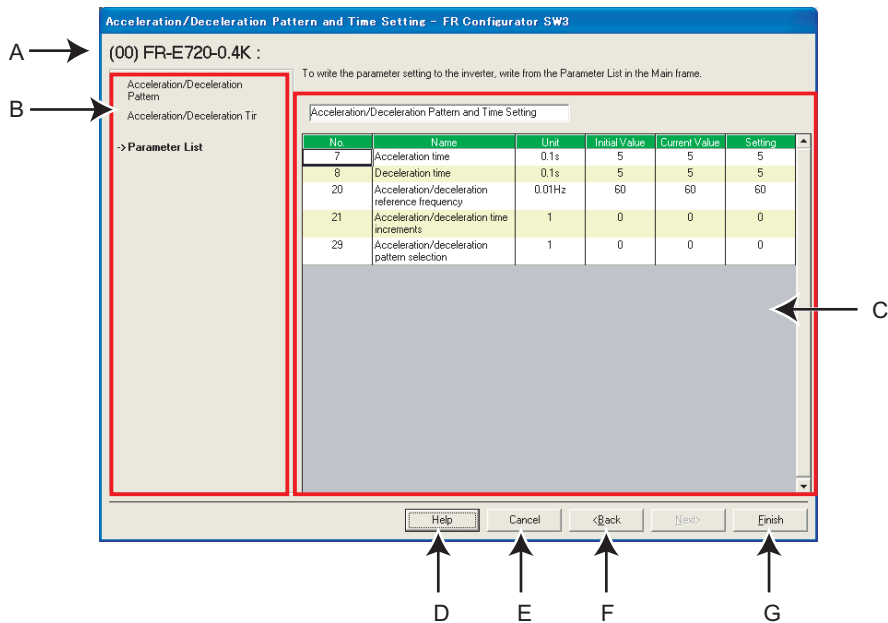


No.	Name	Function and description
A	Selected station number	Shows the selected station number, inverter type and a comment.
B	Setting procedure	Shows the past settings in Setting Wizard.
C	Parameter setting field	Shows the parameter setting configured in Setting Wizard in the list.
D	Help	Displays Help window. (Refer to page 128)
E	Cancel	Closes the window with the setting made invalid.
F	<Back	Returns to the previous setting window.
G	Finish	Closes Setting Wizard with the setting made valid. Configured setting by Setting Wizard is reflected into Parameter List. (Parameter writing to the inverter is not performed.)

3.2 Details of Setting Wizard

3.2.1 Acceleration/Deceleration Pattern and Time Setting

Select "Acceleration/Deceleration Pattern and Time Setting" from "Setting Wizard" (Refer to page 61) in System View to start the wizard of "Acceleration/Deceleration Pattern and Time Setting". Make acceleration/deceleration pattern and acceleration/deceleration time setting.

(1) Setting flow

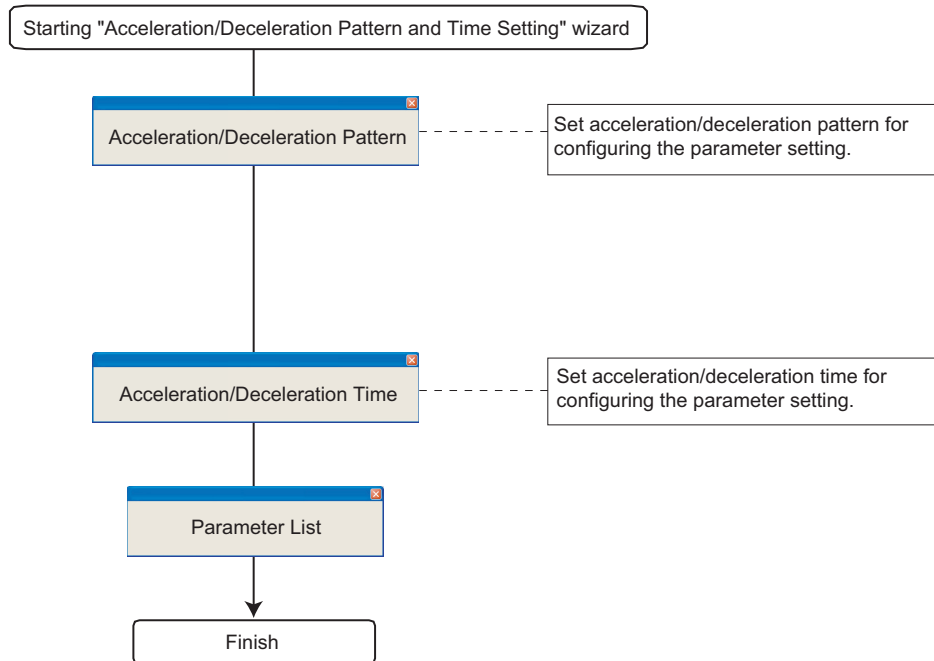

(2) Related parameters

Refer to the inverter manual for details of the parameters.

- Parameters related to "Acceleration/Deceleration Pattern"

Parameter Number	Name
29	Acceleration/deceleration pattern selection


- Parameters related to "Acceleration/Deceleration Time"

Parameter Number	Name
7	acceleration time
8	Deceleration time
20	Acceleration/deceleration reference frequency
21	Acceleration/deceleration time increments


3.2.2 Output Terminal(FM, AM) Calibration

Select "Output Terminal (FM, AM) Calibration" in the "Setting Wizard"(Refer to page 90) in System View to start "Output Terminal (FM, AM) Calibration". Terminal FM and terminal AM are calibrated.

(1) Setting flow

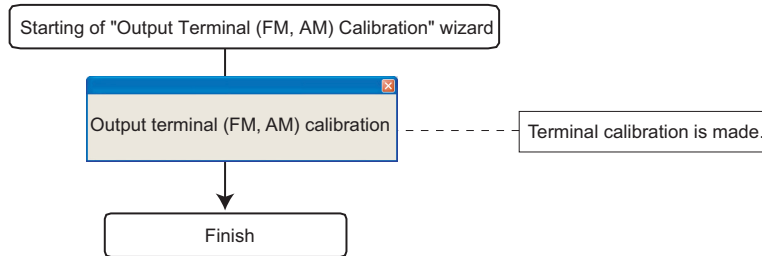

(2) Window explanation of Output Terminal Calibration

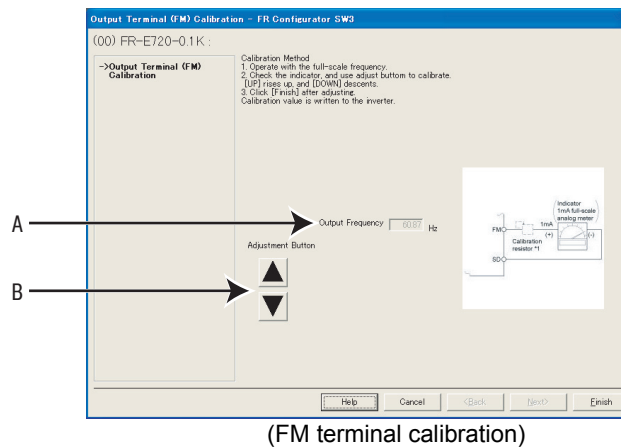

No.	Name	Function and Description
A	Output Frequency	Monitors frequency and displays.
B	Adjustment Button	Press up and down to make calibration.

(3) Related parameters

Refer to the inverter manual for details of the parameters.


• Parameters related to "Output Terminal (FM, AM) Calibration"

Parameter Number	Name
900	FM terminal calibration
901	AM terminal calibration


3.2.3 Analog Input Terminal Calibration

Select "Analog Input Terminal Calibration" in the "Setting Wizard" (Refer to page 90) in System View to start "Analog Input Terminal Calibration". Terminal 2 and terminal 4 are calibrated.

(1) Setting flow

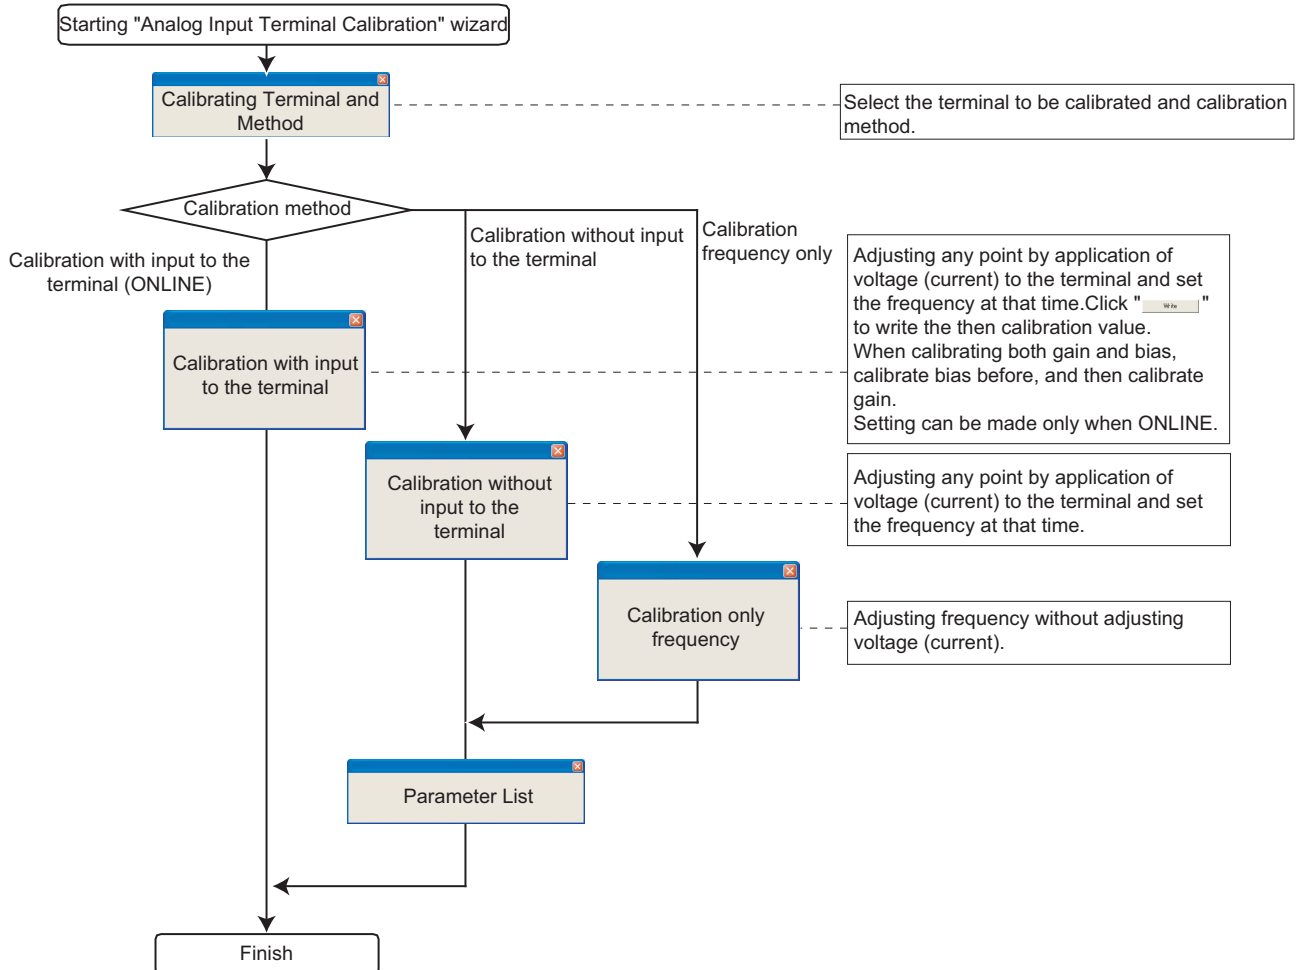

(2) Window explanation of Analog Input Terminal Calibration

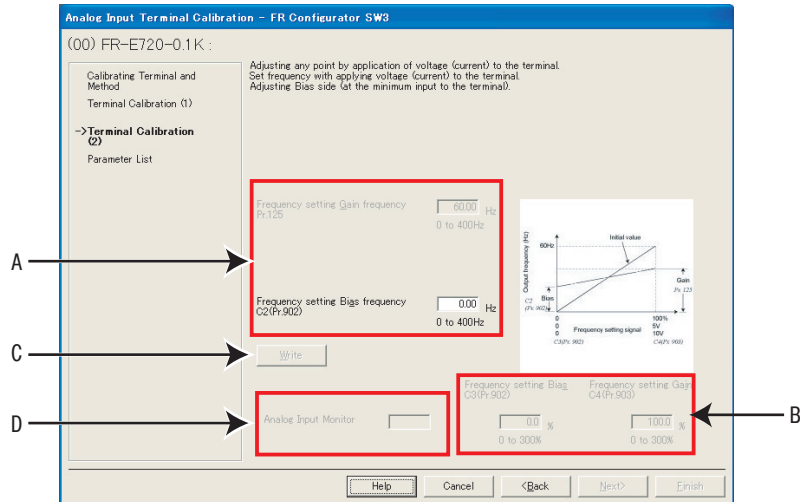

No.	Name	Function and Description
A	Frequency setting Gain frequency, Bias frequency	Set the frequency on the gain side, bias side.
B	Frequency setting Bias, Gain	Set the converted % of the voltage (current) on the gain or bias side. Available when making calibration without inputting to terminal.
C	Write	Writes a calibration value. (Available when making calibration without inputting to terminal.)
D	Analog Input Monitor	Monitors input to terminal 2, terminal 4 at intervals. Displays when making calibration with inputting to the terminal.

(3) Related parameters

Refer to the inverter manual for details of the parameters.


• Parameters related to "Analog Input Terminal Calibration"

Parameter Number	Name
125	Terminal 2 frequency setting gain frequency
126	Terminal 4 frequency setting gain frequency
241	Analog input display unit switchover
C2(902)	Terminal 2 frequency setting bias frequency
C3(902)	Terminal 2 frequency setting bias
C4(903)	Terminal 2 frequency setting gain
C5(904)	Terminal 4 frequency setting bias frequency
C6(904)	Terminal 4 frequency setting bias
C7(905)	Terminal 4 frequency setting gain


3.2.4 Tuning

Select "Tuning" in the "Setting Wizard" (Refer to page 90) in System View to start "Tuning" wizard. Tuning is performed after necessary parameter setting. Tuning is executed during the ONLINE mode only.

(1) Setting flow

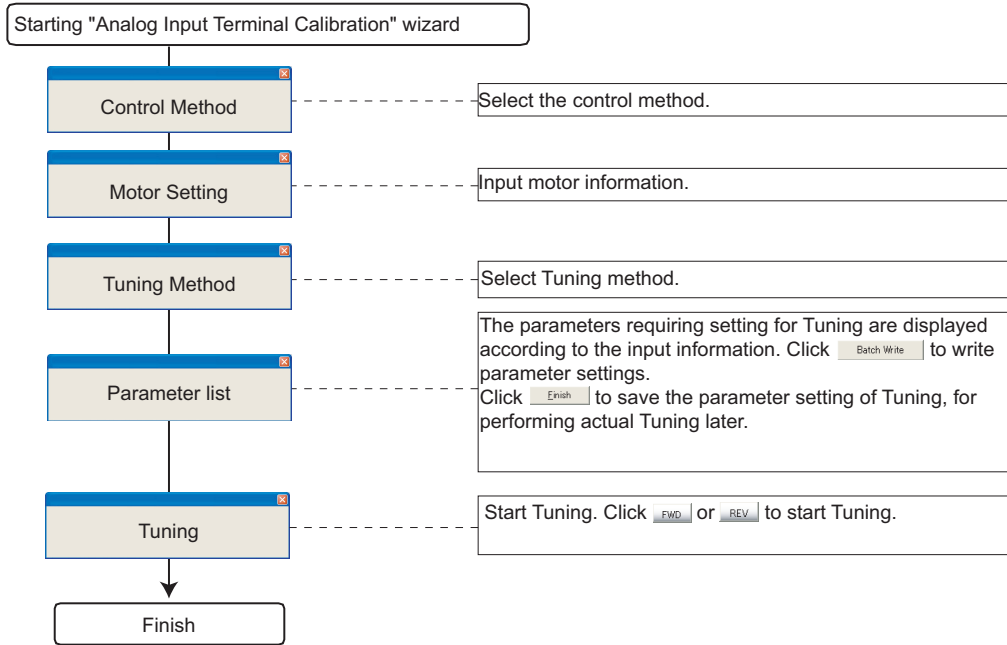

(2) Window explanation of Tuning

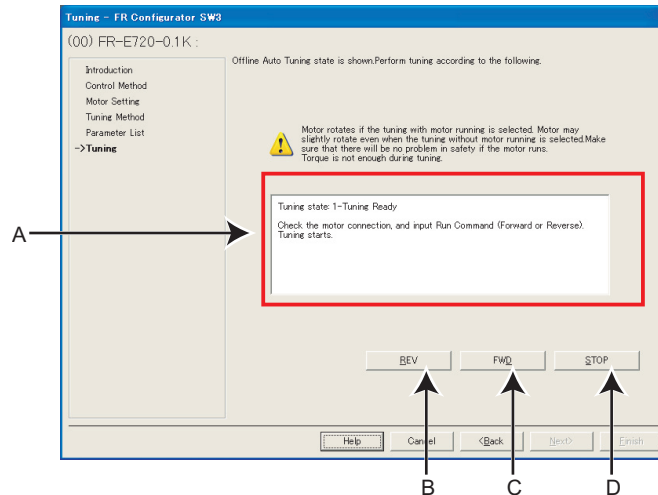

No.	Name	Function and Description
A	Tuning monitor	Displays progress of tuning.
B	Reverse rotation	Sends reverse rotation command to the inverter to start tuning.
C	Forward rotation	Sends forward rotation command to the inverter to start tuning.
D	Stop	Sends stop command to the inverter to stop tuning.

(3) Related parameters

Refer to the inverter manual for details of the parameters.

- Parameters related to "Control Selection"

Parameter Number	Name
60	Energy saving control selection
80	Motor capacity
81	Number of motor poles
800	Control method selection

- Parameters related to "Motor Setting"

Parameter Number	Name
9	Electronic thermal O/L relay
60	Energy saving control selection
71	Applied motor
80	Motor capacity
81	Number of motor poles
83	Rated motor voltage
84	Rated motor frequency
359	Encoder rotation direction
369	Number of encoder pulses
800	Control method selection

- Parameters related to "Tuning Method Selection"


Parameter Number	Name
96	Auto tuning setting/status

- Refer to the inverter manual for details of the parameter set by the tuning result.


3.3 Troubleshooting

3.3.1 Function Outline

Troubleshooting is a function that estimates causes of various troubles and take measures against them. By selecting necessary items and making a communication with the inverter, trouble causes can be estimated for taking measures.


Double-click an item in the "Troubleshooting" in System View (or select a function and click ) to start Troubleshooting.

(1) Basic flow of troubleshooting

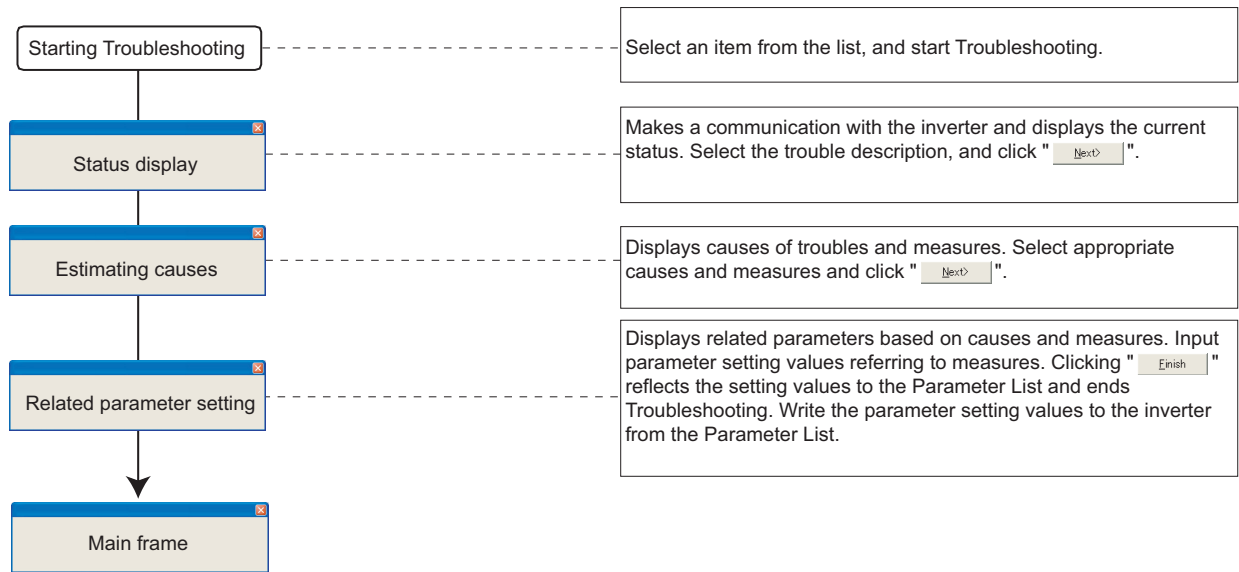

POINT

Troubleshooting includes items that estimate a cause by making communication with the inverter. Set the system ONLINE to perform Troubleshooting if possible. When a troubleshooting which requires communication is started during OFFLINE, the screen on the right appears. Refer to Help to find trouble causes, and take appropriate measures.

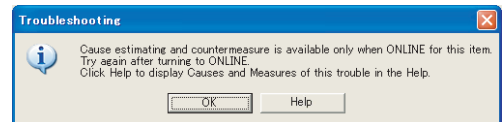

Note

When simple mode parameters or user group parameters are displayed, troubleshooting which requires communication can not be started. Cancel simple mode parameter or user group parameter display before starting troubleshooting. Pr. 160 User group read selection="0"


(2) Check item of troubleshooting

Item	Require Communication	Referto Page
Motor does not rotate as commanded	Yes	63
Motor does not rotate	Yes	64
Motor rotation direction does not change	Yes	64
Motor coasts.	Recommended	66
Motor current is large	Recommended	67
Acceleration/deceleration is not as commanded	Recommended	68
External device (peripheral) malfunctions	No	69
Operation mode does not change	Yes	70
Unable to write parameter setting	Yes	73
Unable to communicate	No	75

3.3.2 Status Display

Status Display windows appears when Troubleshooting is started. (Note that Cause Estimate window (Refer to page 61) appears instead of Status Display for Troubleshooting which does not require communication with the inverter.)


The current inverter state and I/O terminal (signal) is shown. Condition setting field at trouble occurrence is provided according to Troubleshooting items. Click after selecting conditions.

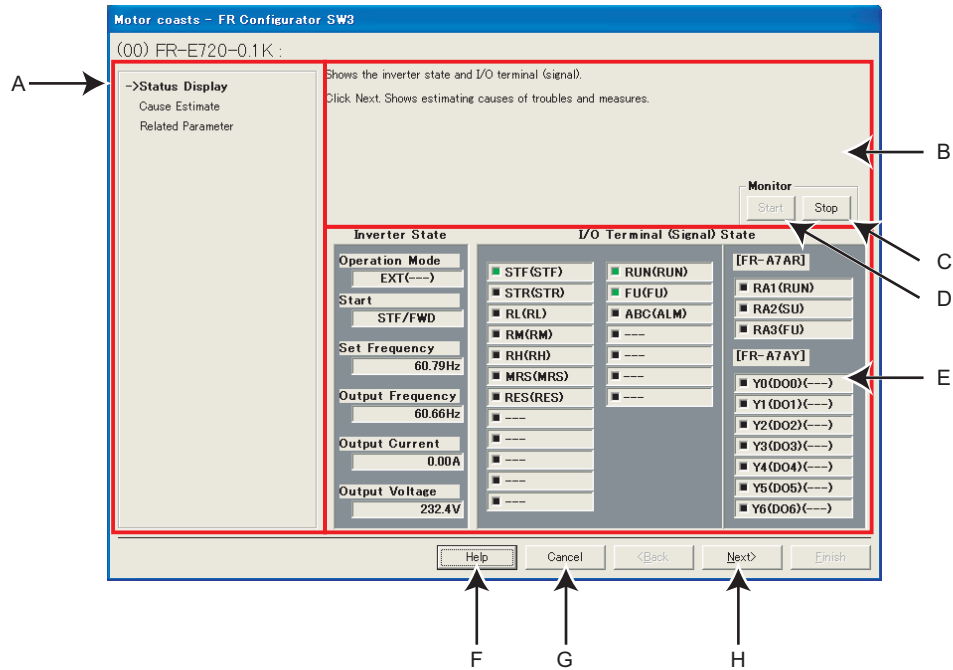

No.	Name	Function and Description
A	Setting Procedure	Displays the current, previous, and next setting in Troubleshooting.
B	Condition setting field	Select a condition of trouble occurrence.
C	Stop	Suspends monitoring and holds the status. Use when trouble occurs at a certain condition. Click at the trouble occurrence, and stop the monitor, to narrow down the causes.
D	Start	Click to restart monitoring.
E	State	Displays the inverter state and I/O terminal (signal).
F	Help	Displays Help window. (Refer to page 128)
G	Cancel	Closes the window with the setting made invalid.
H	Next>	Causes estimate window. (Refer to page 61)

3.3.3 Cause Estimate

Displays estimated causes and measures. Set conditions in the condition setting field if OFFLINE, to display estimated causes and measures. Select a probable cause from the list and click **Next>**.

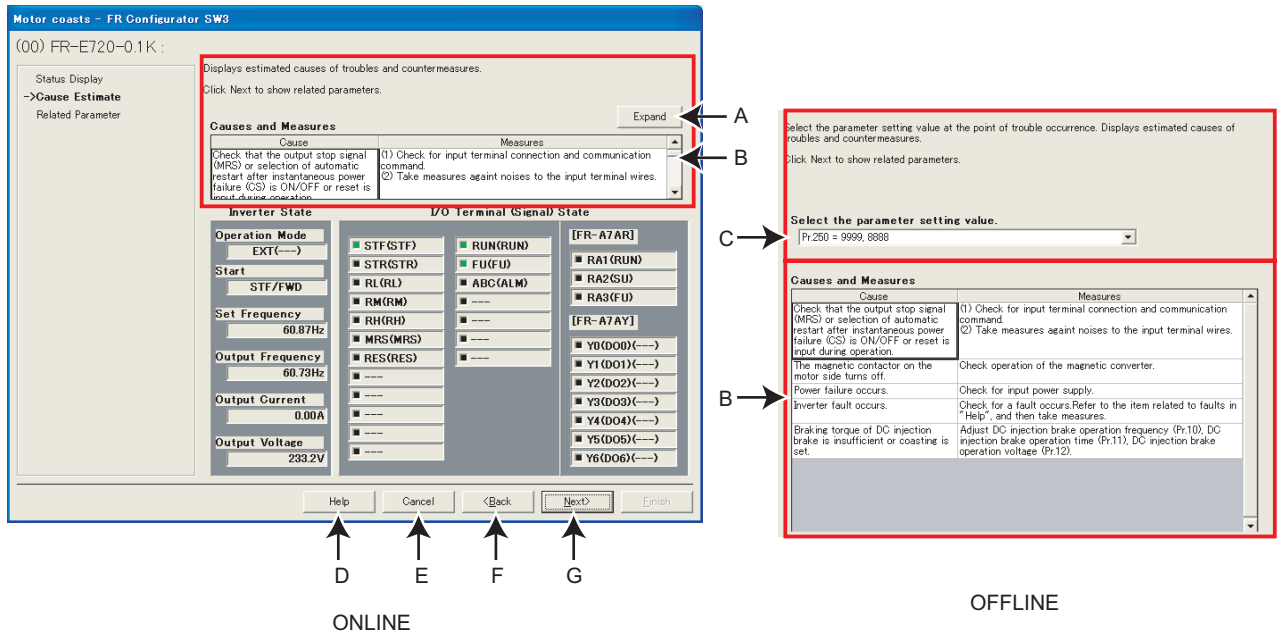


No.	Name	Function and Description
A	Expand	Displays field for causes and measures.
B	Causes and Measures	Displays causes of the trouble and measures. Click Next> after selecting probable cause. Double click (or select and press F1 key) the cause in the table to show the corresponding Help window.
C	Condition setting field	Select condition of the trouble occurrence.
D	Help	Displays Help window. (Refer to page 128)
E	Cancel	Closes the window with the setting made invalid.
F	<Back	Returns to the Status Display window. (Refer to page 60)
G	Next>	Displays parameter setting window. (Refer to page 62)

3.3.4 Parameter Setting

Displays parameters related to the selected cause. Check the measures, and change parameter settings. Click Finish to reflect the changed setting into the Parameter List, and returns to the Main frame.

To write the parameter setting to the inverter, write from the Parameter List in the Main frame. (Refer to page 91)

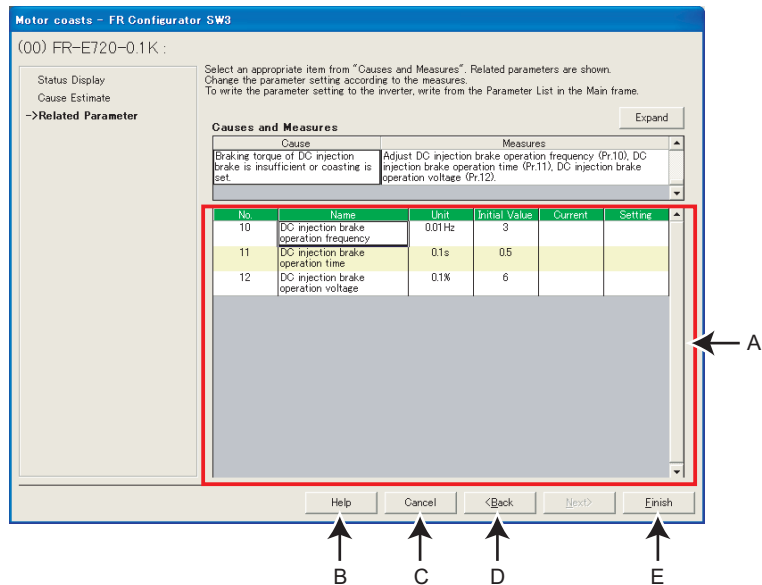

No.	Name	Function and Description
A	Parameter setting field	Displays parameters related to the cause. Check the measures, and change parameter settings.
B	Help	Displays Help window. (Refer to page 128)
C	Cancel	Closes the window with the setting made invalid.
D	<Back	Returns to the causes Estimate window. (Refer to page 61)
E	Finish	Closes Troubleshooting with the setting valid. Configured setting by Troubleshooting is reflected into Parameter List. (Parameter writing to the inverter is not performed.)

3.4 Details of troubleshooting

The following shows a list of causes supported in the troubleshooting. Take measures after checking possible causes. Refer to the inverter manual for details.

3.4.1 Motor does not rotate as commanded

- Main causes

Cause	Measures	Related Parameters
The set frequency is higher than the maximum frequency (Pr. 1, 18) .	Set the maximum frequency (Pr. 1, 18) higher than the set frequency.	Pr. 1, 18
The set frequency is lower than the minimum frequency (Pr. 2).	Set the minimum frequency (Pr. 2) lower than the set frequency.	Pr. 2
The set frequency is within the frequency jump (Pr. 31 to Pr. 36) .	Change the range of the frequency jump Pr. 31 to Pr. 32, Pr. 33 to Pr. 34, Pr. 35 to Pr. 36 so that the set frequency will not overlap.	Pr. 31 to 36
PID control activated	Cancel PID control.	Pr. 128
Stall prevention (current limit/voltage limit) is activated.	(1) Adjust torque boost (Pr. 0, etc.) (2) Set a larger value in acceleration/deceleration time (Pr. 7, Pr. 8, etc.). (3) Reduce the load weight. (4) Try other control method. (5) Increase stall prevention level (Pr. 22, etc.), or limit stall prevention operation using stall prevention operation selection (Pr. 156).	(1)Pr. 0, 46, 112 (2)Pr. 7, 8, 44, 45, 110, 111 (4)Pr. 71, 80, 81, 83, 84, 96, 450, 451, 453, 454, 456, 457, 463, 800 (5)Pr. 22, 23, 48, 114, 156

- Causes related to V/F control

Cause	Measures	Related Parameters
Torque boost setting may not be an appropriate value.	Adjust torque boost (Pr. 0, etc.)	Pr. 0, 46, 112
V/F pattern setting may not be an appropriate value.	Adjust V/F pattern related parameters(Pr. 3, 14, 19, etc.)	Pr. 3, 14, 19, 47, 113
Set frequency is unstable due to external noises	(1)Take noise measures. (2)Set a larger value in filter time constant parameter (Pr. 74, etc.).	Pr. 74, 822, 832
Load fluctuation	Take measures to prevent load from changing greatly.	-
Power supply voltage fluctuation	Check the power supply voltage.	-

- Causes other than V/F control

Cause	Measures	Related Parameters
Frequency fluctuation of magnetic flux vector control	Try other control method.	Pr. 71, 80, 81, 83, 84, 96, 450, 451, 453, 454, 456, 457, 463, 800
Set frequency is unstable due to external noises	(1)Take noise measures. (2)Set a larger value in filter time constant parameter (Pr. 74, etc.).	Pr. 74, 822, 832
Load fluctuation	Take measures to prevent load from changing greatly.	-
Power supply voltage fluctuation	Check the power supply voltage.	-

3.4.2 Motor does not rotate, or motor rotation direction does not change

- Main causes

Cause	Measures	Related Parameters
The motor is at a stop due to fault occurrence. Occurred fault : xxx	Refer to the item related to faults in "Help" and then take measures.	-
The main circuit power (R/L1, S/L2, T/L3) is not ON or the power supply phase is lost.	Check the main circuit power (R/L1, S/L2, T/L3) is ON. When high power factor converter, power supply regeneration common converter, etc. is used (driving by DC power input to P and N), check the setting of regenerative function selection (<i>Pr: 30</i>) .	<i>Pr: 30</i>
Power is not ON or input voltage is insufficient.	Check that the power is ON. Check that the input voltage is not insufficient.	-
Both the STF and STR signals are ON or OFF.	Turn ON the signal for the direction to which the motor is made to run and OFF the other signal.	-
The MRS signal is ON.	Turn off the MRS signal.	-
The start frequency is larger than the set frequency.	Set the start frequency (<i>Pr: 13</i>) lower than the set frequency.	<i>Pr: 13</i>
Although the running speed is entered to terminal 4, the AU signal is OFF.	Turn the AU signal ON.	-
The inverter operates in PU mode and forward rotation/reverse rotation command is not entered.	Give forward rotation or reverse rotation command.	-
The maximum frequency is smaller than the start frequency.	Set the maximum frequency (<i>Pr: 1, Pr: 18</i>) to larger than the start frequency (<i>Pr: 13</i>), or set the start frequency (<i>Pr: 13</i>) smaller than the maximum frequency (<i>Pr: 1, Pr: 18</i>) .	<i>Pr: 1, 13, 18</i>
Automatic restart after instantaneous power failure is valid and CS signal is OFF.	Make automatic restart after instantaneous power failure invalid and turn the CS signal ON.	<i>Pr: 57</i>
Reverse rotation prevention selection is set.	Change the reverse rotation prevention selection (<i>Pr: 78</i>) setting to allow the desired rotation direction.	<i>Pr: 78</i>
PID control activated	Cancel PID control.	<i>Pr: 128</i>
Stall prevention (current limit/voltage limit) or regeneration avoidance is activated.	<p>1. Common Check the motor connection.</p> <p>2. Current limit (1)Execute trouble shooting of "Motor current is large" (2)Adjust torque boost (<i>Pr: 0, etc.</i>) (3)Adjust V/F pattern parameters (<i>Pr: 3, 14,19, etc.</i>) (4)Set a larger value in acceleration/deceleration time (<i>Pr: 7, Pr: 8, etc.</i>). (5)Reduce the load weight. (6)Try other control method. (7)Increase stall prevention level (<i>Pr: 22, etc.</i>), or limit stall prevention operation using stall prevention operation selection (<i>Pr: 156</i>).</p> <p>3. Voltage limit Set a longer deceleration time (<i>Pr: 8</i>) .</p> <p>4. Regeneration avoidance operation (1)Set a longer deceleration time (<i>Pr: 8</i>) . (2)Adjust regeneration avoidance parameters.</p>	<p>2. (2) <i>Pr: 0, 46, 112</i> (3) <i>Pr: 3, 14, 19, 47, 113</i> (4) <i>Pr: 7, 8, 44, 45, 110, 111</i> (6) <i>Pr: 71, 80, 81, 83, 84, 96, 450, 451, 453, 454, 456, 463, 800</i> (7) <i>Pr: 22, 23, 48, 114, 156</i></p> <p>3.<i>Pr: 8</i></p> <p>4. (1) <i>Pr: 8</i> (2) <i>Pr: 665, 882, 883, 884, 885, 886</i></p>

- Causes related to V/F control, general-purpose magnetic flux vector control/advanced magnetic flux vector control

Cause	Measures	Related Parameters
The current limit is activated.	(1)Execute trouble shooting of "Motor current is large" (2)Increase stall prevention level (<i>Pr. 22, etc.</i>) or limit stall prevention operation using stall prevention operation selection (<i>Pr. 156</i>).	(2) <i>Pr. 22, 23, 48, 114, 156</i>
Load is heavy.	Check the load.	-
The motor is not connected securely.	Check the motor connection.	-

- Causes related to real sensorless vector control

Cause	Measures	Related Parameters
Torque limit is actuated.	(1) Execute trouble shooting of "Motor current is large" (2) Adjust torque limit level (<i>Pr. 22, etc.</i>)	(2) <i>Pr. 22, 803, 812, 813, 814, 815, 816, 817, 874</i>
Load is heavy.	Check the load.	-

- Causes related to vector control

Cause	Measures	Related Parameters
Torque limit is actuated.	(1) Execute trouble shooting of "Motor current is large" (2) Adjust torque limit level (<i>Pr. 22, etc.</i>)	(2) <i>Pr. 22, 803, 812, 813, 814, 815, 816, 817, 874</i>
Load is heavy.	Check the load.	-
The encoder setting is not an appropriate value.	Check the setting of encoder rotation direction (<i>Pr. 359</i>) and number of encoder pulses (<i>Pr. 369</i>) .	<i>Pr. 359, 369</i>
The motor is not connected securely.	(1) Check the motor connection. (2) Check the phase sequence of the motor.	-

3.4.3 Motor coasts

Cause	Measures	Related Parameters
The stop selection (<i>Pr. 250</i>) is selected.	Change the stop selection (<i>Pr. 250</i>) setting to cancel coasting to a stop.	<i>Pr. 250</i>
Check that the output stop signal (MRS) or selection of automatic restart after instantaneous power failure (CS) is ON/OFF or reset is input during operation.	(1)Check for input terminal connection and communication command. (2)Take measures against noises to the input terminal wires.	-
The magnetic contactor on the motor side turns OFF.	Check operation of the magnetic contactor.	-
Power failure occurs.	Check for input power supply.	-
Inverter fault occurs.	Check for a fault occurs. Refer to the item related to faults in "Help" and then take measures.	-
Braking torque of DC injection brake is insufficient or coasting is set.	Adjust DC injection brake operation frequency (<i>Pr. 10</i>), DC injection brake operation time (<i>Pr. 11</i>), DC injection brake operation voltage (<i>Pr. 12</i>).	<i>Pr. 10, 11, 12</i>

3.4.4 Motor current is large

- Causes under V/F control

Cause	Measures	Related Parameters
Torque boost (<i>Pr. 0, etc.</i>) setting is too large.	Decrease torque boost (<i>Pr. 0, etc.</i>) setting.	<i>Pr. 0, 46, 112</i>
Check that the V/F control related parameter setting is not an appropriate value.	Adjust torque boost (<i>Pr. 0, etc.</i>), base frequency (<i>Pr. 3, etc.</i>), base frequency voltage (<i>Pr. 19</i>), load pattern selection (<i>Pr. 14</i>).	<i>Pr. 0, 3, 14, 19, 46, 47, 112, 113</i>
Load is heavy.	Check the load.	-
The acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>) setting is too small.	Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>).	<i>Pr. 7, 8, 44, 45, 110, 111</i>
Load inertia (GD2) is too large.	(1) Decrease inertia (GD2) (2) Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>).	(2) <i>Pr. 7, 8, 44, 45, 110, 111</i>

- Causes other than V/F control

Cause	Measures	Related Parameters
Motor specifications setting is not appropriate.	Check that the motor specifications setting is correct.	<i>Pr. 71, 80, 81, 83, 84, 450, 453, 454, 456, 457</i>
Offline auto tuning is not performed.	Perform Offline auto tuning.	<i>Pr. 96, 463</i>
Load is heavy.	Check the load.	-
The acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>) setting is too small.	Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>).	<i>Pr. 7, 8, 44, 45, 110, 111</i>
Load inertia (GD2) is too large.	(1) Decrease inertia (GD2) (2) Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>).	(2) <i>Pr. 7, 8, 44, 45, 110, 111</i>

3.4.5 Acceleration/deceleration is not as commanded

- Causes under V/F control

Cause	Measures	Related Parameters
The acceleration/deceleration time(<i>Pr. 7, Pr. 8, etc.</i>) setting is too small.	Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>). (In vertical lift applications, set a smaller value.)	<i>Pr. 7, 44, 110</i>
The V/F control parameter setting is not an appropriate value.	Adjust torque boost (<i>Pr. 0, etc.</i>), base frequency (<i>Pr. 3, etc.</i>), base frequency voltage (<i>Pr. 19</i>), load pattern selection (<i>Pr. 14</i>).	<i>Pr. 0, 3, 14, 19, 46, 47, 112, 113</i>
Stall prevention is activated due to heavy load (GD2).	Increase stall prevention level (<i>Pr. 22, etc.</i>) or limit stall prevention operation using stall prevention operation selection (<i>Pr. 156</i>).	<i>Pr. 22, 156</i>

- Causes under control other than V/F control

Cause	Measures	Related Parameters
The acceleration/deceleration time(<i>Pr. 7, Pr. 8, etc.</i>) setting is too small.	Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>). (In vertical lift applications, set a smaller value.)	<i>Pr. 7, 44, 110</i>
Motor specifications setting is not appropriate.	Check that the motor specifications setting is correct.	<i>Pr. 71, 80, 81, 83, 84, 450, 453, 454, 456, 457</i>
Stall prevention operation or regeneration avoidance function is set.	(1)Execute trouble shooting of "Motor current is large" (2)Set a larger value in acceleration/deceleration time (<i>Pr. 7, Pr. 8, etc.</i>). (3)Try other control method. (4)Increase stall prevention level (<i>Pr. 22, etc.</i>) or limit stall prevention operation using stall prevention operation selection (<i>Pr. 156</i>). (5)Adjust regeneration avoidance related parameters.	(2) <i>Pr. 7, 8, 44, 45, 110, 111</i> (3) <i>Pr. 71, 80, 81, 83, 84, 96, 450, 451, 453, 454, 456, 457, 463, 800</i> (4) <i>Pr. 22, 23, 48, 114, 156</i> (5) <i>Pr. 665, 882, 883, 884, 885, 886</i>
Offline auto tuning is not performed.	Perform Offline auto tuning.	<i>Pr. 96, 463</i>
Load is heavy.	Check the load.	-

3.4.6 External device (peripherals) malfunctions

- Causes related to overcurrent relay

Cause	Measures	Related Parameters
Current is large.	Execute trouble shooting of "Motor current is large"	-
Leakage current is large.	(1) Decrease the setting value of PWM frequency selection (<i>Pr. 72</i>).	(1) <i>Pr. 72</i>
The overcurrent relay (OCR) setting is small.	Set a value 1.1 times of 60Hz rated current.	-

- Causes related to the earth leakage current breaker

Cause	Measures	Related Parameters
Leakage current is large.	(1) Decrease the setting value of PWM frequency selection (<i>Pr. 72</i>). (2) Use a breaker designed for harmonic and surge suppression (3) Use a low-permittivity cable. (4) Shorten the wiring length between the motor and inverter.	(1) <i>Pr. 72</i>
The rated sensitivity current of the earth leakage current breaker is small	Increase the rated sensitivity current of the earth leakage current breaker.	-

- Other causes

Cause	Measures	Related Parameters
The setting value of PWM frequency selection (<i>Pr. 72</i>) is too large.	Decrease the setting value of PWM frequency selection (<i>Pr. 72</i>).	<i>Pr. 72</i>
Electromagnetic interference	(1) Separate a signal cable from a power cable. (2) Install a common mode filter. (3) Use a twisted pair cable (4) Route wires using metal conduit.	-
Misoperation caused by undesirable currents when a programmable controller is connected.	Use terminal PC as a common terminal, and perform wiring.	-

3.4.7 Operation mode does not change

- Causes during operation

Cause	Measures	Related Parameters
Operation mode can not be changed during operation with the current parameter setting.	Change the operation mode after stopping operation. Change operation mode selection(<i>Pr. 79</i>) to change the operation mode during operation.	<i>Pr. 79</i>

- Causes when changing from NET operation mode to PU operation mode

Cause	Measures	Related Parameters
Operation mode can not be directly changed from NET operation to PU operation with the current parameter setting.	After changing to EXT operation, change to PU operation. If the operation mode will not change to EXT operation, return to "Status Display" screen to execute troubleshooting of "Operation mode does not change to EXT". Change communication start up mode selection(<i>Pr. 340</i>) to change directly to PU operation. After changing <i>Pr. 340</i> , reset the inverter.	<i>Pr. 340</i>
By making parameter setting, operation mode can be changed.	Set 1 in operation mode selection(<i>Pr. 79</i>) .	<i>Pr. 79</i>
Operation mode is specified with X16, X65, and X66 signals. (when X16, X65, and X66 signals are assigned)	Select the PU operation mode by setting as shown below. (1)X65 signal is ON (when only X65 signal is assigned) (2)X66 signal is OFF and X16 signal is OFF (when only X16 and X66 signals are assigned) (3)X66 signal is OFF and X65 signal is ON or X16 signal is OFF (when all X16, X65 and X66 signals are assigned)	-
Command for changing to PU operation mode from NET operation mode is given only from the operation location with PU operation control source. (when X16, X65, and X66 signals are not assigned)	Change the operation mode from the operation location with control source.	-

- Causes when changing from EXT and NET operation mode to PU operation mode

Cause	Measures	Related Parameters
Operation mode is specified with X16, X65, and X66 signals. (when X16, X65, and X66 signals are assigned)	Select the PU operation mode by setting as shown below. (1)X16 signal is OFF (when only X16 signal is assigned) (2)X66 signal is OFF and X16 signal is ON (when only X16 and X66 signals are assigned) (3)X66 signal is OFF and X65 signal is ON or X16 signal is OFF (when all X16, X65 and X66 signals are assigned)	-
Command for changing to PU operation mode from EXT operation mode is given only from the operation location with PU operation control source. (when X16, X65, and X66 signals are not assigned)	Change the operation mode from the operation location with control source.	-
By making parameter setting, operation mode can be changed.	Set 1 in operation mode selection(<i>Pr. 79</i>) .	<i>Pr. 79</i>
Operation mode change is restricted with X12 and MRS signals.	When X12 signal is assigned, turn ON X12. When X12 signal is not assigned, turn ON MRS.	-

- Causes when changing from PU operation mode to EXT operation mode

Cause	Measures	Related Parameters
Operation mode is specified with X16, X65, and X66 signals. (when X16, X65, and X66 signals are assigned)	Select the EXT operation mode by setting as shown below. (1)X16 signal is ON (when only X16 signal is assigned) (2)X66 signal is OFF and X16 signal is ON (when only X16 and X66 signals are assigned) (3)X66 signal is OFF and X65 signal is OFF and X16 signal is ON (when all X16, X65 and X66 signals are assigned)	-
Command for changing to EXT operation mode from PU operation mode is given only from the operation location with PU operation control source. (when X16, X65, and X66 signals are not assigned)	Change the operation mode from the operation location with control source.	-
By making parameter setting, operation mode can be changed. (when X16, X65, and X66 signals are not assigned)	Set 2 in operation mode selection(Pr. 79) .	Pr. 79
Restricted by parameter setting.	Set 0, 1, or 2 in communication startup mode selection (Pr. 340), and reset the inverter.	Pr. 340
Operation mode change is restricted with X12 and MRS signals.	When X12 signal is assigned, turn OFF X12. When X12 signal is not assigned, turn OFF MRS.	-

- Causes when changing from NET operation mode to EXT operation mode

Cause	Measures	Related Parameters
Restricted by parameter setting.	Set 0, 1, or 2 in communication startup mode selection (Pr. 340), and reset the inverter.	Pr. 340
Operation mode is specified with X16, X65, and X66 signals. (when X16, X65, and X66 signals are assigned)	Select the EXT operation mode by setting as shown below. (1)X66 signal is ON (when only X66 signal is assigned) (2)X66 signal is OFF and X16 signal is ON (when only X16 and X66 signals are assigned) (3)X66 signal is OFF and X65 signal is OFF and X16 signal is ON (when all X16, X65 and X66 signals are assigned)	-
Command for changing to EXT operation mode from NET operation mode is given only from the operation location with NET operation control source. (when X16, X65, and X66 signals are not assigned)	Change the operation mode from the operation location with control source.	-
Operation mode change is restricted with X12 and MRS signals.	When X12 signal is assigned, turn OFF X12. When X12 signal is not assigned, turn OFF MRS.	-

- Causes when changing from EXT operation mode to NET operation mode

Cause	Measures	Related Parameters
Operation mode is specified with X16, X65, and X66 signals. (when X16, X65, and X66 signals are assigned)	Select the NET operation mode by setting as shown below. (1)X66 signal is ON (when only X66 signal is assigned) (2)X66 signal is ON (when only X16 and X66 signals are assigned) (3)X66 signal is ON (when all X16, X65 and X66 signals are assigned)	-
Command for changing to NET operation mode from EXT operation mode is given only from the operation location with NET operation control source. (when X16, X65, and X66 signals are not assigned)	Change the operation mode from the operation location with control source.	-
By making parameter setting, operation mode can be changed. (when X16, X65, and X66 signals are not assigned)	Set a value other than 0 in communication startup mode selection (<i>Pr. 340</i>) to reset the inverter.	<i>Pr. 340</i>
Restricted by parameter setting.	Set 0 in operation mode selection (<i>Pr. 79</i>). After changing to PU operation mode, change to NET operation mode.	<i>Pr. 79</i>
Operation mode change is restricted with X12 and MRS signals.	When X12 signal is assigned, turn ON X12. When X12 signal is not assigned, turn ON MRS.	-

- Causes when changing from PU operation mode to NET operation mode

Cause	Measures	Related Parameters
Operation mode can not be directly changed from PU operation to NET operation with the current parameter setting.	After changing to EXT operation, change to NET operation. If the operation mode will not change to EXT operation, return to "Status Display" screen to execute troubleshooting of "EXT Operation". Change communication start up mode selection(<i>Pr. 340</i>) to change directly to PU operation. After changing <i>Pr. 340</i> , reset the inverter.	<i>Pr. 340</i>
Operation mode is specified with X16, X65, and X66 signals. (when X16, X65, and X66 signals are assigned)	Select the NET operation mode by setting as shown below. (1)X65 signal is ON (2)X66 signal is ON (when only X16 and X66 signals are assigned) (3)X66 signal is ON (when all X16, X65 and X66 signals are assigned)	-
Command for changing to NET operation mode from PU operation mode is given only from the operation location with PU operation control source. (when X16, X65, and X66 signals are not assigned)	Change the operation mode from the operation location with control source.	-

3.4.8 Unable to write parameter setting

- Causes during operation

Cause	Measures	Related Parameters
Parameters can not be changed during operation with the current setting.	Change parameters after stopping operation. Some parameters can be changed during operation by setting "2" in parameter write selection (Pr. 77).	Pr. 77

- Causes related simple mode and user group setting

Cause	Measures	Related Parameters
Parameters which for displaying and changing are restricted.	Set 0 in User group read selection (Pr. 160) to cancel restrictions.	Pr. 160

- Causes related to parameter write selection

Cause	Measures	Related Parameters
Parameter write is restricted.	Set 0 or 2 in parameter write selection (Pr. 77) .	Pr. 77

- Causes when writing from the FR-E700 inverter operation panel

Cause	Measures	Related Parameters
Parameter write command source is not set.	After removing the parameter unit and USB, set "9999" in PU mode control source selection (Pr. 551), and reset the inverter.	Pr. 551
PU operation mode is not selected.	Change to PU operation mode.	Pr. 79, 340

- Causes when writing from the PU connector (operation panel/parameter unit)

Cause	Measures	Related Parameters
Parameter write command source is not set.	(1)After removing the USB, set "9999" in PU mode control source selection (Pr. 551) , and reset the inverter. (2)After setting "2" in PU mode command source selection (Pr. 551) , reset the inverter.	Pr. 551
PU operation mode is not selected.	Change to PU operation mode.	Pr. 79, 340

- Causes when writing from the PU connector (RS-485 communication) of the FR-E700

Cause	Measures	Related Parameters
Parameter write command source is not set.	(1)After removing the communication option, set "9999" in NET mode command source selection (Pr. 550) to reset the inverter. (2)After setting "2" in NET mode command source selection (Pr. 550) and a value other than 2 in PU mode command source selection (Pr. 551) , reset the inverter.	Pr. 550, 551
Parameter write command source is set in the PU mode	After setting a value other than "2" in PU mode command source selection (Pr. 551) , reset the inverter.	Pr. 551
NET operation mode is not selected.	Change to NET operation mode.	Pr. 79, 340

- Causes when writing from the USB connector

Cause	Measures	Related Parameters
Parameter write command source is not set.	[FR-E700] After setting "9999, 3" in PU mode command source selection (Pr. 551) , reset the inverter.	Pr. 551
PU operation mode is not selected.	Change to PU operation mode.	Pr. 79, 340

- Causes when writing from the RS-485 terminal

Cause	Measures	Related Parameters
Parameter write command source is not set.	(1)After removing the communication option, set "9999" in NET mode command source selection (Pr: 550) to reset the inverter. (2)After setting "1" in NET mode command source selection (Pr: 550) and a value other than 1 in PU mode command source selection (Pr: 551) , reset the inverter.	Pr: 550, 551
Parameter write command source is set in the PU mode	After setting a value other than "1" in PU mode control source selection (Pr: 551) , reset the inverter.	Pr: 551
NET operation mode is not selected.	Change to NET operation mode.	Pr: 79, 340

- Causes when writing from the communication option

Cause	Measures	Related Parameters
Parameter write command source is not set.	After setting "0" in NET mode command source selection (Pr: 550) , reset the inverter.	Pr: 550
NET operation mode is not selected.	Change to NET operation mode.	Pr: 79, 340

3.4.9 Unable to communicate

- Causes related to RS-232C port

Cause	Measures	Related Parameters
Communication port setting of the PC and FR Configurator SW3 are not the same.	Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and check the following items. (1)Check "RS-232C" is selected for "PC Side Port". (2)Check that the COM port number of the personal computer and "Port Numer" setting are the same. (3)Check that the "Through" setting is "None". When connecting through the GOT (4)Check that the "Through" setting is "GOT".	-

- Causes related to RS-232C communication

Cause	Measures	Related Parameters
Parameter setting for PU connector communication is not an appropriate value.	(1)Check that the correct station number is set for PU communication station number (Pr. 117) . When multiple inverters are connected, set a different station number for each inverter. (2)Set 3s or more, or "9999" in PU communication check time interval(Pr. 122). (3)Set "9999" in PU communication waiting time setting (Pr. 123) . (4)Select [Options] in [Tool] menu to select [Communication] tab on the option screen. Check that the "Communication Speed", "Stop Bit", "Delimiter", and "Parity" settings are the same as the parameter for PU connector communication (Pr. 118, 119, 120, 124) setting. (5)Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and press [Advanced]. Increase the value of "TimeOut" and "Retry Count". (6)Set "0" in protocol selection (Pr. 549) .	Pr. 117, 118, 119, 120, 121, 122, 123, 124, 549
Parameter setting for RS-485 terminal communication is not an appropriate value.	(1)Check that the correct station number is set for RS-485 communication station number (Pr. 331) . When multiple inverters are connected, set a different station number for each inverter. (2)Set 3s or more, or "9999" in RS-485 communication check time interval(Pr. 336) . (3)Set "9999" in RS-485 communication waiting time setting (Pr. 337) . (4)Select [Options] in [Tool] menu to select [Communication] tab on the option screen. Check that the "Communication Speed", "Stop Bit", "Delimiter", and "Parity" settings are the same as the parameter for RS-485 terminal communication (Pr. 332, 333, 334, 341) setting. (5)Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and press [Advanced]. Increase the value of "TimeOut" and "Retry Count". (6)Set "0" in protocol selection(Pr. 549) .	Pr. 331, 332, 333, 334, 335, 336, 337, 341, 549

- Causes related to RS-232C communication through GOT

Cause	Measures	Related Parameters
Parameter setting for PU connector communication is not an appropriate value.	<p>(1)Check that the correct station number is set for PU communication station number (Pr. 117) . When multiple inverters are connected, set a different station number for each inverter.</p> <p>(2)Set 3s or more, or "9999" in PU communication check time interval (Pr. 122) .</p> <p>(3)Set "0" in PU communication waiting time setting (Pr. 123) .</p> <p>(4)Select [Options] in [Tool] menu to select [Communication] tab on the option screen. Check that the "Communication Speed", "Stop Bit", "Delimiter", and "Parity" settings are the same as the parameter for PU connector communication (Pr. 118, 119, 120, 124) setting.</p> <p>(5)Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and press [Advanced]. Increase the value of "Timeout" and "Retry Count".</p> <p>(6)Set "0" in protocol selection (Pr. 549) .</p>	Pr. 117, 118, 119, 120, 121, 122, 123, 124, 549
Parameter setting for RS-485 terminal communication is not an appropriate value.	<p>(1)Check that the correct station number is set for RS-485 communication station number (Pr. 331) . When multiple inverters are connected, set a different station number for each inverter.</p> <p>(2)Set 3s or more, or "9999" in RS-485 communication check time interval(Pr. 336) .</p> <p>(3)Set "0" in RS-485 communication waiting time setting (Pr. 337) .</p> <p>(4)Select [Options] in [Tool] menu to select [Communication] tab on the option screen. Check that the "Communication speed", "Stop Bit", "Delimiter", and "Parity" settings are the same as the parameter for RS-485 terminal communication (Pr. 332, 333, 334, 341) setting.</p> <p>(5)Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and press [Advanced]. Increase the value of "TimeOut" and "Retry Count".</p> <p>(6)Set "0" in protocol selection(Pr. 549) .</p>	Pr. 331, 332, 333, 334, 335, 336, 337, 341, 549

- Causes related to USB communication

Cause	Measures	Related Parameters
Communication port setting of the FR Configurator SW3 is not an appropriate value.	<p>Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and check the following items.</p> <p>(1)Check "USB" is selected for "PC Side Port".</p> <p>(2)Check that the "Through" setting is "None".</p>	-
Parameter setting for USB connector communication is not an appropriate value.	<p>(1)Check that the correct station number is set for USB communication station number (Pr. 547) . When multiple inverters are connected, set a different station number for each inverter.</p> <p>(2)Set 3s or more, or "9999" in USB communication check time interval (Pr. 548).</p>	Pr. 547, 548

- Causes related to USB communication via GOT

Cause	Measures	Related Parameters
Communication port setting of the FR Configurator SW3 is not an appropriate value.	<p>Select [Options] in [Tool] menu. Select [Communication] tab on the option screen and check the following items.</p> <p>(1)Check "USB" is selected for "PC Side Port".</p> <p>(2)Check that the "Through" setting is "GOT".</p>	-

4 FUNCTION

**This chapter explains the "FUNCTION" for use of this product.
Always read the instructions before using the software.**

4.1	Model Setting	78
4.2	Options	79
4.3	File Management and Print.....	81
4.4	Test Operation (Navigation area)	84
4.5	System View (Navigation area)	88
4.6	Parameter List (System area)	91
4.7	Convert (System area)	98
4.8	Diagnosis (System area).....	108
4.9	Graph (Monitor area)	110
4.10	Batch Monitor (Monitor Area).....	125
4.11	I/O Terminal Monitor (Monitor Area)	126
4.12	I/O Terminal Assignment	127
4.13	Help.....	128

1

2

3


4

5

4.1 Model Setting

Make setting of inverter model in "Model Setting" window.
There are following ways to display "Model Setting" window.

- (1) Select [Model Setting] in [Tool] menu.
- (2) Double-click a station number in "System Setting" of System View.

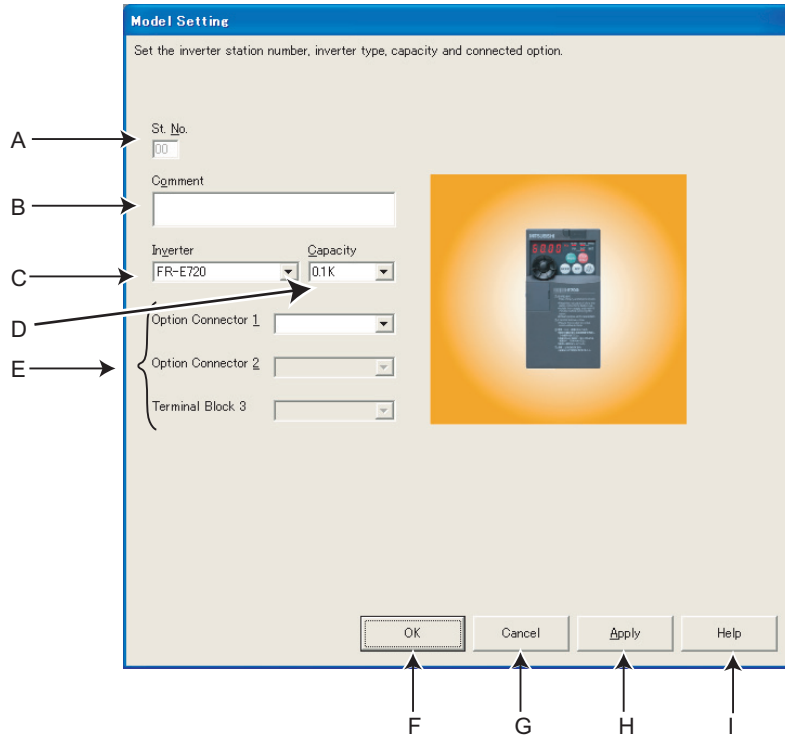

No.	Name	Function and description
A	St. No.	Set the inverter station number from 0 to 36.
B	Comment	A field for comments.
C	Inverter	Select the connected inverter model.
D	Capacity	Select the connected inverter capacity.
E	Option Connector 1, Terminal Block 3	Select the option connected to an option connector.
F	OK	Reflects the Model Setting into the system, and closes the "Model Setting" window.
G	Cancel	Returns to the Main frame with the setting made invalid.
H	Apply	Reflects the Model Setting into the system.
I	Help	Displays Help window. (Refer to page 128)



REMARKS

Inverter model will change if capacity or option setting field is changed, therefore current value, setting value and comment in "Parameter List" are also cleared. If you want to reuse the current value, setting value and comment, export the "Parameter List" data beforehand, and then change the model setting. After making model setting, import the exported data in "Parameter List" window to reuse the current setting, setting value and comment.


4.2 Options

Communication and appearance setting is available in "Option" window. Displays the communication and preference setting windows by switching tabs.

Select [Options] in [Tool] menu to display "Option" window.

4.2.1 Communication

Click **Communication** of "Option" window to make a communication setting.

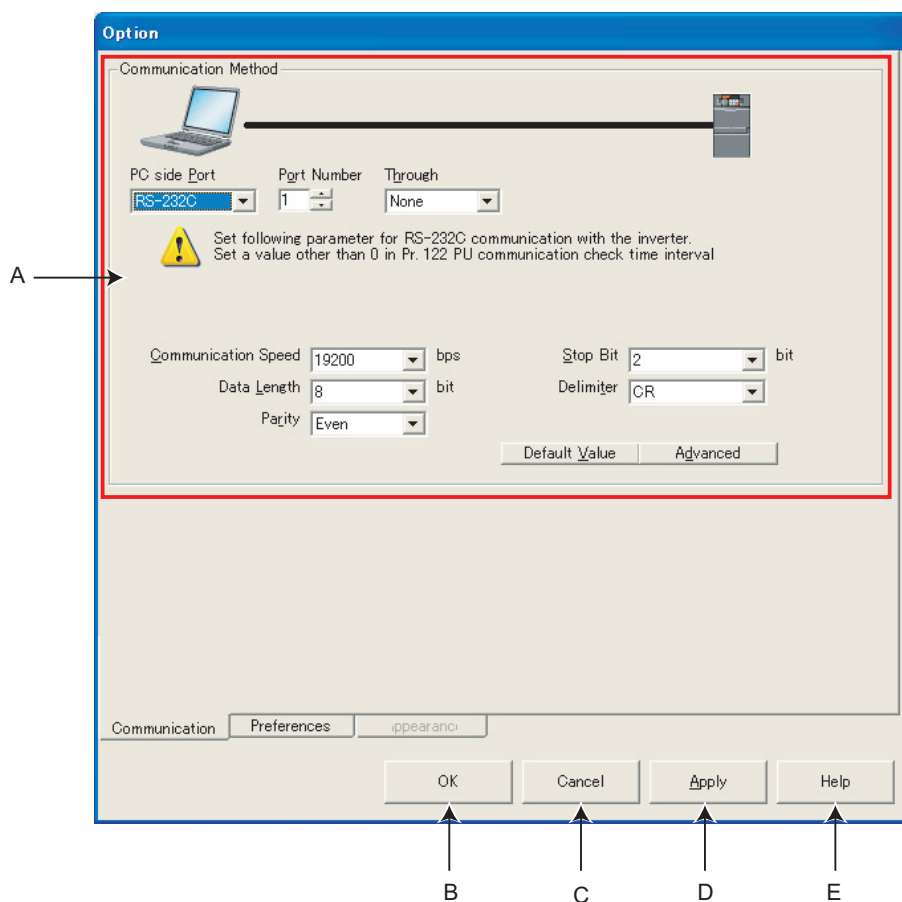

No.	Name	Function and description
A	Setting items	Refer to page 39 for details of each communication setting items.
B	OK	Closes Option window with the setting made valid.
C	Cancel	Closes the window with the setting made invalid.
D	Apply	Reflects the setting into the system without closing the window.
E	Help	Displays Help window. (Refer to page 128)




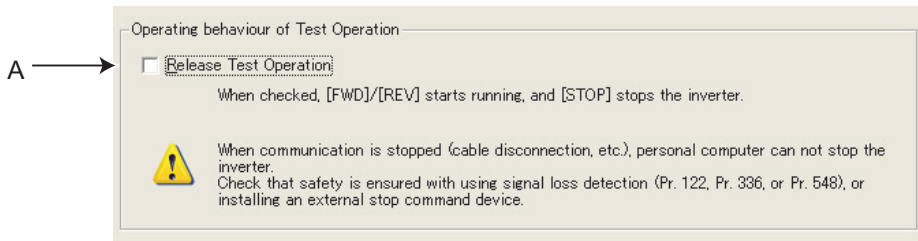
REMARKS



- Communication setting window is active only when OFFLINE. During ONLINE, every item is turned gray and unavailable for making setting.
- When "USB" is selected for personal computer side port, unnecessary setting item turns to gray and unavailable for making setting.

4.2.2 Preferences

Test operation setting can be made.

Click  of "Option" window to display the setting window of preference.




No.	Name	Function and description
A	Release Test Operation	If checked, clicking  or  button of the test operation window makes the motor running continuously.



Note

- When test operation is being performed, check button of "Release Test Operation" can not be checked.
- Check setting of "Release Test Operation" can not be stored. At starting of the FR Configurator, this setting is always not checked.

 CAUTION

 When communication is stopped (cable disconnection, etc.), personal computer can not stop the inverter. Check that safety is ensured with using signal loss detection (Pr.122, Pr.336, or Pr.548), or installing an external stop command device.


4.3 File Management and Print

4.3.1 Type of files

Extension	Description	Corresponding screen	Refer to Page
*.me3	Manages system setting, model information, data of Parameter List and Graph with a single file.	All screen	—
*.gp3	Manages Graph sampling data at the moment of exporting.	Graph	110
*.pr3	Manages Parameter List data at the moment of exporting (text format). Used to copy the parameter setting into the other inverters.	Parameter List	91

4.3.2 Open

"Open" is a command to read data such as model information and other functions in system file (me3), and reflect to each screens. (For *.gp3 or *.pr3 file, information can be read using [Import (I)] on window of each function. *Refer to page 82*)

Select [Open] in [File] menu to display "Open" window. Select the desired file, and click  to read the saved data.

Whether each function screens are currently displayed or not, data in the file are reflected into each functions.



REMARKS

- When copying the current value of the parameter to other station or other inverter, use import and export (*.pr3) of the data.
- System file (*.mel) of older version (FR Configurator SW2) can not be opened. Saves the parameter setting of the FR Configurator SW2 into PRM file and import from the FR Configurator SW3.
- When several station settings exist, it may take several tens of seconds to open a system file.

4.3.3 Save

Select [Save As...] in [File] menu to display "Save As" window. Check the saving location, put a name on a file, and save.

Select [Save] in [File] menu to save the file with the same name. When saving a file for the first time, the same window as "Save As" is displayed.

4.3.4 Data import and export (File input and output)

Data of Graph or Parameter List can be input or output as a file. When copying parameter settings to other inverter, export data of the Parameter List, then import with other inverter to copy.

(1) Import (file input)

Exported data of Graph or Parameter List can be read (import) and reflected into a screen. Select [Import] in [File] menu to display a window for selecting the importing file.



Note

- Importing data of "Graph" is available only when inverter type, capacity, model and option connector are all matched with the exported data.
- Importing data of "Parameter List" is available when inverter type is matched with the exported data.

(2) Export (file output)

Data of "Graph" or "Parameter List" can be output (export) into a file separately to the system file. Select [Export] in [File] menu to display a window for exporting file. The exported file can be imported (displayed) with "Graph Function" and "Parameter List".




Note

- Exported file is saved in a text format. If the contents of the file is edited, the file may not be read correctly when importing. Do not edit the contents of the exported file.




REMARKS

- Parameter file (*.prm) of older version S/W (FR Configurator SW2) can not be imported. Note that exported file is pr3 format.
- Import and export of "Parameter List"
 - Exported file of Parameter List contains both "Current" field data and "Setting" field data.
 - When importing the exported file, select which data to be imported between "Current" value or "Setting" value in the file ("Selection of Import Data" window is displayed after selecting a file). And the selected data is reflected into "Setting" field of the Parameter List.

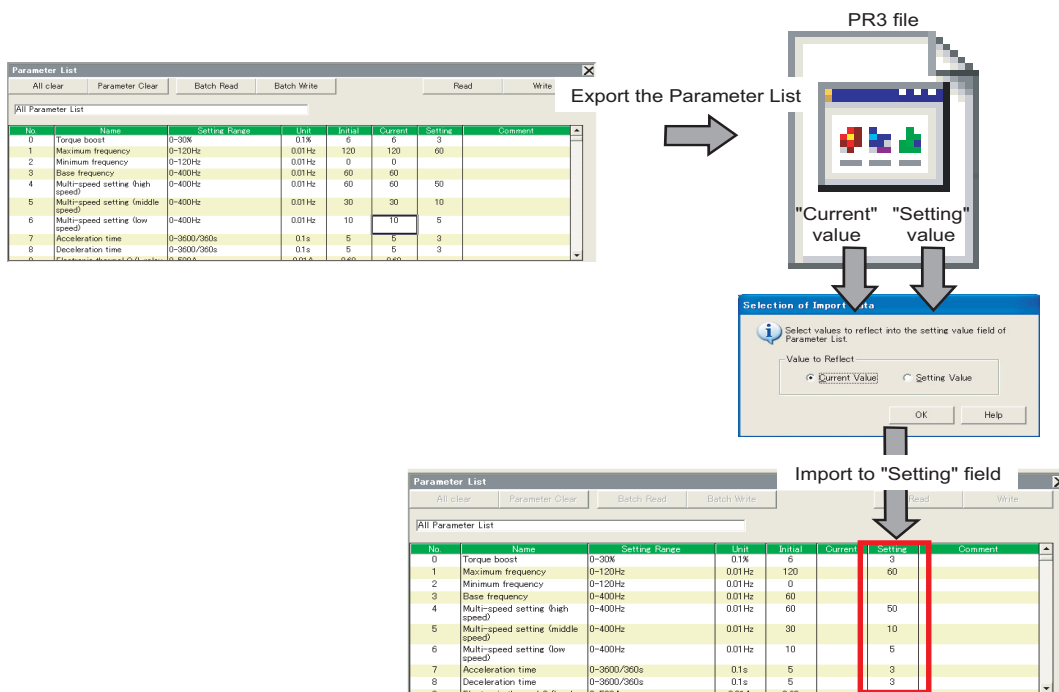

4.3.5 Print

The FR Configurator window can be printed as-is. The Parameter List can be printed as a list. Select [Print (P)...] from the [File (F)] menu or click  of the tool bar.

Please make printer setting beforehand.



POINT

- When printing specific screen, hide unused other screens to print the screen only you want to print. *(Refer to page 31)*
- As the parameter list is printed according to the size of the displayed window, set the window full screen display to print.


4.4 Test Operation (Navigation area)

Frequency (fault) indication, operation mode indication and switching, sending of forward/reverse rotation command and writing of the set frequency is available.




Note

- For safety issue, command sending part of Test Operation is hidden at start up of FR Configurator. When performing Test Operation, check [Test Operation] sub-menu under [Navigation] of [View] menu to display the command sending part of Test Operation.

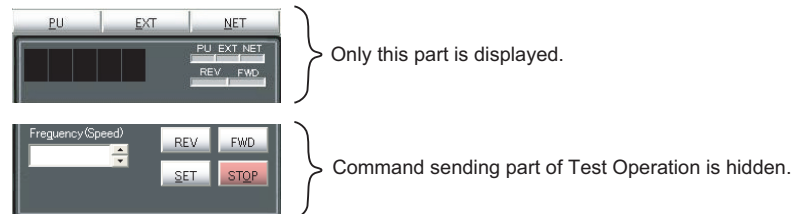

- Do not click each operation buttons **FWD** and **REV** repeatedly. Doing so may result in unstable operation of the FR Configurator. If operation continues, press **STOP** to stop operation.

4.4.1 Test Operation screen

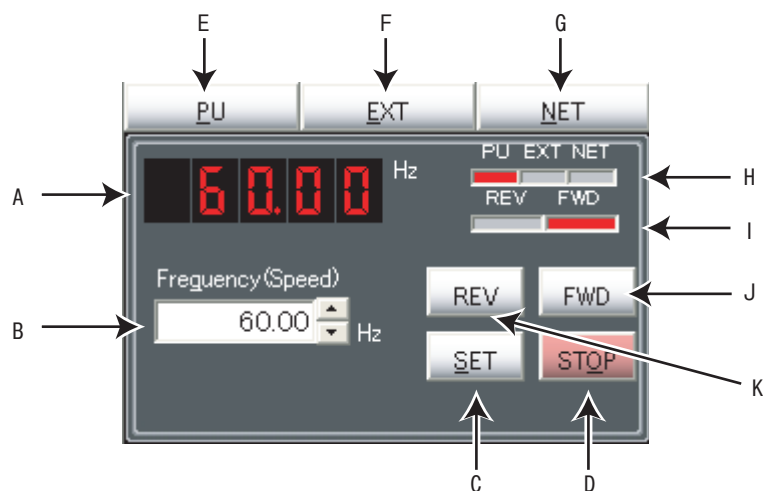

No.	Name	Function and description
A	Frequency (Speed) indication	Shows frequency (speed) or fault indication etc. of the selected inverter.
B	Set frequency (speed) input field	Input the set frequency and click SET to write the set frequency to the selected inverter. Pressing SET while the field is empty shows the output frequency of the selected station.
C	SET	Writes the value of "Frequency (speed) input" field as the set frequency of the selected inverter.
D	STOP	Sends stop command to the selected inverter.
E	PU	Changes the operation mode of the selected inverter to PU operation mode.
F	EXT	Changes the operation mode of the selected inverter to external operation mode.
G	NET	Changes the operation mode of the selected inverter to network operation mode.
H	Operation mode indication	Shows the operation mode of the selected inverter in red.
I	Rotation direction indication	At forward rotation, "FWD" turns red, and at reverse rotation "REV" turns red.
J	FWD	Sends forward rotation command to the selected inverter. Performing test operation during the button is pressed. (When Release Test Operation is checked, clicking button once keeps operation. Refer to page 79)
K	REV	Sends reverse rotation command to the selected inverter. Performing test operation during the button is pressed. (When Release Test Operation is checked, clicking button once keeps operation. Refer to page 79)

4.4.2 Indication of inverter frequency and fault

Shows output frequency or fault indication etc. of the selected inverter. If model setting of the selected station has been made and set to ONLINE, the indicator shows output frequency. During OFFLINE, or if model setting of the selected station has not been made, indicator turns to blank. If unit of frequency (speed, machine speed) has been changed by parameter setting, output frequency of selected station is indicated along with the change of the unit.
 JOG, PS, PU STOP, Pr. CL, PCPY, Warning and Alarm are not displayed.



Output frequency display



At fault occurrence (OC1)



At communication error occurrence


 



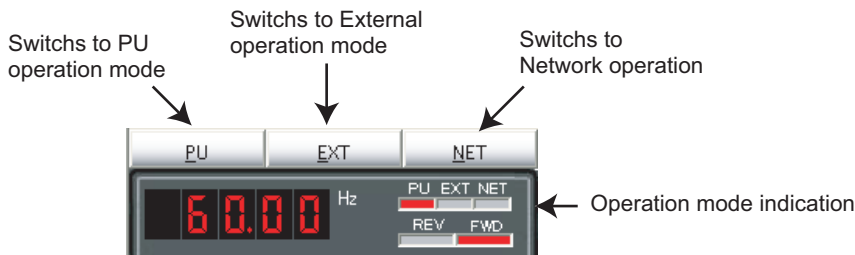
Graph sampling



OFFLINE

4.4.3 Indication of operation mode and switching

Click , ,  to switch the operation mode.
 Operation mode of the selected inverter is shown at the operation mode indicating part.



Indication of External/PU combined operation mode




REMARKS

- Depending on the current operation mode or parameter setting, some operation mode are unavailable for change. For example, at the initial state, switching between PU operation mode and network operation mode is unavailable. (Refer to page 21 or the inverter manual for details.)

4.4.4 Setting of running frequency (speed, machine speed)

Input set frequency (speed, machine speed) in "Frequency (Speed) input" field, and click **SET** to write the set frequency into the inverter. Use the button on the right of input field, to add or decrease the setting frequency by minimum setting increments. (Available only when ONLINE.)

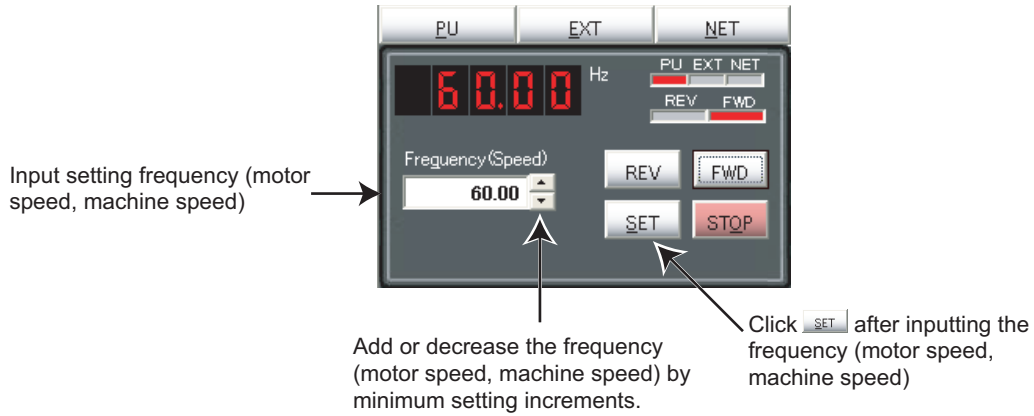


When the set frequency is written, "F" and the set frequency is displayed alternately 3times. After displaying 3 times, the display shows output frequency (speed, machine speed).









4.4.5 Sending of forward/reverse rotation command

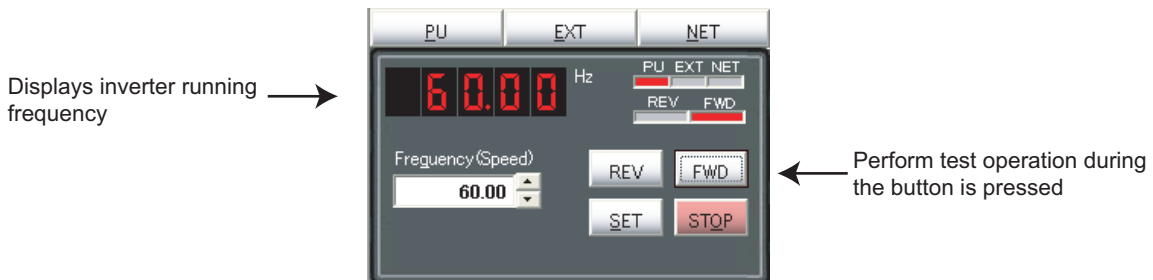- When performing inverter test operation

 Test operation is performed during ,  is pressed. To stop the test operation, release , .










- At releasing of test operation


Releasing test operation enables operation to continue by pressing  or  once. Press  to stop operation. To release test operation, select [Options] in [Tool] menu to display "Option" window (Refer to page 80). Click , then check "Release Test Operation" on the setting screen of preference and click ( or ).



Note


- If the selected station has been changed during Test Operation, FR Configurator sends stop command, and stops the inverter.
- Due to Windows operation, test operation may be kept operating without pressing  or  if the following movement is made. To stop the operation, click .
- Dragging a mouse cursor out of  or  while the button is pressed.
- Test operation (, ) does not function during graph sampling of two or more stations by communication through GOT (FA transparent function).

CAUTION

 When communication is stopped (cable disconnection, etc.), personal computer can not stop the inverter. Check that safety is ensured with using signal loss detection (Pr.122, Pr.336, or Pr.548), or installing an external stop command device.

4.5 System View (Navigation area)


"System Setting" (Refer to page 89), and "Troubleshooting" (Refer to page 59) and "Setting Wizard" (Refer to page 90) can be displayed in System View by switching tabs.

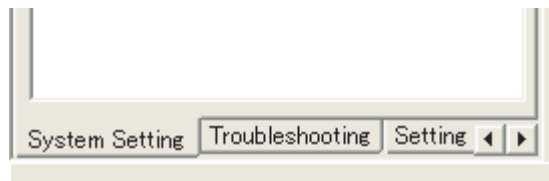






↖ Click tabs to switch the screen

 Switching of the display can be also made using [Navigation] sub-menu in [View] menu.

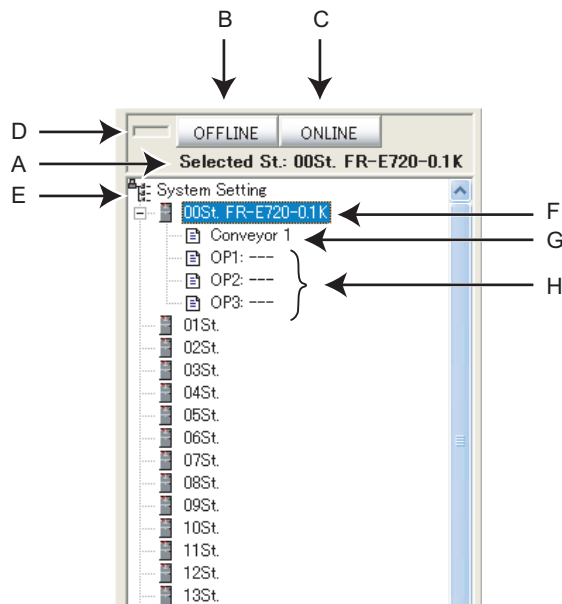4.5.1 System Setting

Function setting information of all 32 stations can be browsed. Click  in System View or select [System Setting] sub-menu under [Navigation] of [View] menu to display "System Setting".




No.	Name	Function and description
A	Station number, inverter type	Shows station number and inverter type.
B	OFFLINE	Changes to OFFLINE.
C	ONLINE	Changes to ONLINE.
D	ON, OFF indicator	Shows ONLINE, OFFLINE state. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  When ONLINE </div> <div style="text-align: center;">  When OFFLINE </div> </div>
E	System Setting	Right-click the item on "System Setting" to display a pop-up menu. System Batch Read (Refer to page 42) is available from the pop-up menu. 
F	Station number, inverter type	Shows inverter type on the right of station number if model setting has already made to that station number. Clicking the station number selects the station number. (Press ↑ or ↓ to select the station number set upward or downward.) Click  on the left of the icon to open a tree view for checking a detail of the model setting. Double-click on the station number to display Model Setting window.
G	Comment	Displays a comment.
H	OP1 to OP3	Shows a name of plug-in option installed to the selected inverter.

4.5.2 Setting Wizard

Setting Wizard is a function to make parameter setting without regard to parameter number. Double-click a desired function in the "Setting Wizard" (or select the function and click) to start the Setting Wizard of the selected function.

Click in System View or select [Setting Wizard] sub-menu under [Navigation] of [View] menu to display "Setting Wizard".

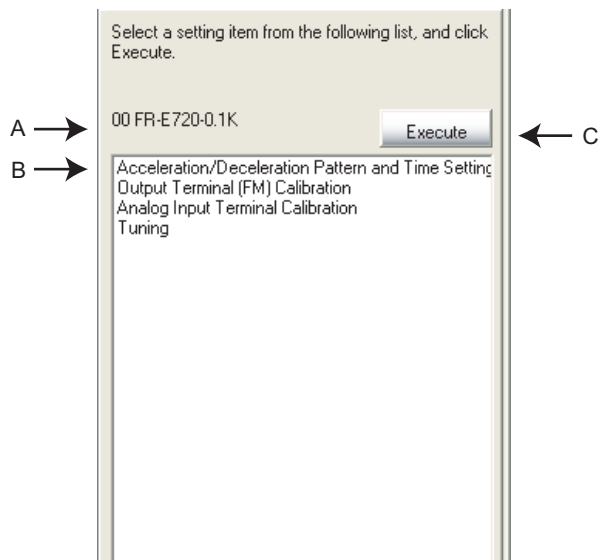


No.	Name	Function and description
A	Inverter type information	Shows station number, inverter type, capacity and comment of the selected inverter.
B	Setting Wizard item	Shows Setting Wizard items. Select a desired function (Up-key and Down-key is also available) and double-click (or click <input data-bbox="687 1122 762 1144" style="vertical-align: middle;" type="button" value="Execute"/>) to start the Setting Wizard of the selected function (Refer to page 50). (If Model Setting has not made yet, color turns gray and unavailable to select.)
C	Execute	Click to start the Setting Wizard of the selected function. (Refer to page 50) (If Model Setting has not made yet, color turns gray and unavailable to select.)

4.6 Parameter List (System area)

"Parameter List" has following functions.


- Showing parameters (all list, functional, individual, changed parameter, verification result parameter)
- Edit Individual List
- Reading and batch reading of parameter setting value
- Input, writing and batch writing of parameter setting value
- Parameter clear and all parameter clear
- Parameter verification (verifies parameter values set on the FR Configurator and values already written into the inverter)
- Parameter searching
- Results of at parameter verification, batch read, and batch write are output into file.
- Writing a comment
- Parameter copy (use import/export. *Refer to page 82.*)

Select [Parameter List] under [View] menu, or click  on the tool bar to display "Parameter List".

Functions available in "Parameter List" is different between ONLINE or OFFLINE.

Function	ONLINE	OFFLINE
All Parameter Clear	○	×
Parameter Clear	○	×
Batch Read	○	×
Batch Write	○	×
Verification	○	×
Read	○	×
Write	○	×
Input of parameter setting value	○	○
Edit Individual List	○	○
Search	○	○
Display list selection	○	○
Writing a comment	○	○


4.6.1 Explanation of screen

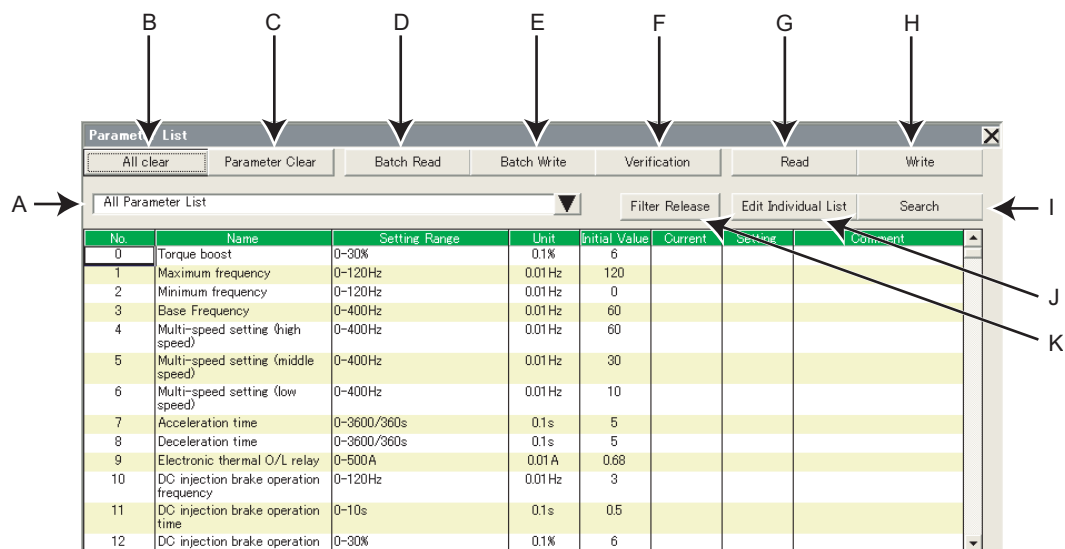


No.	Name	Function and description
A	Parameter List display format	Select a "Parameter List" display format. Click ▼ to display format of "Parameter List" from the menu. (Refer to page 93)
B	All clear	Performs all parameter clear with the connected inverter.
C	Parameter Clear	Performs parameter clear with the connected inverter.
D	Batch Read	Reads all parameter settings of the connected inverter.
E	Batch Write	Writes values of Setting value field into the the connected inverter.
F	Verification	Verifies parameter values set on the FR Configurator and values already written into the inverter.
G	Read	Reads a current value of the selected parameter from the connected inverter.
H	Write	Writes a setting value of the selected parameter into the the connected inverter.
I	Search	Displays Search window. (Refer to page 97)
J	Edit Individual List	Click to edit parameter Individual List. (Refer to page 97)
K	Filter Release	Returns display format of the Parameter List to All Parameter List.

Item	Function and description	Editing availability
No.	Shows parameter number. When the current value and parameter initial value is different, " > " appears next to the number and the color turns green. (Calibration parameters, Pr. 902, 903, 904, 905 etc. are displayed with ().)	×
Name	Shows parameter name.	×
Setting Range	Shows setting range.	×
Unit	Shows minimum setting increments.	×
Initial	Shows parameter initial value.	×
Current	Shows the value read from the inverter or the value written to the inverter.	×
Setting	Input a value desired to write to the inverter. Click <input type="button" value="Write"/> or <input type="button" value="Batch Write"/> to write the value into the inverter. (Numeric value and a decimal point can be input up to 6 characters including a decimal point.)	○
Comment	A field for comments. Available to write one byte code up to 128 characters (2 byte code up to 64 characters).	○

4.6.2 Parameter List Display Format

Display format of "Paramter List" can be changed to other display format according to specific obojectives. Click  to select from the list display menu to change the display format.

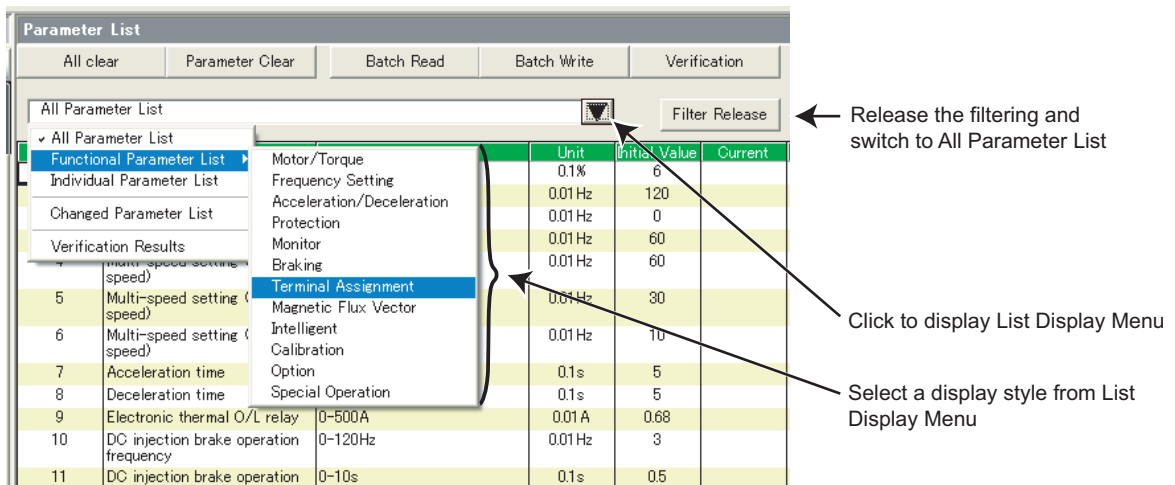

Display Format	Description
All Parameter List	Displays all parameters of the selected inverters. (Option parameter displays parameters of the selected options only.)
Functional Parameter list	Select the function desired to display from the sub menu to display parameters related to the function. "Functional parameters" and "funtion name" are displayed on the list display menu.
Individual Parameter List	Displays parameters set in the individual list.
Changed Parameter List	Displays parameters whose setting is different from an initial value. (Displays parameters which have ">" in parameter number.
Verification Results	Displays parameters extracted from verification results. Displays verification results executed last time. (Refer to page 96)

Changed Parameter List and Verification Results can be displayed in combination with other display format.


Parameter List items according to the FR-E700 series functions


Function	Description
Motor/Torque	Parameters related to motor and torque
Frequency Setting	Parameters related to frequency
Acceleration/ Deceleration	Parameters related to acceleration/deceleration
Protection	Parameters related to protective function
Monitor	Parameters related to monitor function
Braking	Parameters related to frequency, time, etc. at brake operation
Terminal Assignment	Parameters related to control circuit terminal
Magnetic Flux Vector	Advanced magnetic flux vector control (general-purpose magnetic flux vector control)
Intelligent	Parameters related to intelligent mode which automatically set appropriate parameters and operate.
Calibration	Parameters for calibrating terminal FM, AM and setting bias/gain of frequency (speed) setting voltage and current.
Option	Parameters related to option
Special Operation	Parameters related to special operation such as communication related, program operation which are selected beforehand to use.

4.6.3 Parameter clear and all parameter clear

Performing parameter clear or all parameter clear can initialize parameter setting value.

Click or to display the following dialog to confirm the parameter clear or all parameter clear. Refer to the inverter manual for availability of parameter clear and all parameter clear in each parameters.

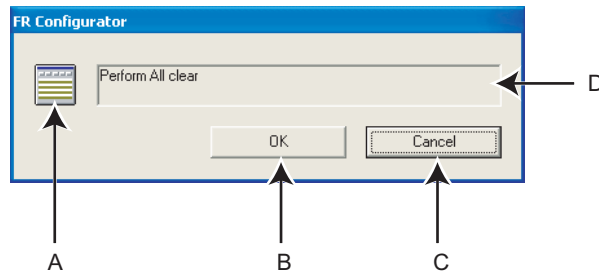

No.	Name	Function and description
A	Icon display of clearing	Icon display switches during parameter clear. 
B	OK	Click to perform parameter clear. (The color turns to gray during parameter clear, and unavailable to use.)
C	Cancel	Click to cancel parameter clear. (The color turns to gray during parameter clear, and unavailable to use.)
D	Message	Shows a message to confirm parameter clear, and shows a message during parameter clear.



REMARKS


- When parameter clear and parameter all clear were performed from the FR Configurator, the following parameters for communication are not cleared. Refer to the inverter manual or communication option manual for details of each parameter.


Pr. 117, Pr. 118, Pr. 119, Pr. 120, Pr. 121, Pr. 122, Pr. 123, Pr. 124, Pr. 331, Pr. 332, Pr. 333, Pr. 334, Pr. 335, Pr. 336, Pr. 337, Pr. 338, Pr. 339, Pr. 340, Pr. 341, Pr. 345, Pr. 346, Pr. 347, Pr. 348, Pr. 349, Pr. 409, Pr. 431, Pr. 434, Pr. 435, Pr. 436, Pr. 438, Pr. 439, Pr. 440, Pr. 452, Pr. 500, Pr. 502, Pr. 539, Pr. 541, Pr. 542, Pr. 543, Pr. 544, Pr. 547, Pr. 548, Pr. 549, Pr. 550, Pr. 551

4.6.4 Read (Batch Read), Write (Batch Write) and Verification


Performing Read or Write gains access to inverter parameter, and parameter reading and writing is performed. Executing verification verifies parameter values set on the FR Configurator and values already written into the inverter.

Click , , , or to display the following dialog.

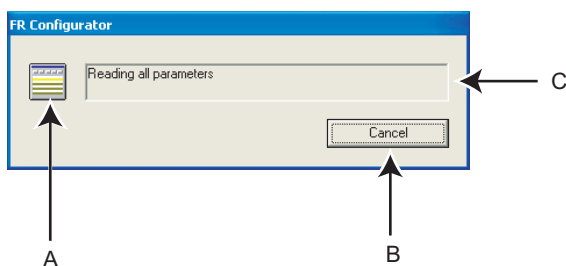

No.	Name	Function and description
A	Icon display during access	Icon display switches during parameter access. 
B	Cancel	Click to cancel batch read and batch write and verification. If <input type="button" value="Cancel"/> is clicked, access is canceled and data already processed are displayed.
C	Message	Shows a message during parameter access.

After verification, the following dialog is displayed. The results can be saved as a text file. (Also appears at reading error and writing error.)

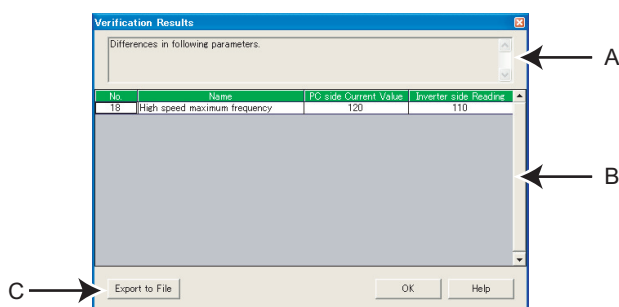

No.	Name	Function and description	
A	Result	Shows result message.	
B	Result list	Read	Shows parameter number, name, initial value, and error number of the reading error parameters.
		Write	Shows parameter number, name, data, and error number of the writing error parameters.
		verification	Displays parameter number, name, Configurator current value, and inverter read value, which are unmatched with the parameter values set on the FR Configurator and written to the inverter.
C	Export to File	Saves the result in text format.	

 


Note

- When changing some specific parameters (*Pr. 21 Acceleration/deceleration*, *Pr. 71 Applied motor etc.*) with FR Configurator, setting value of related parameters may also change.

For example, if *Pr. 21 Acceleration/deceleration time increments* setting has been changed, the setting value of acceleration/deceleration time parameters (*Pr. 7*, *Pr. 8 etc.*) may also change. (When *Pr. 21* = "0", and *Pr. 7* = "5.0s", and changing *Pr. 21* setting to "1" will automatically change the setting of *Pr. 7* to "0.5s".)


If parameter writing is performed with or which causes a change of related parameters, or if or is performed, the following dialog is displayed. Please perform update of parameter display.





- When "1" is set in *Pr. 342 Communication EEPROM write selection*, the parameter setting set from the FR Configurator is written into RAM only (can not be written to EEPROM). In addition, since setting "1" in *Pr. 342* to batch write will perform writing process from the top, parameters after *Pr. 342* are written to RAM only.

4.6.5 Edit Individual List

 Parameters desired to be registered into the individual parameter list can be selected and added.

 
Click  in "Parameter List" window to display the following window.

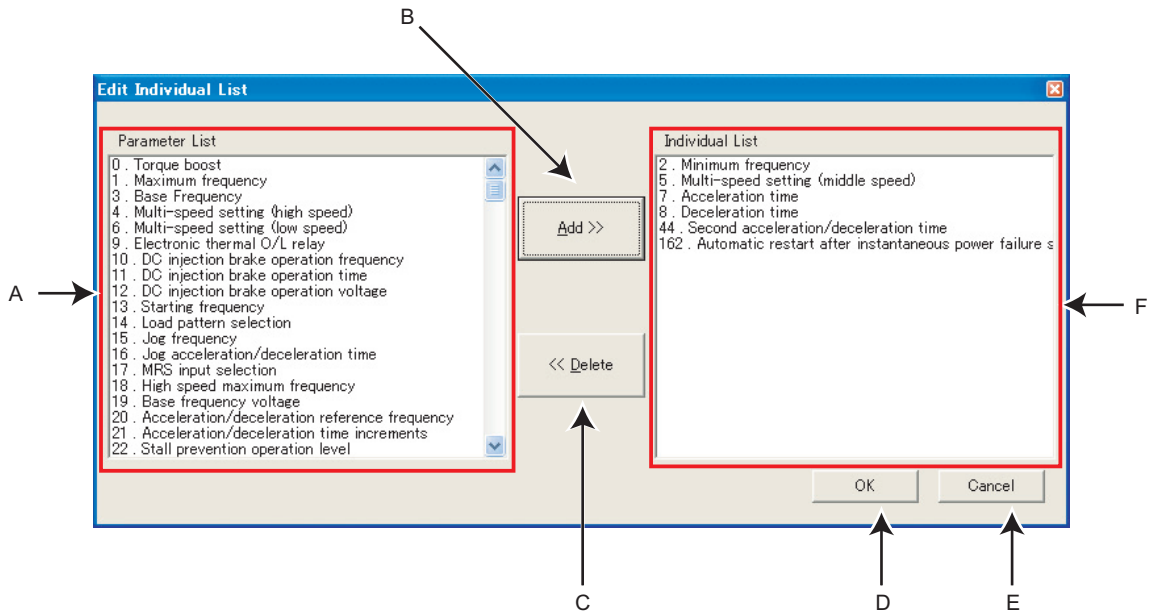


No.	Name	Function and Description
A	Parameter List	Displays number and name of all parameters. Select a parameter and click  to add it in the individual parameter list. Several parameters can be selected.
B	Add >>	Add parameters selected in the Parameter List in the individual list.
C	<< Delete	Parameters selected in the individual list can be returned to the Parameter List/
D	OK	Stores edited information of the individual and returns to the Parameter List window.
E	Cancel	Parameters set in the individual list are made invalid and returns to the Parameter List.
F	Individual List	Displays parameters added from the Parameter List. Parameters selected from the individual list can be displayed in the individual Parameter List.

4.6.6 Parameter Search

Parameter name search can be performed. Input searching character string, and click to jump to the matching parameters.

Click  in "Parameter List" window to display the following window.

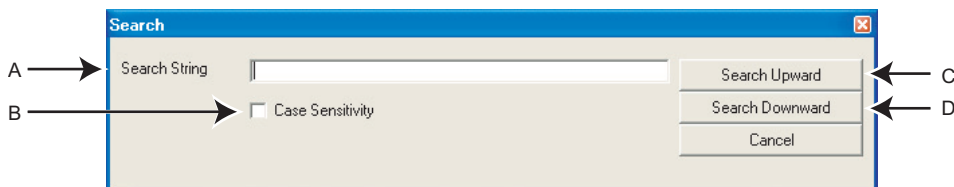

No.	Name	Function and Description
A	Search String	Input character string you wish to search. Up to 64 double-byte characters can be input.
B	Case Sensitivity	Check to search by distinguishing between upper case and lower case.
C	Search Upward	Click to search the parameter list upward.
D	Search Downward	Click to search the parameter list downward.


4.7 Convert (System area)

Converting a parameter setting from a conventional model into 700 series inverter parameter setting is available. Select [Convert] in [View] menu to display "Convert".


- Compatible models for Convert

Source Inverter	Target Inverter	REMARKS
FR-E520	FR-E720	
FR-E540	FR-E740	

4.7.1 Convert image

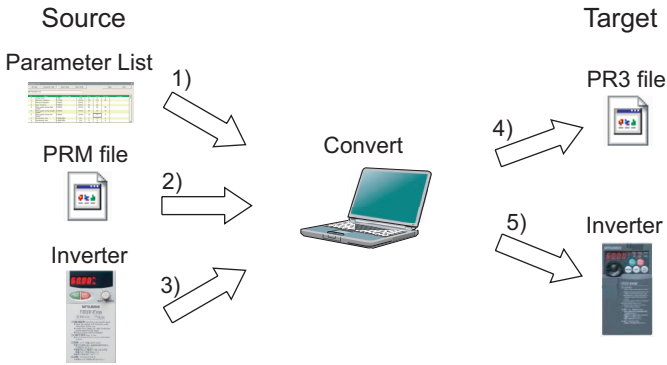


• Setting flow

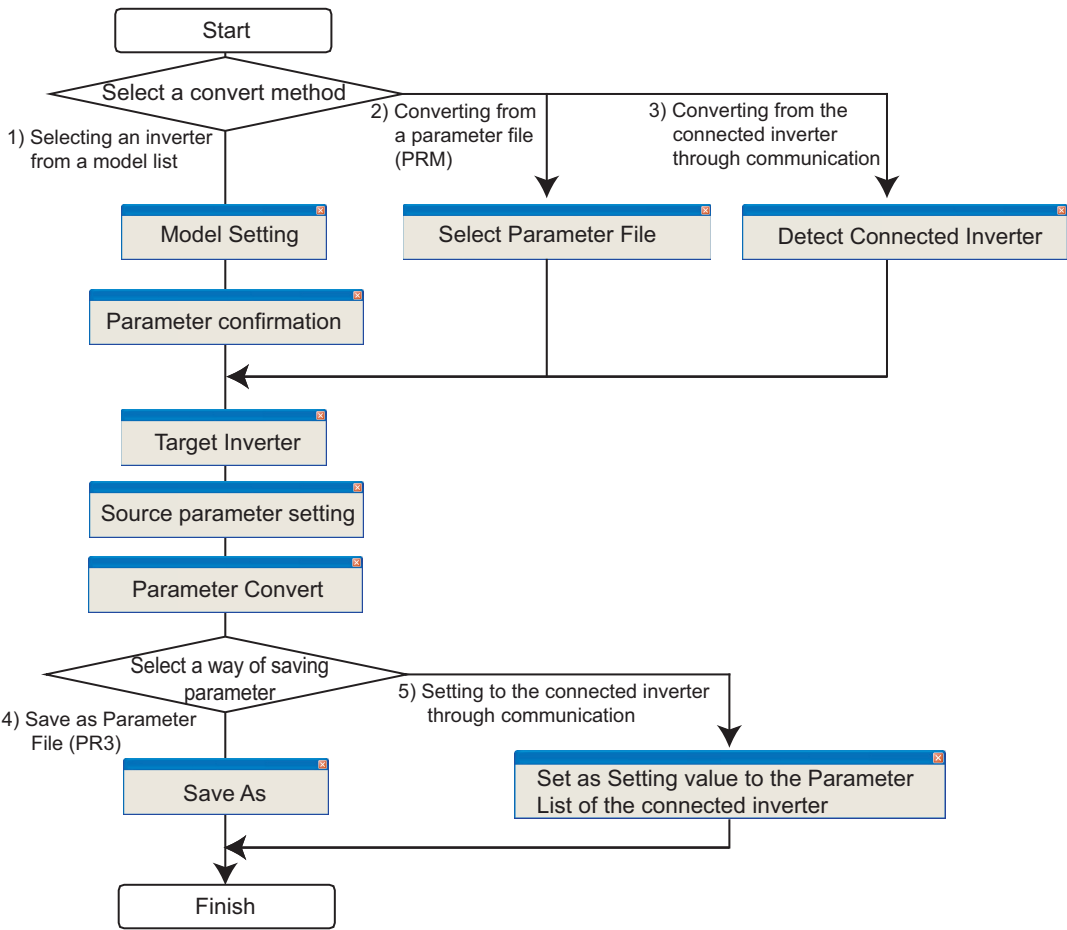

Note

•Converting a parameter setting does not provide any guarantees of the inverter operation characteristic or performance, etc.


 
4.7.2 Explanation of window

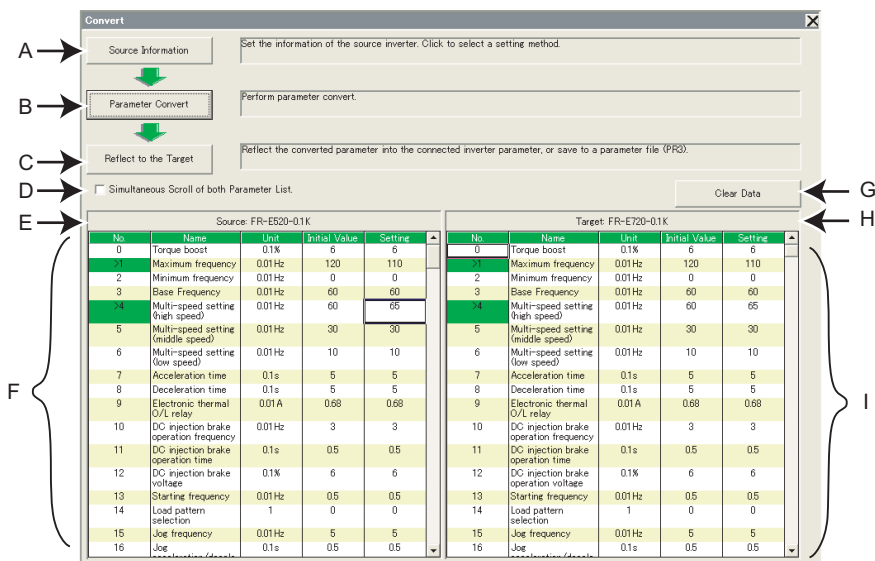



No.	Name	Function and description
A	Source Information	Displays "Convert Method" window. Set converting method, source and target model setting.
B	Parameter Convert	Displays "Convert Confirmation" window. Parameter converting is available. (Click after converting method, source and target model information is set.)
C	Reflect to the Target	Displays "Parameter saving" window. Reflect the converted setting into a Parameter List of the selected inverter. Saving to a parameter file (PR3) is also available. (Click after the parameter is converted.)
D	Simultaneous Scroll of both Parameter List	Checked : When scrolling one of source/target parameter list, the other parameter list goes scrolling too. Without check : Even when scrolling one of source/target parameter list, the other parameter list does not scroll.
E	Source inverter information	Shows the inverter type of the source.
F	Parameter List of source	Shows parameter setting read from the source. ">" appears next to the parameter number of which the setting has been changed, and also a color turns green.
G	Clear data	Initialize the all setting data. Confirmation dialog is displayed when clicked. Click <input type="button" value="Yes"/> to initialize when a confirmation dialog is displayed.
H	Target inverter information	Shows the inverter type of the target.
I	Parameter List of target	Shows converted parameter setting. ">" appears next to the parameter number of which the setting has changed, and also a color turns green.


4.7.3 Example of converting


(1) When selecting an inverter from a model list

 
- 1) Click  in "Convert" window to display "Convert Method".
- 2) Choose "Select an Inverter from a Model List". Click  after selecting.

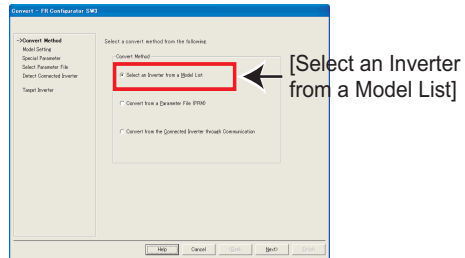


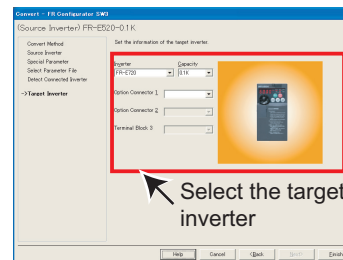
- 3) Set the information of the source inverter in "Model Setting". Fill in the each items of the source inverter. Click  after setting.

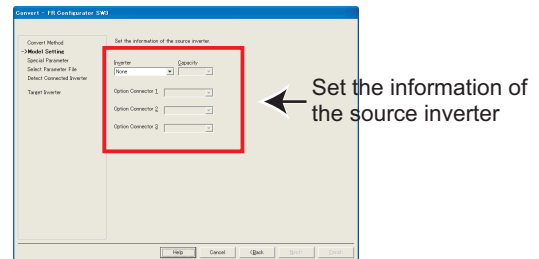
 



- 4) A parameter requiring caution is displayed in a list. Parameter in the list is converted with an initial value. Click  after confirmed. (If a setting of parameter in the list is required, uncheck "Use Initial Value for all parameter", and change the required parameter setting.)

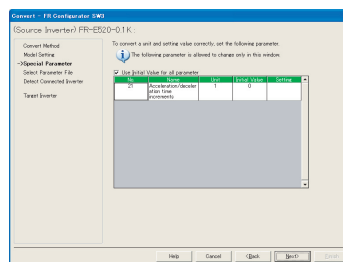

- 5) Select the target inverter on the "target model setting" window, and the convert setting is finished. Click  .




- 6) The value of some of the source parameter is available for changing. When changing the parameter setting value, enter a changed value in Setting field. When the convert setting is finished,  in "Convert" window becomes available. Click  to display "Convert Confirmation".

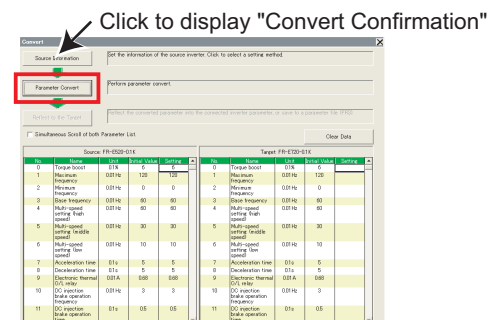


Convert (System area)

- 7) Check the information of the source inverter and target inverter. Click to convert the parameter.
- 8) Click when "Parameter converting is finished." is displayed.

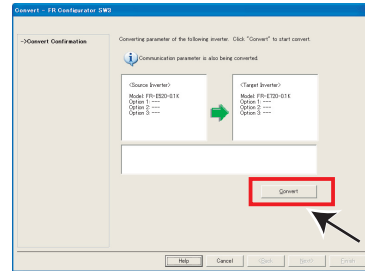


Click to convert parameters

- 9) Results of parameter converting is shown in "Convert" window.

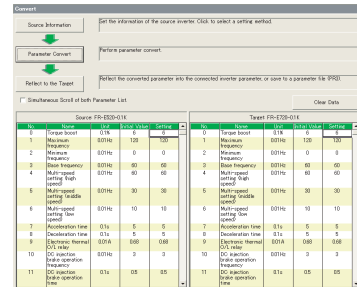


- 10) Click in "Convert" window to display "Parameter Saving".

- 11) Check "Reflect in a Parameter List of the Selected Station", and to reflect the converted parameter setting into the Parameter List. If a station has not finished model setting or the inverter model is different, that station is unavailable to select.

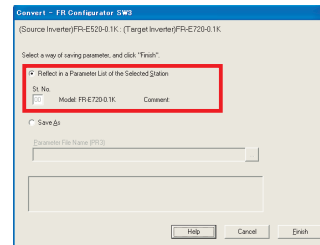

Specify the file location


- 12) When saving the converted parameter setting as a file, check "Save As". Specify the file location, and click to save the converted parameter setting into a parameter file (PR3).

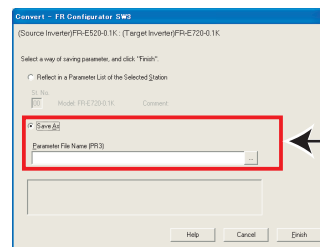


(2) When convert from a parameter file (PRM)

1) Click **Source Information** in "Convert" window to display "Convert Method".

2) Select "Convert from a Parameter File (PRM)". Click **Next** after selecting.

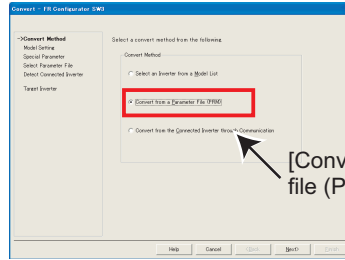


3) Select the converting parameter file in "Select Parameter File" screen. Click **...** to display "Open" window. Select a parameter file in that window.

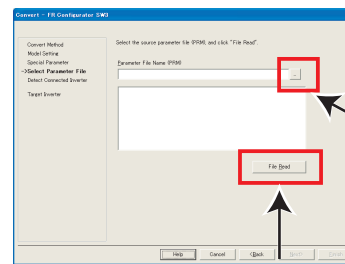


4) Click **File Read** to read the selected parameter file. "Selection of Import Data" is displayed. Select between Current Value or Setting Value for use. (Refer to page 82) Check File Read result, and click **Next**.

5) Select the target inverter on the "target model setting" window, and the convert setting is finished. Click **Finish**.

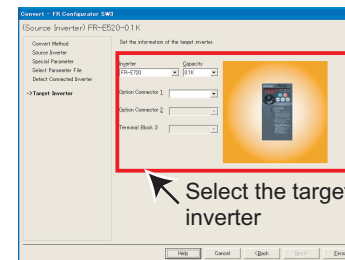


6) The value of some of the source parameter is available for changing. When changing the parameter setting value, enter a changed value in Setting field.

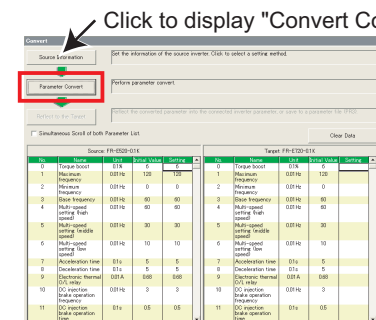

When the convert setting is finished, **Parameter Convert** in "Convert" window becomes available. Click **Parameter Convert** to display "Convert Confirmation".

7) Check the information of the source inverter and target inverter. Click **Convert** to convert the parameter.

8) Click **Finish**, when "Parameter converting is finished" is displayed.

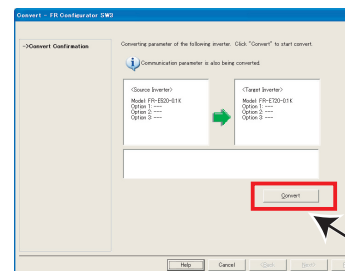


FUNCTION

4

9) Results of parameter converting is shown in "Convert" window.


Source FR-E720-0.1K						Target FR-E720-0.1K					
Sl. No.	Parameter Name	Unit	Value	Comment	Match	Sl. No.	Parameter Name	Unit	Value	Comment	Match
1	Power Boost	0/1%	0		0	1	Power Boost	0/1%	0		0
2	Maximum Torque	0/1%	100		1	Maximum Torque	0/1%	100			1
3	Blue Torque	0/1%	0		2	Blue Torque	0/1%	0			0
4	Multi-speed setting (V/F)	0/1%	40		4	Multi-speed setting (V/F)	0/1%	40			40
5	Multi-speed setting (V/F)	0/1%	30		5	Multi-speed setting (V/F)	0/1%	30			30
6	Multi-speed setting (V/F)	0/1%	10		6	Multi-speed setting (V/F)	0/1%	10			10
7	Acceleration time	0/1%	5		7	Acceleration time	0/1%	5			5
8	Deceleration time	0/1%	5		8	Deceleration time	0/1%	5			5
9	Stopping time	0/1%	0.08		9	Stopping time	0/1%	0.08			0.08
10	Stall protection	0/1%	3		10	Stall protection	0/1%	3			3
11	Stall protection	0/1%	0.5		11	Stall protection	0/1%	0.5			0.5

10) Click **Reflect to the Target** in "Convert" window to display "Parameter Saving".

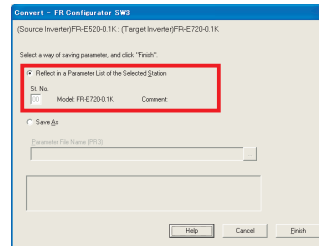

11) Check "Reflect in a Parameter List of the Selected Station", and **Finish** to reflect the converted parameter setting into the Parameter List. If a station has not finished model setting or the inverter model is different, the station is unavailable to select.

12) When saving the converted parameter setting as a file, check [Save As]. Specify the file location, and click **Finish** to save the converted parameter setting into a parameter file (PR3).

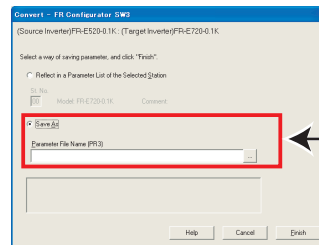

Specify the file location

REMARKS

- Parameter file (PRM) is a text format file. If an nonexistent parameter is added to the source, a caution shown on right appears. The data about nonexistent parameter is not converted.
- If the parameter file (PRM) is broken, a caution shown on right appears when reading the file. In this case, select a normal parameter file, and perform read file again.
- If the parameter file (PRM) is a one from not-compatible inverter, a caution shown on right appears. In this case, select a parameter file of the compatible inverter, and perform Read File again.

Some unmatched parameter was detected.

Failed to read file.

Unsupported model for Convert was detected.


(3) When converting from the Connected Inverter through Communication



POINT

Perform during a inverter stop. Do not input a start command.


 
- 1) Check that FR Configurator is ONLINE. (Click


 in "System Setting" to switch to ONLINE.)




REMARKS

If FR-E500 is connected to the station number where FR-E700 is set for system setting, switching to ONLINE will display a communication error dialog. In this case, click OK, and proceed converting.


- 2) Click  in "Convert" window to display "Convert Method".
- 3) Choose "Convert from the Connected Inverter through Communication". Click  after selecting.

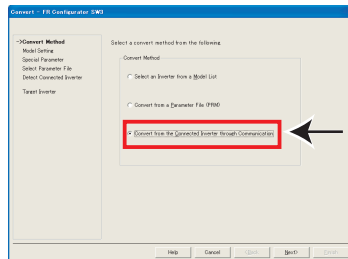

 [Convert from the Connected Inverter through Communication]

- 4) Click  in "Connected Inverter Detection" window. Check the inverter detection result, and click


.

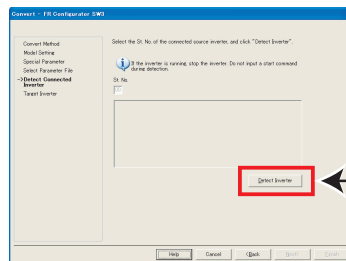

Click to detect inverter



- 5) Select the target inverter on the "target model setting" window, and the convert setting is finished. Click

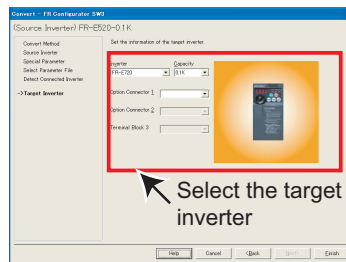
.




Select the target inverter

- 6) The value of some of the source parameter is available for changing. When changing the parameter setting value, enter a changed value in Setting field.

When the convert setting is finished,  in "Convert" window becomes available. Click  to display "Convert Confirmation".

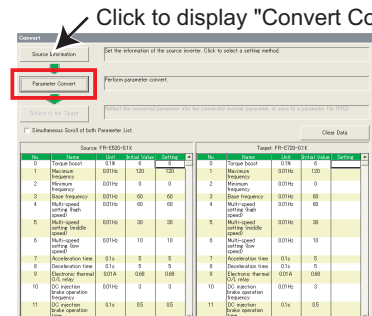

- 7) Check the information of the source inverter and target inverter. Click **Convert** to convert the parameter.
- 8) Click **Finish** when "Parameter converting is finished." is displayed.

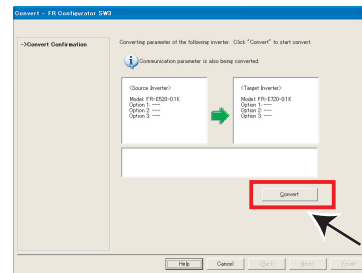


Click to convert parameters


- 9) Results of parameter converting is shown in "Convert" window.

Source FR-E520-0.1K					Target FR-E520-0.1K				
No.	Parameter	Unit	Source Value	Target Value	No.	Parameter	Unit	Source Value	Target Value
1	Motor Inverter	St/No	0	0	1	Motor Inverter	St/No	0	0
2	Motor	St/No	100	100	2	Motor	St/No	100	100
3	Motor Inverter	St/No	0	0	3	Motor Inverter	St/No	0	0
4	Motor speed	St/No	80	80	4	Motor speed	St/No	80	80
5	Motor speed limit	St/No	30	30	5	Motor speed limit	St/No	30	30
6	Motor speed limit setting	St/No	10	10	6	Motor speed limit setting	St/No	10	10
7	Deceleration time	St/No	5	5	7	Deceleration time	St/No	5	5
8	Deceleration time (External Reset)	St/No	5	5	8	Deceleration time (External Reset)	St/No	5	5
9	DC Link	St/No	3	3	9	DC Link	St/No	3	3
10	DC Link capacitor	St/No	3	3	10	DC Link capacitor	St/No	3	3
11	Parameter	St/No	05	05	11	Parameter	St/No	05	05
	Parameter conversion time	St/No	05	05		Parameter conversion time	St/No	05	05

- 10) Click **Reflect to the Target** in "Convert" window to display "Parameter Saving".
- 11) Check "Reflect in a Parameter List of the Selected Station", and click **Finish** to reflect the converted parameter setting into the Parameter List. If a station has not finished model setting or the inverter model is different, the station is unavailable to select.

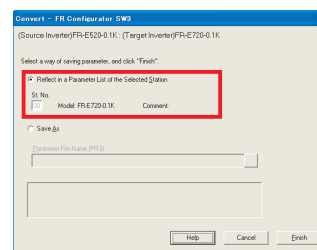


- 12) When saving the converted parameter setting as a file, check [Save As]. Specify the file location, and click **Finish** to save the converted parameter setting into a parameter file (PR3).

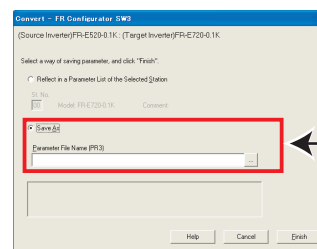

Specify the file location

REMARKS

- Following confirmation dialog is displayed when reflecting the converted parameter setting.

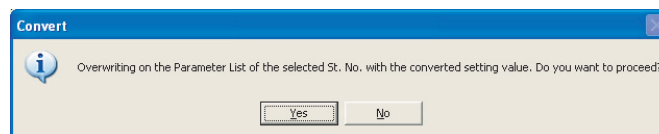

Click **Yes** to reflect and overwrite the parameter setting.

- If an nonexistent parameter is added to the source, the nonexistent parameter data is not reflected in the target.

4.7.4 Precautions for Convert

Please note the following for using "Convert", and make a setting again if necessary. Refer to the inverter manual for details of the parameters.

<When converting the FR-E500 series to the FR-E700 series >

- (1) The following parameters are not converted. Make a setting from "Parameter List" as required.
 - Pr. 133 PID action set point
 - Pr. 146 Frequency setting command selection
 - Pr. 160, Pr. 173 to Pr. 176 (User group selection)
 - Pr. 900, Pr. 901 (FM, AM output terminal calibration)
 - Pr. 991 PU contrast adjustment
- (2) The following parameters are adjustment parameters. Parameter readjustment according to the machine is recommended after converting.
 - Pr. 0 Torque boost
 - Pr. 12 DC injection brake voltage
 - Pr. 245 Rated slip
 - Pr. 246 Slip compensation time constant
 - Pr. 902 to Pr. 905 (frequency setting input calibration parameter)
- (3) When general-purpose magnetic-flux vector control is selected (Pr. 80 Motor capacity is not "9999") for FR-E500 series, note the following precautions.
 - When converting, motor pole is considered as 4poles (Pr. 81 Number of motor poles = "4"). Set the number of motor poles of the using motor in Pr. 81.
 - Tuning and parameter setting of the target inverter is recommended, if offline auto tuning is performed (Pr. 71 Applied motor = "3, 13, 23, 103, 113, 123") or motor constants is directly input (Pr. 71 = "5, 6, 15, 16, 105, 106, 115, 116") to the source inverter.
 - When SF-HR or SF-HRCA type motor is used, set Pr. 71 = "40, 43, 44, 50, 53, 54" after writing the converted parameter to the target inverter. (Conversion of Pr. 82, Pr. 86, Pr. 90 is not necessary)
- (4) Communication related parameters (Pr. 117 to Pr. 124) are also converted. Depending on a setting, communication may not be established after writing the parameter. For example, setting "0" (initial value) in Pr. 122 PU communication check time interval makes parameter writing invalid.
- (5) When communication operation is selected with the FR-E500 series, parameter writing and operation command sending, etc. is made in PU operation mode. Therefore, the following setting is required for FR-E700 series.
 - Set Pr. 79 = "1"(PU operation mode always), Pr. 551 = "2"(PU control source is PU connector), and change to PU operation mode. Note that parameter writing and operation command from the operation panel is unavailable.
 - Set Pr. 79 = "0"(initial value), Pr. 340 = "1" (network operation mode at power-on), and change to network operation mode.
- (6) If FR-E510W or FR-E520S is connected and convert from the connected inverter through communication is performed, the inverter is detected as FR-E520. Check that a compatible inverter is connected for source inverter, and then perform inverter detection.
- (7) There is a change in the following functions. Refer to the FR-E700 series manual for details.
 - When CC-Link communication was made with the FR-E5NC, set the communication station number and baud rate set by the rotary switch of the FR-E5NC in Pr. 542 and Pr. 543.

4.8 Diagnosis (System area)

"Diagnosis" displays fault information and parts life information of the inverter. Use "Diagnosis" to operate the following functions.

- Displays the faults history and monitor value when each alarm has occurred.
- Inverter reset
- Faults history clear
- Measuring of life of the main circuit capacitor
- Display of life and alarm
- Diagnostic data file output

4.8.1 Explanation of window





The screenshot shows the Diagnosis window interface. At the top, there are five buttons: 'Data Update' (A), 'Inverter Reset' (B), 'Faults Clear' (C), 'Main Circuit Capacitor Life Measuring' (D), and 'Data Output' (E). Below these buttons is a 'Faults History' table (F) with columns for Order, Name, Output Frequency, Output Current, Output Voltage, and Energization Time. Below the table is a 'Fault Description' area (G). At the bottom is a 'Life Alarm' table (H) with columns for Parts Life, Name, Indication, and Remarks.





Faults History		Monitor Data at Fault Occurrence			
Order	Name	Output Frequency	Output Current	Output Voltage	Energization Time
Latest		0.00 Hz	0.00 A	0.0 V	0 h
2		0.00 Hz	0.00 A	0.0 V	0 h
3		0.00 Hz	0.00 A	0.0 V	0 h
4		0.00 Hz	0.00 A	0.0 V	0 h
5		0.00 Hz	0.00 A	0.0 V	0 h
6		0.00 Hz	0.00 A	0.0 V	0 h
7		0.00 Hz	0.00 A	0.0 V	0 h
8		0.00 Hz	0.00 A	0.0 V	0 h

Life Alarm			
Parts Life	Name	Indication	Remarks
	Main Circuit Capacitor	Last Value : 100 %	85% or less is a guideline for replacement.
	Control Circuit Capacitor	100 %	10% or less is a guideline for replacement.
	Inrush Current Limit Circuit	100 %	10% or less is a guideline for replacement.
	Cooling Fan	---	Life alarm is displayed when the speed decreased lower than 50%.
	Energization Time	21 h	Shows cumulative energization time after inverter shipment.

No.	Name	Function and description
A	Data update	Reads faults history and parts life information from the selected inverter and updates display. (Available only when ONLINE.)
B	Inverter reset	Resets the selected inverter. Confirmation window appears. Click <input type="button" value="OK"/> to reset. (Available only when ONLINE.)
C	Faults history clear	Clears the faults history of the selected station. Confirmation window appears. Click <input type="button" value="OK"/> to reset. (Available only when ONLINE.)
D	Main Circuit Capacitor Life Measuring	Performs life measuring of the main circuit capacitor. Refer to page 109 for measuring procedure.
E	Data output	Outputs diagnostic data of the selected inverter to file (text format). Specifies file name and stores the diagnostic data file.
F	Faults history	Displays faults history read from the inverter as a list. Displays output frequency, output current, output voltage, and energization time at fault occurrence at the same time.
G	Faults description	Displays description of selected faults.
H	Parts life information	Displays life information read from the inverter. A check mark is shown in the parts life alarm field of the inverter parts expired replacement period.

  4.8.2 Procedure of Main circuit capacitor life measuring

- 1) Confirmation window before measuring appears. Check the following items, and click  .
 - Is the motor connected?
 - Motor is stopped?
 - Has enough time passed after the motor operation?
- 2) Performs parameter setting for measuring of the main circuit capacitor. Click  .
- 3) Switch off inverter power. Click  after powering off the inverter.
- 4) After making sure that the POWER lamp of the inverter is off, switch on the power supply again. Click  after powering off the inverter.
- 5) Displays the measuring result of the main circuit capacitor life in "Measuring Value". (Displays a previous value in "Previous Value" if the main circuit capacitor life value measured last time is stored when updating diagnostic information.)

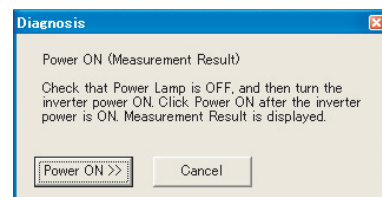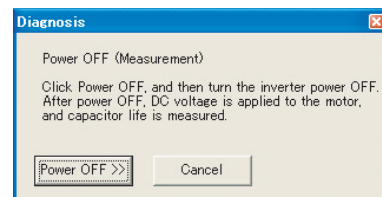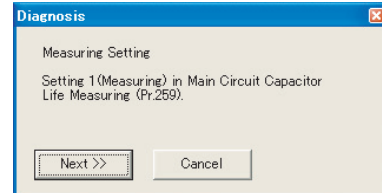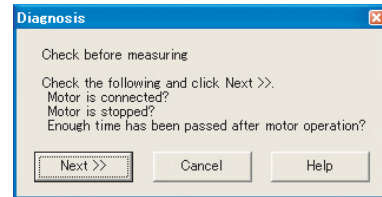

Measurement Result is displayed

Parts Life	Name	Indicator	Alarm	Remarks
		Last Value	100 %	
		Measured Value	100 %	
	Main Circuit Capacitor		85% or less is a guideline for replacement	
	Control Circuit Capacitor		10% or less is a guideline for replacement	
	Inrush Current Limit Circuit		10% or less is a guideline for replacement	
	Cooling Fan	---	Life alarm is displayed when the speed decreased lower than 50%	
	energization Time		14 h	Shows cumulative energization time after inverter shipment.



REMARKS

When the main circuit capacitor life is measured under the following conditions, "forced end" (Pr.259="8") or "measuring error" (Pr.259="9") occurs or it remains in "measuring start" (Pr.259="1"). Therefore, do not measure in such case.

- (a) FR-HC, FR-CV are connected.
- (b) DC power supply is connected to terminal P/+ and N/-.
- (c) The power supply switched on during measurement.
- (d) The motor is not connected to the inverter.
- (e) The motor is running (coasting)
- (f) The motor capacity is two rank smaller as compared to the inverter capacity.
- (g) The inverter is tripped or a fault occurred when power is off.
- (h) The inverter output is shut off with the MRS signal.
- (i) The start command is given while measuring.
- (j) The parameter unit (FR-PU04/FR-PU07) is connected (FR-E700 series only)
- (k) Use terminal PC as power supply (FR-E700 series only)
- (l) I/O terminal of the control terminal block and plug-in option is on (continuity) (FR-E700 series only)
- (m) Plug-in option is fitted. (only for the 0.75K or less of the FR-E700 series)

Turning the power on during measuring before LED of the operation panel turns off, it may remain in "measuring" (Pr. 259="2") status. In such a case, perform life measurement again.

4.9 Graph (Monitor area)

Sampling the output frequency or current, etc. of the inverter and displays the data in graph form (wave form). The sampling data can be saved in a file (Export). And the saved sampling data can be read and displayed (Import).

Select [Graph] under [View] menu, or click  on the tool bar to display "Graph".

There are two sampling methods.

- **High Speed sampling (only when the FR-E700 series is connected with USB without connecting through GOT)**

Able to sample a data with minimum sampling interval about 1 [ms]. One station can be monitored.

- **Monitor sampling**

Able to sample a data from multiple stations. Sampling interval varies depending on communication setting (communication speed and communication port) and a number of sampling items.

	Specifications
Sampling point	Sampling is available up to 10000 points per each CH
Sampling interval	High Speed sampling: Setting available from about 1 [ms] (mask count: 1) to 20 [ms] (mask count: 40) Monitor sampling: Setting available from about 50 [ms] to 540000 [ms] (varies depending on communication speed, communication port or number of sampling items)
Sampling time [ms]	High Speed sampling: Maximum sampling interval × 8000 Monitor sampling: Maximum sampling interval × 10000
Analog data	Sampling of 1CH to 4CH (4CHs) analog data is available.
Digital data	Sampling of 5CH to 8CH (4CHs) digital data is available.



Note

 
- During High Speed sampling, if other application is running or performing file handling with personal computer, communication error (Error code 0x8002007, 0x8002008) or buffer overflow error may occur, and unable to display data correctly. In this case, take measures such as, to close the other application, to refrain FR Configurator operation, or to set larger value in Mask count of sampling interval.
- Test operation (FWD, REC) does not function during graph sampling of two or more stations by communication (FA transparent function) through GOT.

4.9.1 Basic flow of Sampling

1) Sampling setting


Set sampling items. Changing of the sampling mode (High Speed or Monitor), sampling interval or sampling time, etc. is available in accordance with the purpose. When starting sampling with using a trigger, make a trigger setting.

2) Start sampling

Click  to start the sampling when sampling item is set already. If the trigger is set, sampling starts when the trigger condition is satisfied during "Waiting for Trigger" state which comes after "Sampling Pre-trigger Data" state.

3) Sampling complete

Sampling stops in the following condition.

- When elapsed time from the beginning of the monitoring exceeds the sampling time
- When  is clicked

4) Graph display

Able to change a scale of the graph, to show a numeric value of a wave at where cursors is laid, or to show effective value of between any 2 points, maximum value, and minimum value. Exporting of graph data (*Refer to page 82*) for saving as a file is also available.




Note

If an normal communication is not maintained (communication error, etc.), the sampling stops.

If an fault occurs during sampling, sampling continues.

During sampling, other communication tasks such as operation command or parameter reading, etc. are unavailable.

4.9.2 Explanation of window

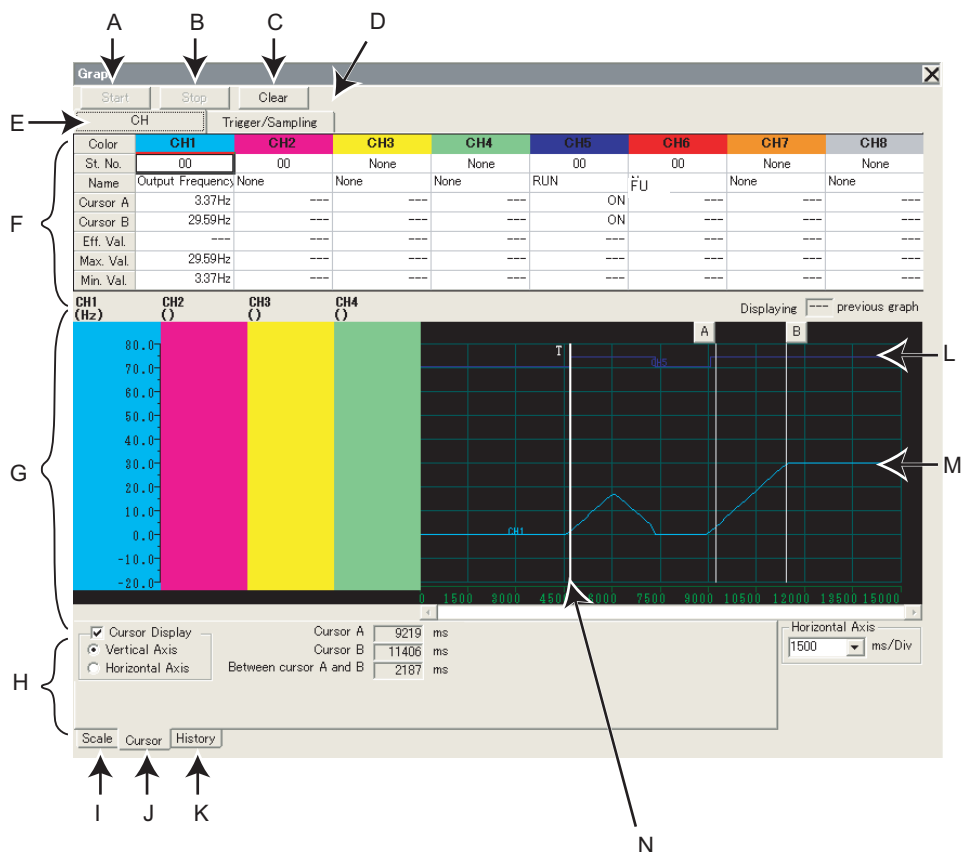


No.	Name	Function and description
A	Start	Starts sampling.
B	Stop	Stops sampling.
C	Clear	Clears the graph. If a graph has not been displayed, the setting of sampling item is cleared.
D	Trigger/Sampling	Click Trigger/Sampling to display trigger/sampling setting section. (Refer to page 115)
E	CH	Click CH to display sampling item setting section. (Refer to page 113)
F	Sampling item setting section (Trigger/sampling setting section)	Click tabs to switch displaying Sampling item setting section (Refer to page 113) and Trigger/sampling setting section (Refer to page 115).
G	Graph area	Shows sampling data in graph form.
H	Scale changing section (Cursor function section, History display section)	Click tabs to switch displaying Scale changing section (Refer to page 119), Cursor function section (Refer to page 120) and History display section (Refer to page 121).
I	Scale	Click Scale to display Scale changing section. (Refer to page 119)
J	Cursor	Click Cursor to display Cursor function section. (Refer to page 120)
K	History	Click History to display History display section. (Refer to page 121)
L	Graph (digital data)	Digital data drawn in graph form (CH5 to CH8). Off is drawn on a grid line, and On is drawn between the grid lines.
M	Graph (analog data)	Analog data drawn in graph form (CH1 to CH4). Graph is drawn based on the setting of Vertical Axis scale and 0 position adjust. Vertical Axis scale of each data (CH) can be changed separately.
N	Trigger Line	Shows a position of trigger start. "T" is displayed on top of Trigger Line.




Note

Each graph displays their own CH number. Though when a graph data is out from Graph area, CH number may not be displayed. Adjust with 0 position adjust and scale changing to make a data visible inside of Graph area.

 4.9.3 Sampling item setting

Click  to display Sampling item setting section. Set station number and item for sampling. Analog data is set in CH1 to CH4, and digital data is set in CH5 to CH8.

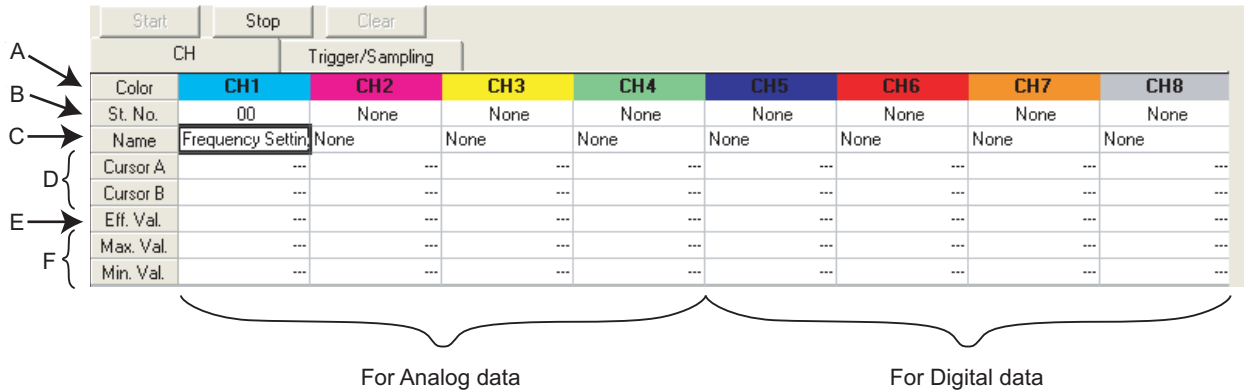

	CH	Trigger/Sampling							
A	Color	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
B	St. No.	00	None	None	None	None	None	None	None
C	Name	Frequency Setting	None	None	None	None	None	None	None
D	Cursor A
	Cursor B
E	Eff. Val.
	Max. Val.
F	Min. Val.

For Analog data
 For Digital data

No.	Name	Function and description
A	Color	Shows the color of the graph drawing.
B	St. No.	Select station number for sampling. For High Speed sampling, only CH1 is available for setting. CH2 to CH8 has the same station number as the one set in CH1.
C	Name	Select sampling item. Four analog data (CH1 to CH4), and four digital data (CH5 to CH8) are available.
D	Cursor A (Cursor B)	Shows measured value of cursor A and B on a wave form.
E	Eff. Val	Shows calculated effective value between cursor A and B.
F	Max. Val (Min. Val)	Shows maximum value and minimum value between cursor A and B while cursor is displayed in Vertical Axis.

• Sampling item list

Refer to the inverter manual for details of monitor item.

Refer to the inverter manual for digital data sampling items.


Model Name	Sampling Mode	Sampling Item
FR-E700	Monitor	Output Frequency, Output Current, Output Voltage, Frequency Setting, Motor Torque, Converter Output Voltage, Regenerative Brake Duty, Electronic Thermal Relay Function Load Factor, Output Current Peak Value, Converter Output Voltage Peak Value, Output Power, Cumulative Energization Time, Actual Operation Time, Motor Load Factor, Cumulative Power, PID Set Point, PID Measured Value, PID Deviation, Motor thermal load factor, Inverter thermal load factor
	High Speed	Output Frequency, Output Current, Output Voltage, Frequency Setting, Motor Torque, Converter Output Voltage, Regenerative Brake Duty, Electronic Thermal Relay Function Load Factor, Output Current Peak Value, Converter Output Voltage Peak Value, Output Power, Cumulative Energization Time, Actual Operation Time, Motor Load Factor, Cumulative Power, PID Set Point, PID Measured Value, PID Deviation, Motor thermal load factor, Inverter thermal load factor, Output Frequency (instantaneous value), U Phase Output Current, V Phase Output Current, W Phase Output Current, Converter Output Voltage (instantaneous value), Output Current (all three phases without filtering), Excitation Current, Torque Current, Terminal 2, Terminal 4




Note

- When changing the sampling mode (Monitor/High Speed), change before setting sampling items. Since some monitor items are different between the sampling mode, the setting of uncommon sampling item is cleared when changing the sampling mode. (Refer to page 115)
- When making sampling item setting, set analog data (CH1 to CH4) in ascending order from CH1, and digital data (CH5 to CH8) in ascending order from CH5.

 4.9.4 Sampling setting

Click  to display Sampling setting section. Setting sampling mode, Single/Continuous setting, and sampling time are available.

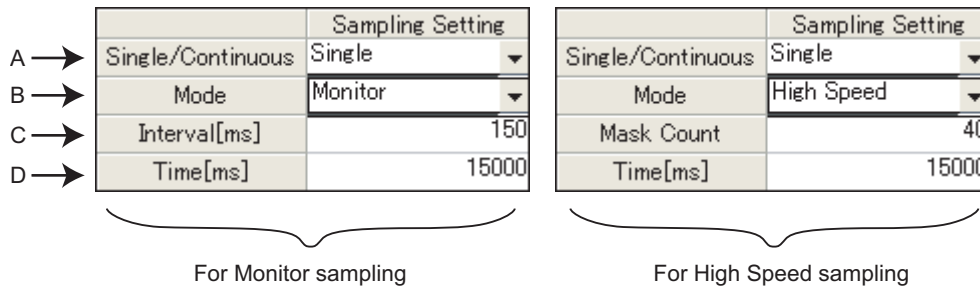

No.	Name	Function and description
A	Single/Continuous	Select between Single sampling or Continuous sampling. <ul style="list-style-type: none"> • Single: Sampling from start to end is performed only once. • Continuous: Sampling from start to end is performed continuously. When sampling ends, the data is added to History, and starts the next sampling. (Refer to page 121)
B	Mode	Select between High Speed sampling or Monitor sampling. High speed sampling is selectable only the FR-E700 series is connected with USB (not available when connected through GOT). Since some monitor items are different between the sampling mode, the setting of uncommon sampling item is cleared when changing the sampling mode
C	Interval [ms]	Set interval (cycle) of data sampling. Sampling interval is fixed depending on a number of sampling items and communication setting. (Refer to page 116)
	Mask Count	Set interval (cycle) of data sampling. For High Speed sampling, set Mask count (available from 1 to 40) to fix the sampling interval. Refer to the following formula for sampling interval. Sampling interval is approximately equal to $(\text{Mask Count} + 1) \times 0.5\text{ms}$ Example: when the Mask Count is 1 Sampling interval is approximately equal to $(1 + 1) \times 0.5\text{ms} = \text{About } 1\text{ms}$
D	Time [ms]	Set maximum sampling time. When elapsed time exceeds the sampling time, sampling stops. Maximum sampling time can be set as follows. (Refer to page 116) High Speed sampling: Maximum sampling interval \times 8000 Monitor sampling: Maximum sampling interval \times 10000 Example: when the Mask Count is 1 for High Speed sampling Maximum sampling time = 8000ms

• Setting range and setting increments of "Sampling Interval" and "Sampling Time"

Setting range of "Sampling Interval" and "Sampling Time" are different between High Speed sampling and Monitor sampling.

1) For High Speed sampling (only when using USB connection)

Sampling interval can be set from about 1 [ms] (Mask Count: 1) to about 20 [ms] (Mask Count: 40), and sampling time can be set up to "setting sampling interval × 8000".

2) For Monitor sampling

Setting range of "Sampling Interval" and "Sampling Time" varies according to communication setting. The minimum sampling interval is "number of sampling items × Lower limit of sampling interval". Refer to the following table for Lower limit of sampling interval.

Communication port	Communication speed [bps]	Lower limit of sampling interval [ms] *
RS-232C	4800	250
	9600	150
	19200	100
	38400	100
USB	-	50

* When making a communication through GOT (FA transparent function), minimum value of the sampling interval is 200ms regardless of communication speed.

Refer to the following table for the maximum value, the minimum value, and the setting increments of "Sampling Interval" and "Sampling Time" when the measurement conditions are actually set.

	Maximum value	Minimum value	Increments
Sampling interval [ms]	540000	Lower limit of sampling interval × the number of the sampling items *	50
Sampling time [ms]	Sampling interval × 10000	Sampling interval × 100	Sampling interval

* If the alarm trigger is set, the alarm trigger is also added to the measuring items.

Example: When connecting with RS-232C port, Communication Speed is 19200bps, and monitoring 3 items, "Output Frequency", "Output Current", and "Output Voltage".

Lower limit of sampling interval = 100 [ms]

Maximum value of sampling interval = 540000 [ms] (540 [s])

Minimum value of sampling interval = $100 \times 3 = 300$ [ms]

Setting increments of sampling interval = 100 [ms]

Maximum value of sampling time = $540000 \times 10000 = 5400000000$ [ms] (1500 [h])

Minimum value of sampling time = $300 \times 100 = 30000$ [ms] (30 [s])

Setting increments of sampling time = 300 [ms]

4.9.5 Trigger setting

With making Trigger setting, sampling can be started at a fault occurrence or when sampling item meets a trigger condition.

Trigger	
A → Type	Inside
B → CH	CH01
C → Start At	Rise
D → Level	2.00
E → Position[%]	10


No.	Name	Function and description
A	Type	Select a trigger type for sampling start. You can select the trigger type from the following three. <ul style="list-style-type: none"> Not used Inside (Sampling starts when sampling item meets a trigger condition) Fault (Sampling starts at a fault occurrence)
B	CH/St. No.	Selecting item is different according to the trigger type. <ul style="list-style-type: none"> For Inside trigger: Select a trigger item (CH1 to CH8). For Fault trigger: Select a station number for checking a fault. Station number set for sampling item can be selected.
C	Start At	Select a trigger meeting condition from Rise or Fall. (Only "Rise" can be selected for Fault trigger.) <ul style="list-style-type: none"> Rise For analog data: Starts when a value exceeds more than a setting of Trigger Level For digital data: Starts when a signal turns ON from OFF Fall For analog data: Starts when a value falls lower than a setting of Trigger Level For digital data: Starts when a signal turns OFF from ON
D	Level	Set a level of trigger meeting condition for analog signal. (Setting is available only when Inside trigger is set, and analog data is selected.)
E	Position [%]	Set a percentage for a data before trigger meets the condition. The amount based on the specified percentage of total sampling data is assigned for the data before trigger meets the condition. Value is 10% increments and can be set from 10% to 90%.



REMARKS

- For starting with analog data
If the trigger condition has already met when is clicked, sampling will not start. Sampling starts only when a value exceeds more than a setting of "Level" when "Rise" is selected, or when a value falls lower than a setting of "Level" when "Fall" is selected.
Example: when trigger starts at "Rise", and "3" is set for Level
If the value is already 4 at sampling start, then this case does not meet trigger condition. If the value lower than 3 exceeds more than 3, then the case meets trigger condition, and starts sampling.
- When monitor display is changed to the machine speed with a value other than 0 is set in *Pr. 37 Speed display*
When setting "Output Frequency" or "Frequency Setting" for Inside trigger, set machine speed for trigger level directly into "Level" field.
For example, if 1800 is set in *Pr. 37 Speed display*, sampling "Output Frequency", and want to meet trigger condition at 900, then set 900 directly into "Level" field.

• About trigger waiting state

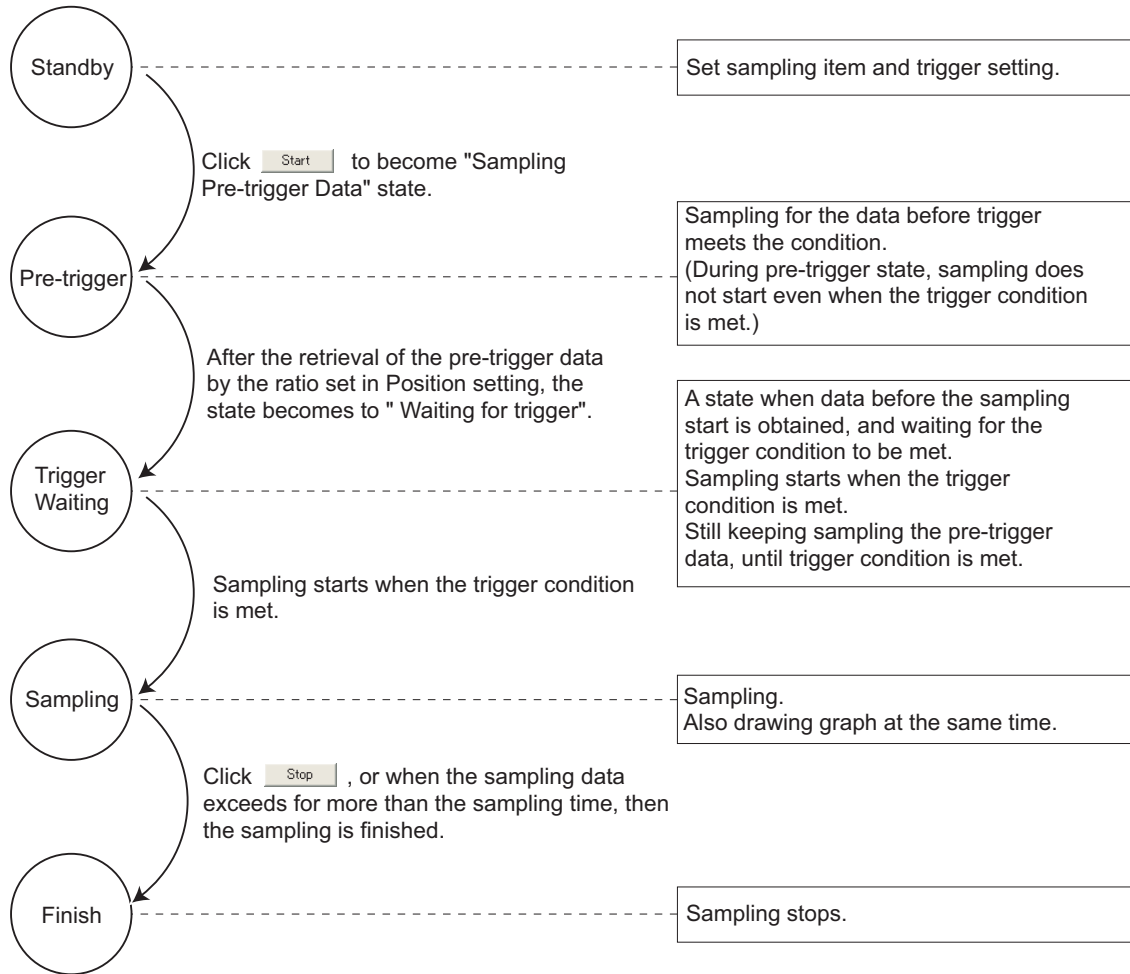


4.9.6 Scale changing

Scale changing of the displayed graph is available. Graph area is divided into vertical 10 grids and horizontal 10 grids. Scale of vertical axis and horizontal axis can be changed by setting a value of each one grid.

Selected graph can be moved upper or lower with changing 0 position adjust.


Scale value shown on vertical axis changes along with the vertical scale setting.

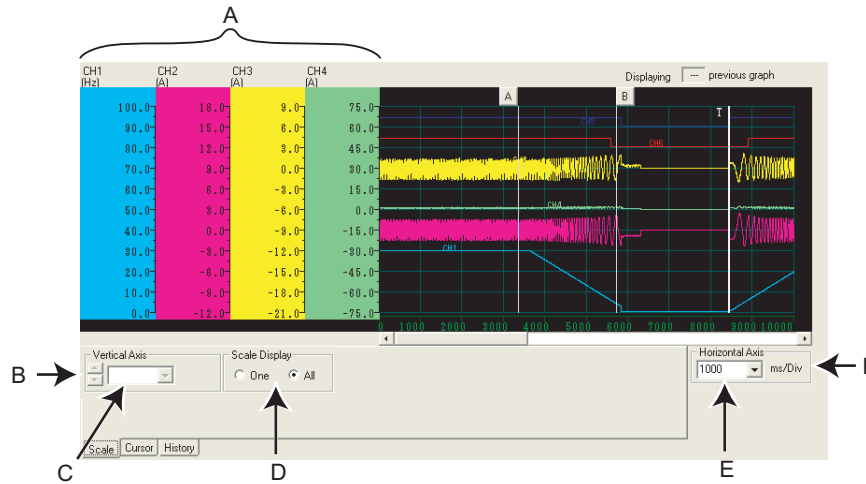

No.	Name	Function and description
A	Vertical Scale	Shows vertical axis scale of each CH. Scale of each analog data can be set separately.
B	▲ / ▼ (0 position adjust)	Click ▲ / ▼ to move the 0 position of the selected graph upper or lower.
C	Vertical Axis	Vertical scale of the selected CH can be changed. To change the scale, set a graph value proportional for each grid. (Each CH can be changed separately.) Unavailable to change when digital data is selected.
D	Y-axis Scale Optimization	Click button to adjust the wave form of each analog data of graph to fit in the window.
E	Scale display switching	Switches the display of the vertical axis between the selected CH only or the vertical axis of all analog data (or all digital data). (When showing all vertical axis, scale changing and 0 position adjust are unavailable.)
F	Horizontal Scale changing	Horizontal scale of graph can be changed. To change the scale, set a graph value proportional for each grid.
G	Horizontal Axis scroll	Scrolls the graph to right and left

4.9.7 Cursor Function

Shows a numeric value of a wave at where cursors is laid, or shows effective value of between any 2 points, maximum value, and minimum value.

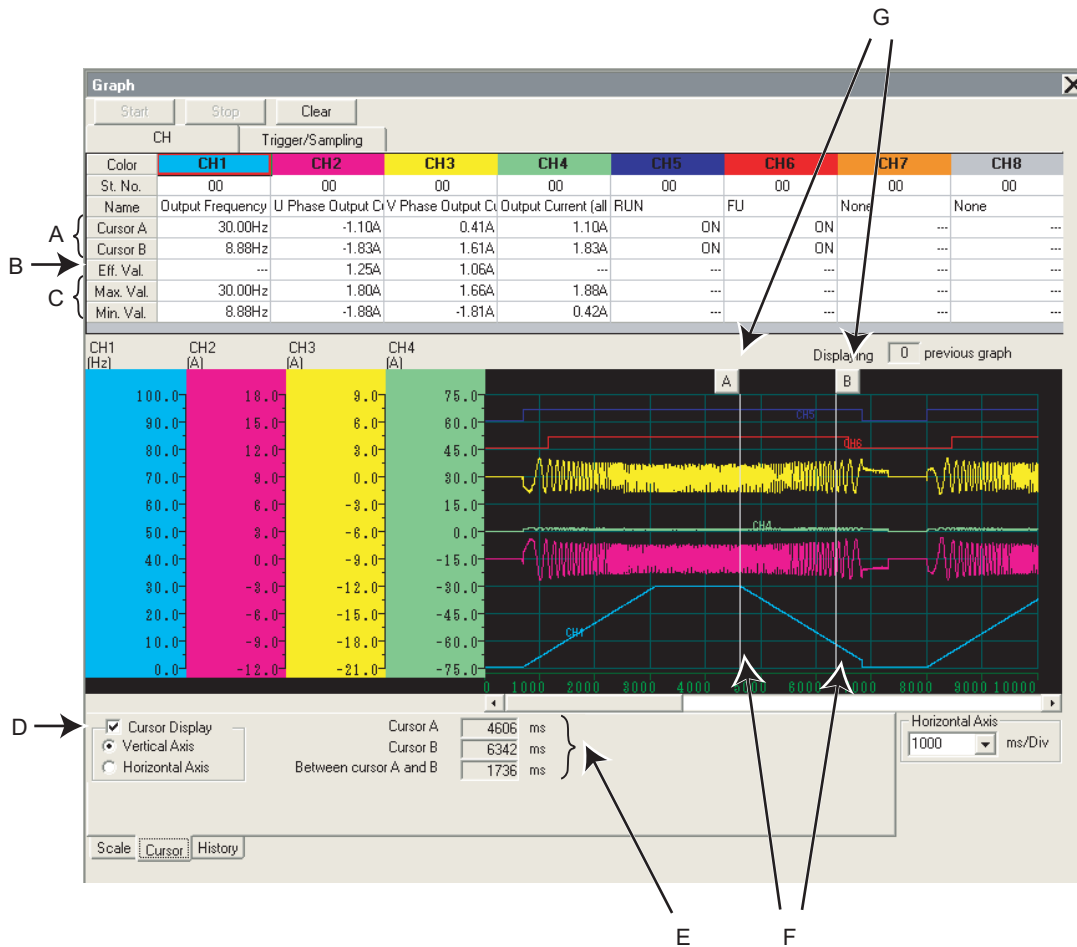


No.	Name	Function and description
A	Cursor A (Cursor B)	Shows measured value of cursor A and B of the graph.
B	Eff. Val.	Shows calculated effective value between cursor A and B.
C	Max. Val. (Min. Val.)	Shows maximum value and minimum value between cursor A and B while cursor is displayed in Vertical Axis.
D	Cursor Display	Switches the cursor displaying or hiding with a check box. Selecting Vertical Axis or Horizontal Axis switches the cursor display.
E	Cursor time	Shows time of cursor A and cursor B, and time between cursor A and B when cursor is displayed in Vertical Axis.
F	Cursor Line	Shows a position of cursor A and B. Move a mouse near around the cursor line and click to move the cursor line to the mouse position. Cursor Line can be also moved with dragging. Dragging the cursor with Shift key pressed can move the both cursor A and B simultaneously. Cursor A is displayed on the left side during vertical axis display, and the upper side during horizontal axis display. Cursor B is displayed on the right side during vertical axis display, and the lower side during horizontal axis display. The position of cursor A and B does not switch.
G	Cursor mark (A, B)	A numeric value of a wave at where cursors is laid is displayed in Sampling item field (Cursor A, B).

4.9.8 History display

The past 5 sampling data (including the current data) can be saved in History, and available to display again. When sampling ends, the graph data and comment is added to History. If there are already 5 data when adding to History, the oldest data is erased.

When several data is found in the history, two graphs can be placed in layer and displayed. When displayed in layer, the graph currently displayed is shown in each CH color and the graph for overwriting is in gray.

Click History tab to display History section.

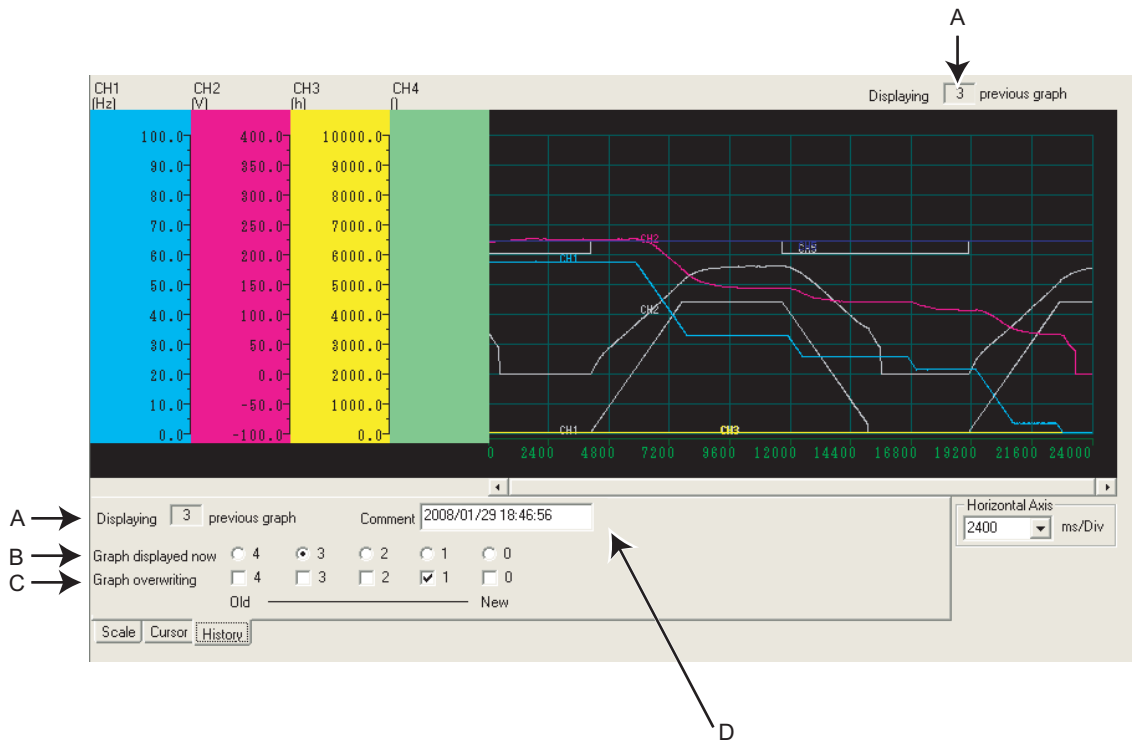

No.	Name	Function and description
A	History display	Shows how old the displaying graph is from the newest graph.
B	Graph displayed now	Click the number to display the responding graph of that number.
C	Graph overwriting	Checked graphs are displayed in layer.
D	Comment	A field for comments. Sampling date and time is automatically inputted when the sampling is finished and saved to History.


REMARKS

- For Continuous sampling, the data is added to History sequentially, and starts the next sampling.
- When graphs are displayed in layer, cursor function is valid for the graph currently displayed.


4.9.9 Example of Graph sampling (monitoring Output Frequency, terminal RUN, terminal FU)

• When sampling without trigger


- (1) Select "00" at St. No. field.
Select "Output Frequency" at Name field in CH1, "RUN" in CH5, and "FU" in CH6.

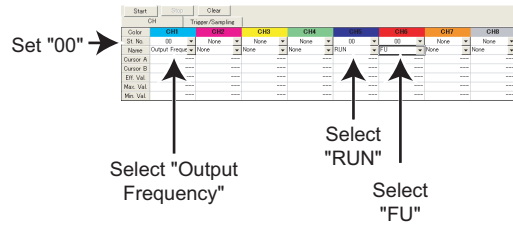


- (2) Select "Not used" at Type field for trigger setting.
Set sampling interval and sampling time.

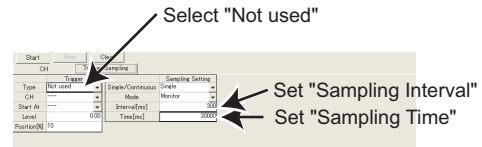


- (3) Click **Start** to start sampling.

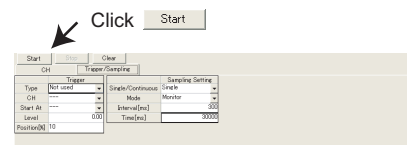

- (4) Click **Stop**, or the sampling time has passed, and the sampling is finished.

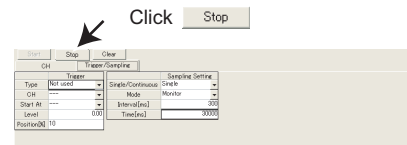


- (5) Graph is adjustable for a better viewing.

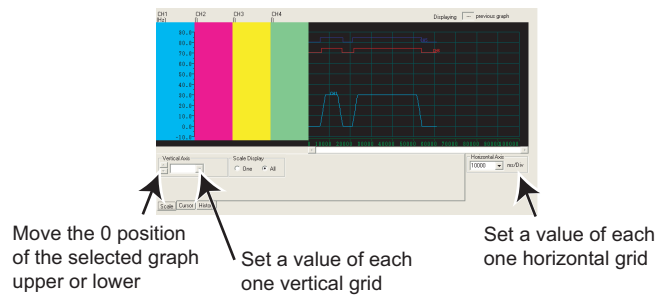


- (6) Graph data can be exported (Refer to page 82) for saving data as a file.

- When sampling with Inside trigger, starting at the Rise of terminal RUN, with 10% of sampling data before the trigger meets the condition

- (1) Select "00" at St. No. field.
Select "Output Frequency" at Name field in CH1, "RUN" in CH5, and "FU" in CH6.

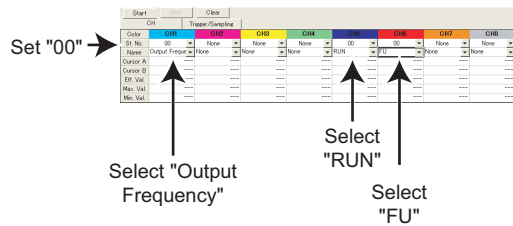

- (2) Make trigger setting as follows:
Select "Inside" at Type field.
Select "CH5" at CH field.
Select "Rise" at Start At field.
Set "10" at Position [%] field.

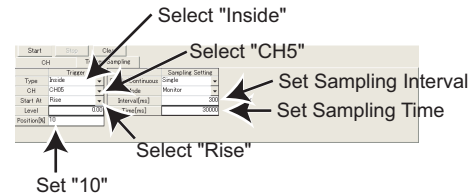

Set sampling interval and sampling time.

- (3) Click to show "Sampling Pre-trigger Data", and retrieves the data before the trigger meets condition (10% of whole sampling time). After the retrieval of the data before the trigger meets condition, then the screen shows "Waiting for Trigger" and becomes the trigger waiting state.



Sampling Pre-trigger Data → Waiting for Trigger

- (4) When trigger meets the condition (Rise of terminal RUN), sampling starts automatically.
- (5) Click , or the sampling time has passed, and the sampling is finished.



- (6) Graph is adjustable for a better viewing.



- (7) Graph data can be exported (Refer to page 82) for saving data as a file.


 **REMARKS**

In this example, "Position [%]" is set to "10%". The Rise of terminal RUN during the 10% of the whole sampling time after clicking (during Pre-Trigger state) is ignored, and sampling is not started.


Graph (Monitor area)

- When sampling with Fault trigger, starting at the fault occurrence, with 90% of sampling data before the fault occurrence

- Select "00" at St. No. field.
Select "Output Frequency" at Name field in CH1, "RUN" in CH5, and "FU" in CH6.

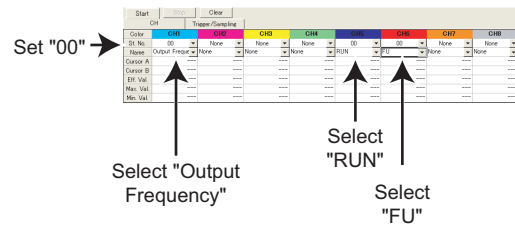


- Make trigger setting as follows:
Select "Fault" at Type field.
Select "00" at St. No. field.
Input "90" at Position [%] field.

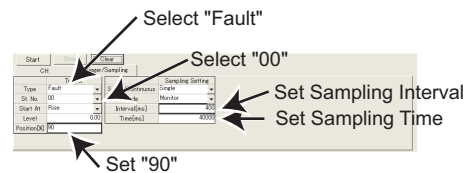


Set sampling interval and sampling time.

- Click **Start** to show "Sampling Pre-trigger Data", and retrieves the data before the trigger meets condition.
After the retrieval of the data before the trigger meets condition, then the screen shows "Waiting for Trigger" and becomes the trigger waiting state.

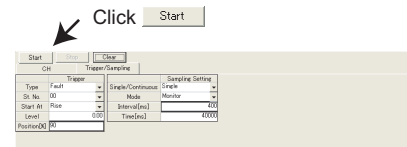


Sampling Pre-trigger Data → Waiting for Trigger

- When inverter fault occurs, sampling starts automatically.
- Click **Stop**, or the sampling time has passed, and then the sampling is finished.

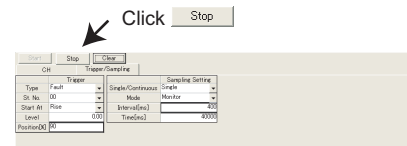

- Graph is adjustable for a better viewing.

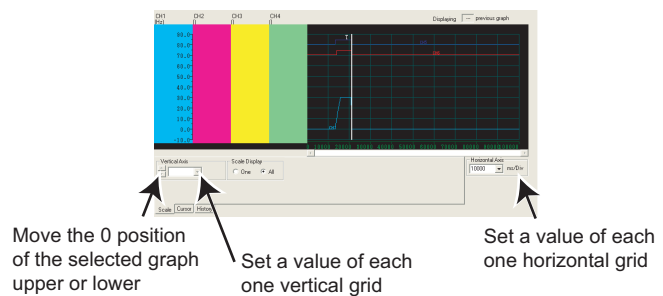

- Graph data can be exported (Refer to page 82) for saving data as a file.





REMARKS

In this example, "Position [%]" is set to "90%". The fault occurrence during the 90% of the sampling time after clicking **Start** (during Pre-Trigger state) is ignored, and sampling is not started.

4.10 Batch Monitor (Monitor Area)

"Batch Monitor" enables to monitor various data of a selected station.
 Select [Batch Monitor] in [View] menu to display "Batch Monitor".

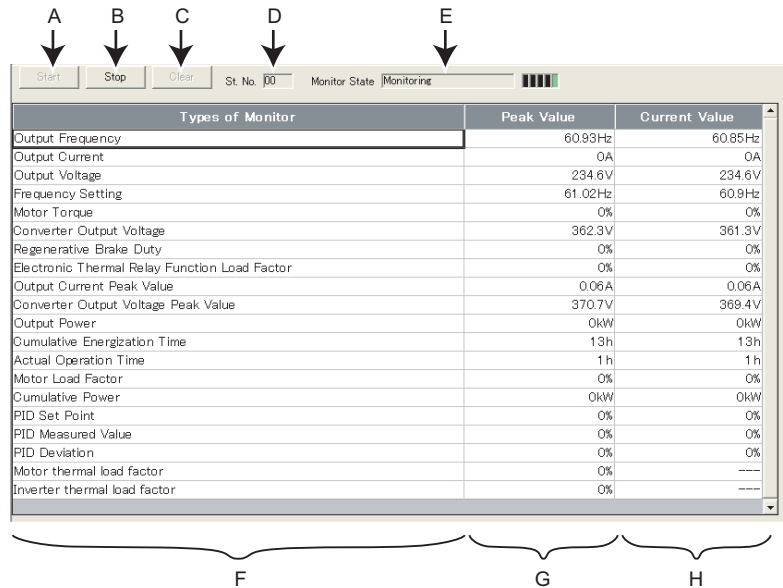

No.	Name	Function and description
A	Start	Starts monitoring.
B	Stop	Stops monitoring.
C	Clear	Clears Peak Value and Current Value.
D	Station number	Displays the station number being monitored.
E	Monitor State	Shows a state of monitor. When an error has occurred, the color changes to red to display an error stop. During monitoring, the following indication appears to indicate monitoring. 
F	Types of Monitor	Displays monitor item.
G	Peak Value	Displays the maximum value detected in each monitor item.
H	Current Value	Displays the current monitoring value being measured in each monitor item.

Monitor item list

Refer to the inverter manual for details of monitor item.

Model name	Sampling Item
FR-E700	Output Frequency, Output Current, Output Voltage, Frequency Setting, Motor Torque, Converter Output Voltage, Regenerative Brake Duty, Electronic Thermal Relay Function Load Factor, Output Current Peak Value, Converter Output Voltage Peak Value, Output Power, Cumulative Energization Time, Actual Operation Time, Motor Load Factor, Cumulative Power, PID Set Point, PID Measured Value, PID Deviation, Motor Thermal Load Factor, Inverter Thermal Load Factor





Note

- When a communication error has occurred, a batch monitor stops. To perform batch monitor again, solve a cause of the communication error first, set the system OFFLINE once, and then ONLINE.
- When an inverter fault has occurred during batch Monitor, the monitored value of output frequency, output current, output voltage monitor at fault occurrence are held.

4.11 I/O Terminal Monitor (Monitor Area)

You can check I/O terminal of the inverter, terminal assignment status of the plug-in option (FR-A7AR, FR-A7AX, FR-A7AY), and ON/OFF status of each terminal. The monitor displays green when terminal is ON and black when terminal is OFF. You can also start Wizard (Refer to page 127) for function assignment for each I/O terminal from "I/O Terminal Monitor". Select [I/O Terminal Monitor] in [View] menu to display "I/O Terminal Monitor".

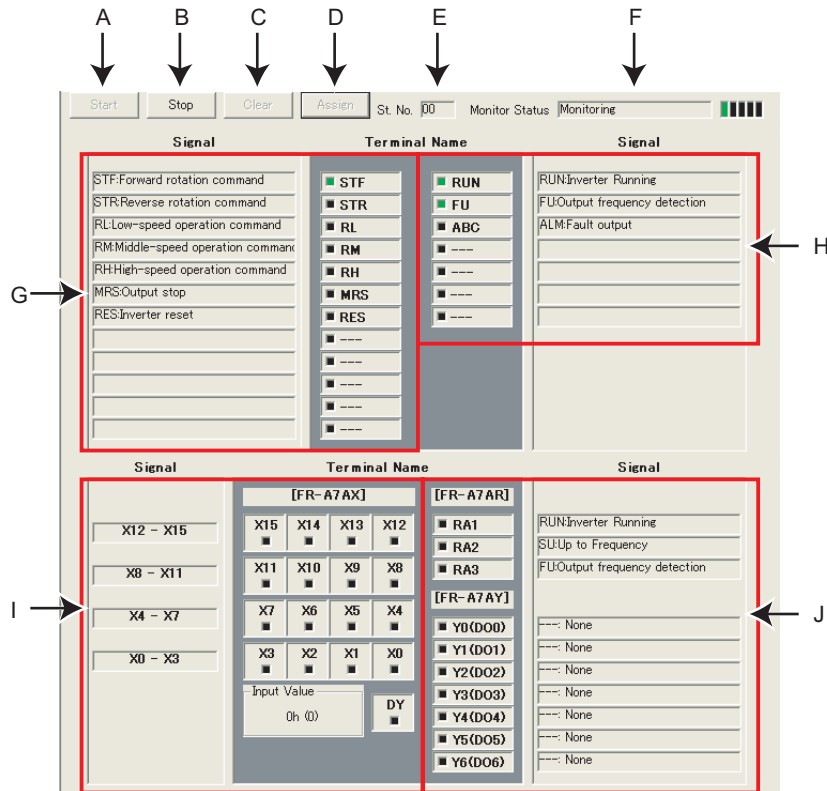

No.	Name	Function and Description
A	Start	Starts monitoring of I/O terminal.
B	Stop	Stops monitoring of I/O terminal. (I/O terminal state is held at the monitor stop.)
C	Clear	Clears signal status (ON/OFF status) of I/O terminal.
D	Assign	Starts I/O terminal assignment wizard (Refer to page 127). I/O terminal can be assigned when ONLINE and during not monitoring.
E	Station number	Displays the station number of the monitoring inverter.
F	Monitor status	Shows a state of monitor. When an error has occurred, the color changes to red to indicate an error stop. During monitoring, the following indication appears to indicate monitoring. 
G	Inverter input terminal status	Displays input terminal state and function assignment status of the inverter.
H	Inverter output terminal status	Displays output terminal state and function assignment status of the inverter. If negative logic is set, "(negative logic)" is displayed after function name.
I	Option input terminal status	Displays input terminal state of the plug-in option (FR-A7AX), function assignment status, and numerical data of terminal. Displays numerical data of terminals in hexadecimal and decimal in parenthesis.
J	Option output terminal status	Displays output terminal state and function assignment status of the plug-in option (FR-A7AR, FR-A7AY, FR-A7NC). If negative logic is set, "(Negative Logic)" is displayed after function name.

4.12 I/O Terminal Assignment


Use "I/O Terminal Assignment" to assign signals to I/O terminal of the inverter or plug-in option.

Click **Assign** of "I/O Terminal Monitor" to display "I/O Terminal Assignment" window.

Select Terminal Location to change the screen.

Select the signal for each terminal, then click **Next>**. Necessary settings according to each terminal and selected signal are displayed in the Parameter List.

Click **Finish** to reflect the changed setting into the Parameter List, then returns to the Main frame. To write the parameter setting to the inverter, write from the Parameter List in the Main frame. (Refer to page 91)

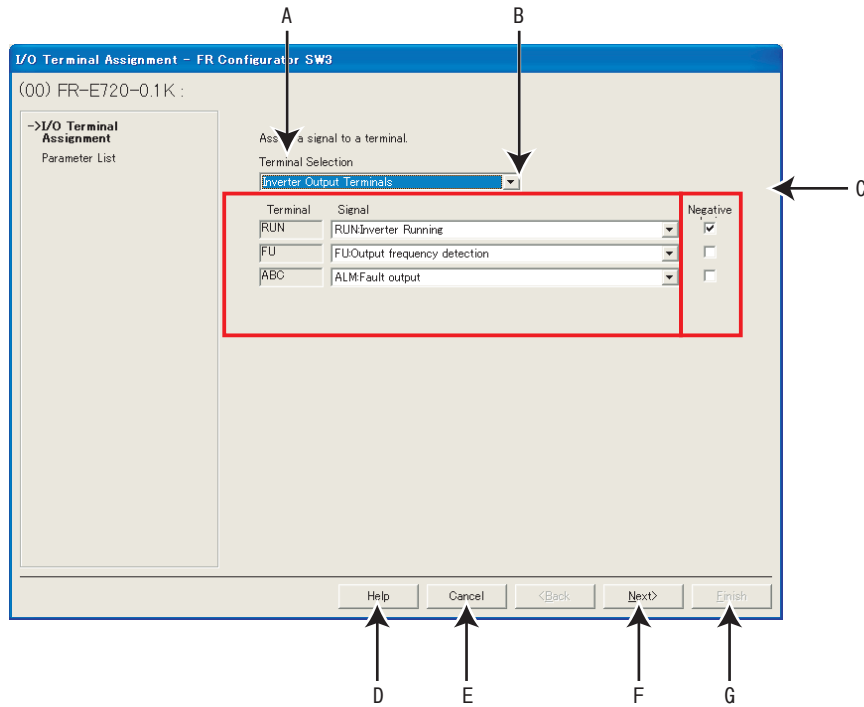



No.	Name	Function and Description
A	Terminal Selection	Select the location of terminal to be assigned. Select input terminal, output terminal or plug-in option.
B	Signal selection field	Select the signal to be assigned.
C	Negative logic	Check when selecting negative logic for assigning signal of the output terminal.
D	Help	Shows Help window. (Refer to page 128)
E	Cancel	Closes the window with the setting made invalid.
F	Next>	Displays Parameter List.
G	Finish	Closes I/O terminal assignment at the Parameter List window with the setting made valid. Configured setting by I/Oterminal assignment is reflected into Parameter List. (Parameter writing to the inverter is not performed.)


4.13 Help







4.13.1 Help

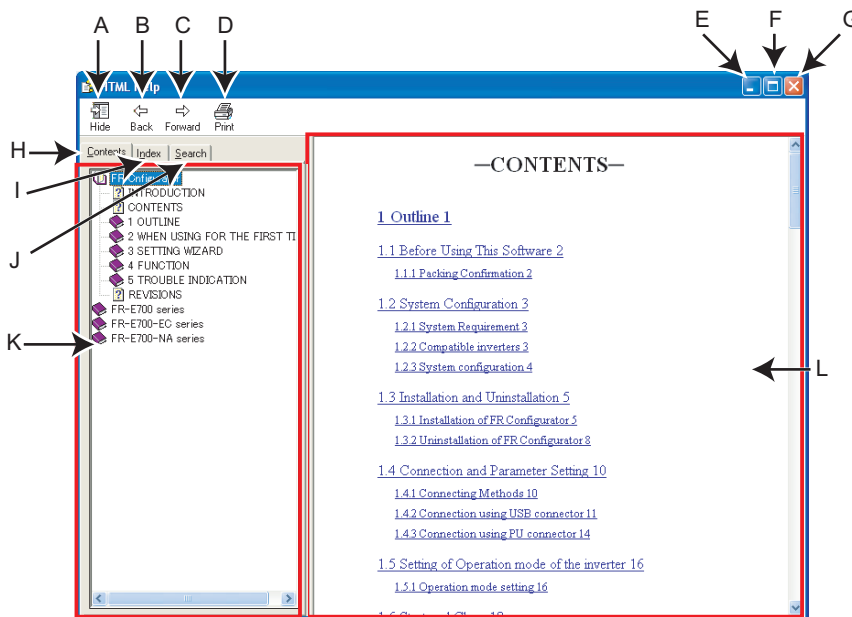Checking a software manual and inverter manual is available with using Help function.

There are following ways of displaying Help.

- (1) Select [Help] in [Help] menu to display.
- (2) Click  on the tool bar to display.
- (3) Press F1 key on the keyboard to display.
- (4) Click  on the current window to display.
- (5) Press F1 key when selecting a parameter on the parameter list to display Help. Description of the selected parameter appears.




No.	Name	Function and description
A	Hide	Hides navigation panel, and  ,  ,  tabs. While hiding the navigation panel and tabs, the button changes to  . Click  to display the navigation panel and tabs again.
B	Back	Returns to the previous help description.
C	Forward	Click to read forward the help description again after using  and returned to the previous description.
D	Print	Prints help description.
E	Minimize button	Click to minimize the help window.
F	Maximize button	Click to maximize the help window.
G	Close button	Click to close the help window.
H	Contents	Click when checking the contents. Displays Contents in navigation panel.
I	Index	Click when checking index. Displays Index in navigation panel.
J	Search	Click when using search function. Displays Search in navigation panel.
K	Navigation	Displays Contents, Index and Search.
L	Contents	Shows help description.

• HTML format and link

Help description is displayed in the contents panel. Help description is displayed in HTML format. Hyperlink is available to jump to the related help description. Hyperlink in a text is shown in blue and underline.

• Contents


Click **Contents** to display a list of content. Click a desired item in the list to show the help description.

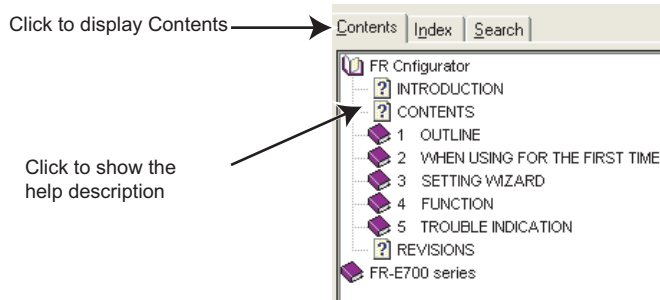

• Index


Click **Index** to display a index of registered words.

Type characters to narrow down the registered words. Double-click the desired word in the list to show the help description of that word.

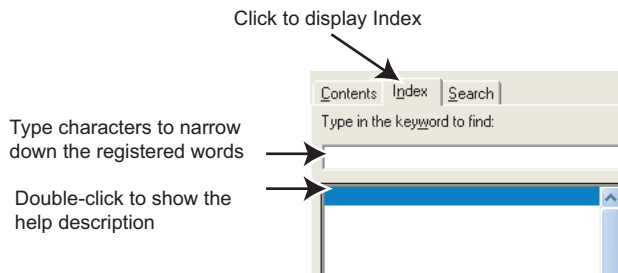


• Search

Click **Search** to display search panel. Type character string and click **List Topics** to perform full-text search with the character string. Double-click the desired topic in the search result to show the help description of that topic.

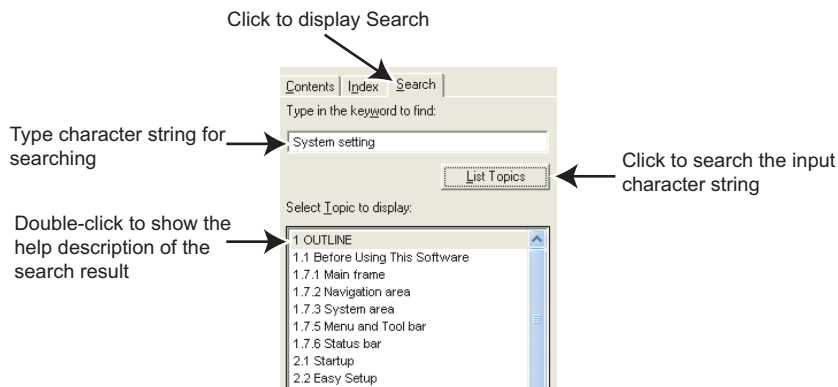

4.13.2 Version Information

Select [About FR Configurator SW3...] in [Help] menu to display copyright, product name, type name, version information and license of FR Configurator.

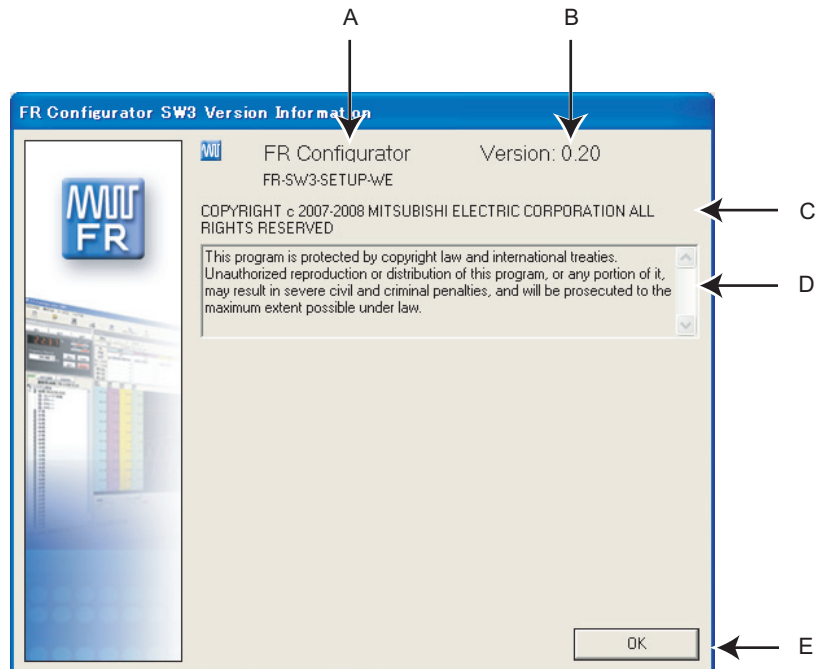

No.	Name	Function and description
A	Product name	Shows product name.
B	Version	Shows version information.
C	Copyright information	Shows copyright information.
D	Copyright description	Shows copyright description.
E	OK	Click to close the version information window.

5 TROUBLE INDICATION

This chapter explains the "Trouble indication" of this product.

Always read the instructions before using the software.

5.1	Error Code	132
5.2	Error Display on a Dialog.....	139

1

2

3

4

5

5.1 Error Code

If a communication error is detected, the following communication error code and error message appears in communication error dialog (Refer to page 26).

5.1.1 Communication error with inverter

Error Code (HEX)	Error Message	Cause	Countermeasure
0x80A00101	Failed to open a communication line.	<ol style="list-style-type: none"> 1. Communication setting is not set for USB while connecting with USB. 2. No communication port existed on the PC. Or not recognized. 	<ol style="list-style-type: none"> 1. Check for connection configuration at [Options] in [Tool] menu. (Refer to page 79) 2. Check that communication port exists on the PC.
0x80A00104 0x80A00107 0x80A0010A	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80010000	Errors from computer in a row are more than the retry count.	<ol style="list-style-type: none"> 1. Setting of Pr. 124 PU communication CR/LF selection, Pr. 341 RS-485 communication CR/LF selection is different with software setting. 2. Electromagnetic interference 3. Cable breakage 	<ol style="list-style-type: none"> 1. Set Pr. 124 PU communication CR/LF selection, Pr. 341 RS-485 communication CR/LF selection same as the setting of the software. 2. Set larger value in Pr. 121 Number of PU communication retries, Pr. 335 RS-485 communication retry count. 3. Replacement of cable
0x80010001	The parity check result does not match the specified parity.	<ol style="list-style-type: none"> 1. Setting of Pr. 120 PU communication parity check, Pr. 334 RS-485 communication parity check selection is different with software setting. 2. Electromagnetic interference 3. Cable breakage 	<ol style="list-style-type: none"> 1. Set Pr. 120 PU communication parity check, Pr. 334 RS-485 communication parity check selection same as the setting of the software. 2. Set larger value in Pr. 121 Number of PU communication retries, Pr. 335 RS-485 communication retry count. 3. Replacement of cable
0x80010002	The sum check code in the computer does not match that of the data received by the inverter.	<ol style="list-style-type: none"> 1. Communication setting is different between the inverter and the software. 2. Data corrupted due to electromagnetic interference, etc. 	<ol style="list-style-type: none"> 1. Make a same communication setting. 2. Check for electromagnetic interference and wiring.
0x80010003	Data received by the inverter is in the wrong protocol, or data receive is not completed within the given time.	<ol style="list-style-type: none"> 1. Setting of Pr. 124 PU communication CR/LF selection, Pr. 341 RS-485 communication CR/LF selection is different with software setting. 2. Electromagnetic interference 3. Cable breakage 	<ol style="list-style-type: none"> 1. Set Pr. 124 PU communication CR/LF selection, Pr. 341 RS-485 communication CR/LF selection same as the setting of the software. 2. Set larger value in Pr. 121 Number of PU communication retries, Pr. 335 RS-485 communication retry count. 3. Replacement of cable
0x80010004	The stop bit length differs from the initial setting.	<ol style="list-style-type: none"> 1. Setting of Pr. 119 PU communication stop bit length, Pr.333 RS-485 communication stop bit length is different with software setting. 2. Electromagnetic interference 3. Cable breakage 	<ol style="list-style-type: none"> 1. Set Pr. 119 PU communication stop bit length, Pr.333 RS-485 communication stop bit length same as the setting of the software. 2. Set larger value in Pr. 121 Number of PU communication retries, Pr. 335 RS-485 communication retry count. 3. Replacement of cable

Error Code (HEX)	Error Message	Cause	Countermeasure
0x80010005	Due to wiring error, next data intruded before data reception is completed.	<ol style="list-style-type: none"> Setting of <i>Pr. 123 PU communication waiting time setting, Pr.337 RS-485 communication waiting time setting</i> is too small. Electromagnetic interference Cable breakage 	<ol style="list-style-type: none"> Set larger value or 9999 in <i>Pr. 123 PU communication waiting time setting, Pr.337 RS-485 communication waiting time setting</i>. Set larger value in <i>Pr. 121 Number of PU communication retries, Pr. 335 RS-485 communication retry count</i>. Replacement of cable
0x80010007	The character received is invalid (other than 0 to 9, A to F, control code).	<ol style="list-style-type: none"> Setting of <i>Pr. 119 PU communication stop bit length, Pr.333 RS-485 communication stop bit length</i> is different with software setting. Electromagnetic interference Cable breakage 	<ol style="list-style-type: none"> Set <i>Pr. 119 PU communication stop bit length, Pr.333 RS-485 communication stop bit length</i> same as the setting of the software. Set larger value in <i>Pr. 121 Number of PU communication retries, Pr. 335 RS-485 communication retry count</i>. Replacement of cable
0x8001000A	A mode error occurred.	Parameter setting or frequency setting was performed in the operation mode such as external operation (EXT) etc. which has no parameter setting and speed command source with the FR Configurator.	<p>Change the operation mode to the PU operation mode (or NET). Check the setting value of <i>Pr. 338 Communication operation command source, Pr. 550 NET mode operation command source selection, Pr. 551 PU mode operation command source selection</i>. (Operation command source changes according to inverter communication connection. Refer to page 9, 21)</p>
0x8001000C	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80010011	You can not write a value out of range to parameter.	Tried to write a value out of setting range of the parameter.	Set a value within the setting range, and write.
0x80010012	A mode error occurred.	<ol style="list-style-type: none"> <i>Pr. 79 Operation mode selection, Pr. 77 Parameter write selection</i> is not set for PU/NET (RS-485). Parameter setting or frequency setting was performed in the operation mode such as external operation (EXT) etc. which has no parameter setting and speed command source with the FR Configurator. 	<ol style="list-style-type: none"> Click [PU] button of Test Operation. Change the setting of <i>Pr. 79</i> for PU/NET (RS-485). Change the operation mode to the PU operation mode (or NET). Check the setting value of <i>Pr. 339 Communication speed command source, Pr. 551 PU mode operation command source selection</i>. (Speed command source changes according to inverter communication connection. Refer to page 9, 21)
0x80010013	Parameter writing during inverter operation is unavailable.	Parameter writing was attempted during inverter operation.	Perform parameter writing after inverter is stopped.
0x80010014	Parameter writing to a write disabled parameter is unavailable.	Writing is disabled by <i>Pr. 77 Parameter write selection, Pr. 77 = 1 (write disabled)</i>	Change the setting of <i>Pr. 77 Parameter write selection</i> except for "1".
0x80010016	Can not read/write an nonexistent parameter.	<ol style="list-style-type: none"> Version of inverter and version of setup software parameter file is not corresponding. Simple mode is set by <i>Pr. 160 User group read selection</i>. 	<ol style="list-style-type: none"> Reinstallation of the software Change the setting of <i>Pr. 160</i> except for simple mode setting.
0x80010017	Specified option is not installed in the inverter.	Reading of option parameter was attempted while the option is not installed.	Install the option to the inverter.

Error Code (HEX)	Error Message	Cause	Countermeasure
0x80010018	There is no difference between the analog setting of gain and bias.	There is only small difference between the analog setting of gain and bias.	Set larger setting between the analog setting of gain and bias.
0x8001001A	Unsupported model is connected.	If FR-E500 is connected to the station where FR-E700 is set for system setting, switching to ONLINE will display a communication error dialog. In this case, click OK, and proceed converting. If the case is not the one above, please contact your sales representative.	
0x80010021	Operation mode switching during inverter operation is unavailable.	Change the operation mode after the inverter stop.	Set "2" in <i>Pr. 77 Parameter write selection</i> . Stop the inverter.
0x80010022	When forward rotation signal (STF) is on, switching to External mode is unavailable.	Switching to External mode was attempted when forward rotation signal (STF) is on.	Change the operation mode after switching off of STF.
0x80010023	When reverse rotation signal (STR) is on, switching to External mode is unavailable.	Switching to External mode was attempted when reverse rotation signal (STR) is on.	Change the operation mode after switching off of STR.
0x80010024	Switching of operation mode is unavailable with current operation mode.	Attempted to switch the operation mode other than the one set in <i>Pr. 79 Operation mode selection</i> .	Change the setting of <i>Pr. 79 Operation mode selection</i> .
0x80010025	Reset is unavailable with current setting.	Reset is restricted by <i>Pr. 75 Reset selection/disconnected PU detection/PU stop selection</i> .	Change the setting of <i>Pr. 75 Reset selection/disconnected PU detection/PU stop selection</i> .
0x80010026	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80010101	Failed to make communication with the inverter during the time set with Time Out.	<ol style="list-style-type: none"> Setting of <i>Pr. 122 PU communication check time interval</i>, <i>Pr. 336 RS-485 communication check time interval</i>, <i>Pr. 548 USB communication check time interval</i> is too small. Electromagnetic interference Cable breakage/damaged PC port is set invalid/port breakage 	<ol style="list-style-type: none"> Set larger value or 9999 in <i>Pr. 122 PU communication check time interval</i>, <i>Pr. 336 RS-485 communication check time interval</i>, <i>Pr. 548 USB communication check time interval</i>. Set larger value for Time Out setting of the software. Cable connection/replacement Activate the port by using Device Manager/port replacement
0x80010102	Illegal data is included in the data received by the computer.	<ol style="list-style-type: none"> Setting of <i>Pr. 124 PU communication CR/LF selection</i>, <i>Pr. 341 RS-485 communication CR/LF selection</i> is different with software setting. Electromagnetic interference Cable breakage 	<ol style="list-style-type: none"> Set <i>Pr. 124 PU communication CR/LF selection</i>, <i>Pr. 341 RS-485 communication CR/LF selection</i> same as the setting of the software. Set larger value in <i>Pr. 121 Number of PU communication retries</i>, <i>Pr. 335 RS-485 communication retry count</i>. Replacement of cable
0x80020001	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80020002	You can not write a value out of range to parameter.	Tried to write a value out of setting range of the parameter.	Set a value within the setting range, and write.
0x80020003 0x80020004	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80020005 0x80020006 0x80020007 0x80020008	Failed to obtain the received data.	Failed to obtain the graph sampling data during High Speed sampling.	Close other applications. Set larger value for Mask Count.
0x80030001	Wrong communication port is assigned.	<ol style="list-style-type: none"> Communication port is set invalid. Other application is already using the same port. 	<ol style="list-style-type: none"> Activate the port by using Device Manager. Close other applications, and turn ONLINE.

Error Code (HEX)	Error Message	Cause	Countermeasure
0x80030002 0x80030003 0x80030004 0x80030005 0x80030006 0x80030007 0x80030008 0x80030009 0x8003000A 0x8003000B	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x8003000C	Duplicated station number were found with USB communication.		
0x8003000D	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x8003000E	Driver is not installed or broken.	Driver is not installed or broken.	Reinstallation of the software
0x8003000F 0x80030010	An unexpected error occurred to S/W.	Please contact your sales representative.	

5.1.2 Communication error when connected through GOT

Error Code HEX)	Error Message	Cause	Countermeasure
0x80110001	An unexpected error occurred to S/W.	GOT type error.	Check for the GOT type.
0x80110002 0x80110003	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80110004	Failed to make a communication with the inverter during the time set with Time Out.	<ol style="list-style-type: none"> 1. Communication protocol of the inverter and GOT are not the same. 2. Setting of <i>Pr. 122 PU communication check time interval, Pr. 336 RS-485 communication check time interval, Pr. 548 USB communication check time interval</i> is other than "0". 3. Noise 4. Cable breakage/damaged 	<ol style="list-style-type: none"> 1. Set communication protocol of the inverter and GOT same. 2. Set a value other than "0" in <i>Pr. 122 PU communication check time interval, Pr. 336 RS-485 communication check time interval, Pr. 548 USB communication check time interval</i>. 3. Set larger value for Time Out setting of the software. 4. Cable connection/replacement Check for communication cable and power supply of devices.
0x80110005	Failed to make a communication with the inverter during the time set with Time Out.	FR Configurator was started and a communication was made when GX drawing software was starting.	After GX drawing software, try communication again.
0x80110006	Failed to make a communication with the inverter during the time set with Time Out.	GX drawing software was started when FR Configurator was starting.	After GX drawing software, try communication again.
0x80110007	An unexpected error occurred to S/W.	Communication line quality error	Set lower the baud rate and make a communication.
0x80110008	An unexpected error occurred to S/W.	Baud rate not supported by connected device	Check for the baud rate supported by connected devices.
0x80110009	Failed to make a communication with the inverter during the time set with Time Out.	<ol style="list-style-type: none"> 1. Noise 2. Cable breakage/damage 	<ol style="list-style-type: none"> 1. Set larger value for Time Out setting of the software. 2. Cable connection/replacement Check that line is connected.
0x8011000A	Failed to make a communication with the inverter during the time set with Time Out.	Other processing is ongoing in GOT and line is in the BUSY state. (retry is performed in the EZSocket) A station not connected is being monitored.	Set a larger value for Time Out setting of the software. Monitors only the station to which the GOT monitor is connected. Check that the GOT is operating normally and try again.
0x8011000B	An unexpected error occurred to S/W.	Protocol type error	Check for protocol type.
0x8011000C	An unexpected error occurred to S/W.	Host name error	Check for connected GOT host name.
0x8011000D	An unexpected error occurred to S/W.	Socket port number error	Check for the port number.

Error Code HEX)	Error Message	Cause	Countermeasure
0x80111001 0x80111002 0x80111003 0x80111004 0x80111005 0x80111101 0x80111102 0x80111103 0x80111104 0x80111105 0x80111106 0x80111107 0x801111FF	Failed to make a communication with the inverter during the time set with Time Out.	Noise, etc. are propagated when receiving GOT software.	Set a larger value for Time Out setting of the software and try again.
0x80112001	Wrong communication port is assigned.	Serial line open error	Check for the communication port setting.
0x80112002	An unexpected error occurred to S/W.	Serial line closed error	Try again.
0x80112003	An unexpected error occurred to S/W.	Serial line setting error	Try again.
0x80112004	An unexpected error occurred to S/W.	Serial line baud rate error	Try again.
0x80112005	Failed to make a communication with the inverter during the time set with Time Out.	Occurred before starting the FR Configurator, or during communication RS-232C cable between the GOT and PC is disconnected	Connect the cable.
0x80112201	An unexpected error occurred to S/W.	EZSocket GOT is installed, but the file is broken.	Install software again.
0x80112202	Failed to make a communication with the inverter during the time set with Time Out.	Before starting the FR Configurator 1. A cable between the GOT and PC is disconnected. 2. The GOT power is OFF.	1. Connect the cable. 2. Power ON the GOT.
0x80112203	Failed to make a communication with the inverter during the time set with Time Out.	Noise, etc. are affecting between the PC and GOT.	Set a larger value for Time Out setting of the software and try again.
0x80112204	An unexpected error occurred to S/W.	USB line error (at the GOT device error communication ending)	Try again.
0x80112205	An unexpected error occurred to S/W.	USB line error (sending function is invalid)	Try again.
0x80112206	An unexpected error occurred to S/W.	USB line error (receiving function is invalid)	Try again.
0x80112207	An unexpected error occurred to S/W.	USB line error (cable disconnection registration failure)	After reconnecting with the GOT, try again.
0x80112208	Failed to make a communication with the inverter during the time set with Time Out.	USB line error (cable was disconnected halfway) 1. When a cable between the GOT and PC was disconnected during communication. 2. When the GOT power turned OFF during communication	1. Check for cable connection. 2. Power ON the GOT.
0x80112401	An unexpected error occurred to S/W.	The GOT was not found on the network.	Check that the GOT is connected to the network.
0x80112402	An unexpected error occurred to S/W.	Socket line open error (socket generation failed)	Check that specified port number is correct and specified IP address is for GOT.
0x80112403	An unexpected error occurred to S/W.	Please contact your sales representative.	
0x80112405	An unexpected error occurred to S/W.	Network error	Check that the GOT is connected to the network.
0x80112406	An unexpected error occurred to S/W.	Connected socket forced disconnection	Check that the GOT is not making a communication in other connection method.





5.1.3 Other error (Task busy)

Error Code (HEX)	Error Message	Cause	Countermeasure
Error code other than above	Task busy state. Try the operation again.	Processing could not be completed, due to increase in load of software processing or communication processing.	End unnecessary applications. Delete the setting of non-connected station.

5.2 Error Display on a Dialog

When using or closing FR Configurator, or at fault occurrence, a message dialog appears for providing information or for warning.

There are four types of message dialog.

Icon	Error Type	Mainly Used Button	Description
	Warning	<input type="button" value="OK"/>	Appears if an attempted operation may have an affect on the human body, or may cause an inverter failure.
	Caution	<input type="button" value="OK"/> <input type="button" value="Cancel"/>	Appears when a confirmation is required before the operation.
	Information	<input type="button" value="Yes"/> <input type="button" value="No"/>	Appears to provide information about the operation.
	Inquiry	<input type="button" value="Yes"/> <input type="button" value="No"/> <input type="button" value="Cancel"/>	Appears when replay to the inquiry message is variable

There are following message for warnings and caution.

Display	Description
File does not exist, or file corrupted.	Appears when the file does not exist, or file is corrupted
The file is locked. Unlock the file for saving.	Appears when writing to a locked file
The following required files for this software are missing. Please perform setup again. File name: XXXXXXXX.XXX	Appears when required files for starting up the software are missing
The following required files for this software are broken. Please perform setup again. File name: XXXXXXXX.XXX	Appears when required files for starting up the software are broken (0 byte file/file format is abnormal)
System File is corrupted.	Appears when the file set for "System File to be Read at Starting up" is corrupted
System File is not found.	Appears when the file set for "System File to be Read at Starting up" does not exist
St. No.: XX Error description Communication Error Code: XXXXXXXXXXX	Appears at communication error occurrence <i>(Refer to page 132)</i>
St. No.: XX Unknown error occurred. Communication Error Code: XXXXXXXXXXX Please contact your sales representative.	Appears when unknown fault or communication error occurred

REVISIONS

*The manual number is given on the bottom left of the back cover.

Print Date	*Manual Number	Revision
Sep., 2007	IB(NA)-0600306ENG-A	First edition (For Sample Version 0.01)
Jan., 2008	IB(NA)-0600306ENG-B	<p>Additions</p> <p>Multiple connection of inverters Connection through GOT (FA transparent function) Additional functions (Tuning, Troubleshooting, Parameter List Enhancement, Diagnosis, Batch Monitor, I/O Terminal Monitor, I/O Terminal Assignment) (For Sample Version 0.20)</p>