

MELFA









Industrial Robots

Instruction Manual
(Robot Arm Setup & Maintenance)

RV-3S/3SJ/3SB/3SJB Series

Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

-  **CAUTION** All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training
-  **CAUTION** For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan
-  **WARNING** Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch
-  **CAUTION** During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress
-  **WARNING** Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence
-  **CAUTION** Establish a set signaling method to the related operators for starting work, and follow this method.
Signaling of operation start
-  **CAUTION** As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress
-  **CAUTION** Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

The points of the precautions given in the separate "Safety Manual" are given below. Refer to the actual "Safety Manual" for details.

- ⚠ CAUTION** Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)
- ⚠ CAUTION** Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.
- ⚠ CAUTION** Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.
- ⚠ CAUTION** Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.
- ⚠ CAUTION** Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.
- ⚠ CAUTION** Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.
- ⚠ WARNING** Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.
- ⚠ WARNING** Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.
- ⚠ CAUTION** Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.
- ⚠ WARNING** When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.
- ⚠ CAUTION** Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.
- ⚠ CAUTION** After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.
- ⚠ CAUTION** Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.
- ⚠ CAUTION** Never carry out modifications based on personal judgments, or use non-designated maintenance parts.
Failure to observe this could lead to faults or failures.
- ⚠ WARNING** When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

⚠ CAUTION

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected. Moreover, it may interfere with the peripheral device by drop or move by inertia of the arm.

⚠ CAUTION


Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters.
If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.

Precautions for the basic configuration are shown below. (When CR1-571/CR1B-571 is used for the controller.)

⚠ CAUTION

Provide an earth leakage breaker that packed together on the primary power supply of the controller as protection against electric leakage. Confirm the setting connector of the input power supply voltage of the controller, if the type which more than one power supply voltage can be used. Then connect the power supply.
Failure to do so could lead to electric shock accidents.

Power supply *RV-1A/2AJ series and RP-1AH/3AH/5AH series: Single phase 90-132VAC, 180-253VAC.
*Except the above: Single phase 180-253VAC.

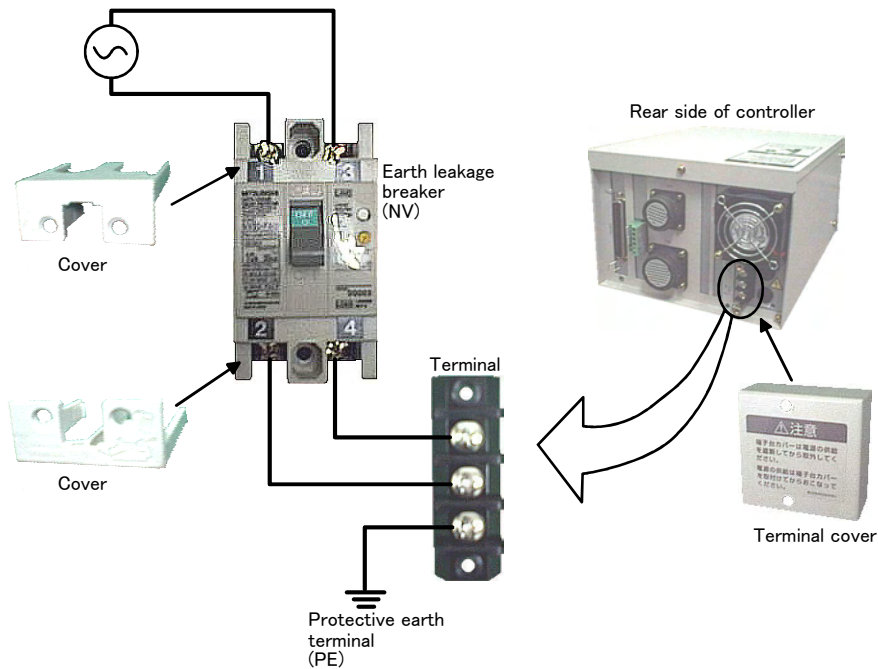

Revision history

Date of Point	Instruction Manual No.	Revision Details
2005-02-28	BFP-A8388	First print
2005-04-21	BFP-A8388-A	RV-3SB/3SJB series was added. Error in writing correction.

■ Introduction

Thank you for purchasing the Mitsubishi industrial robot.

This instruction manual explains procedures to be taken for unpacking, installing, servicing and inspecting the robot arm.

Always read through this manual before starting use to ensure correct usage of the robot.

The contents of this manual correspond to the following robot types.

- | | | |
|--------|------------------|--|
| <Type> | ▪ RV-3S series | : 6-axis type |
| | ▪ RV-3SB series | : 6-axis type with brakes for all axes |
| | ▪ RV-3SJ series | : 5-axis type |
| | ▪ RV-3SJB series | : 5-axis type with brakes for all axes |

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
- The details of this manual are subject to change without notice.
- An effort has been made to make full descriptions in this manual. However, if any discrepancies or unclear points are found, please contact your dealer.
- The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed". Please contact your nearest dealer if you find any doubtful, wrong or skipped point.

CONTENTS

	Page
1 Before starting use	1-1
1.1 Using the instruction manuals	1-1
1.1.1 The details of each instruction manuals	1-1
1.1.2 Symbols used in instruction manual	1-2
1.2 Safety Precautions	1-3
1.2.1 Precautions given in the separate Safety Manual	1-4
2 Unpacking to Installation	2-5
2.1 Confirming the product	2-5
2.2 Installation	2-6
2.2.1 Unpacking	2-6
2.2.2 Transportation procedures(Transportation by people)	2-7
2.2.3 Installation procedures	2-8
2.2.4 Grounding procedures	2-10
(1) Grounding methods	2-10
(2) Grounding procedures	2-10
2.2.5 Connecting with the controller	2-11
2.3 Setting the origin	2-13
2.3.1 Installing the teaching pendant (T/B)	2-13
(1) Installing with the control power OFF	2-13
2.3.2 Setting the origin with the origin data input method	2-14
(1) Confirming the origin data	2-14
(2) Turning ON the control power	2-14
(3) Preparing the T/B	2-15
(4) Selecting the origin setting method	2-16
(5) Inputting the origin data	2-17
(6) Installing the shoulder cover A	2-18
2.4 Confirming the operation	2-19
(1) JOINT jog operation	2-22
(2) XYZ jog operation	2-24
(3) TOOL jog operation	2-26
(4) 3-axis XYZ jog operation	2-28
(5) CYLINDER jog operation	2-30
3 Installing the option devices	3-32
3.1 Installing the solenoid valve set (1S-VD04-02/VD04E-02)	3-32
3.2 Installing the hand input cable	3-35
3.3 Installing the hand output cable	3-36
3.4 .Changing the operating range	3-37
4 Basic operations	4-39
5 Maintenance and Inspection	5-40
5.1 Maintenance and inspection interval	5-40
5.2 Inspection items	5-41
5.2.1 Daily inspection items	5-41
5.2.2 Periodic inspection	5-42
5.3 Maintenance and inspection procedures	5-43
5.3.1 Robot arm structure	5-43
5.3.2 Installing/removing the cover	5-45
5.3.3 Inspection, maintenance and replacement of timing belt	5-47
(1) Timing belt replacement period	5-47
(2) Inspection, maintenance and replacement of J4 axis timing belt (6-axis only)	5-48
(3) Inspection, maintenance and replacement of J5-axis timing belt	5-49
(4) Timing belt tension	5-50
5.3.4 Lubrication	5-51

(1) Lubrication position and specifications	5-51
(2) Lubrication method	5-52
5.3.5 Replacing the backup battery	5-53
(1) Replacing the robot arm battery	5-53
5.4 Maintenance parts	5-54
5.5 Resetting the origin	5-55
5.5.1 Mechanical stopper method	5-56
(1) Select the T/B	5-56
(2) J1 axis origin setting	5-57
(3) J2 axis origin setting	5-58
(4) J3 axis origin setting	5-60
(5) J4 axis origin setting (Only 6-axis type)	5-62
(6) J5 axis origin setting	5-64
(7) J6 axis origin setting	5-66
(8) All axis origin setting	5-67
5.5.2 Jig method	5-70
(1) J1 axis origin setting	5-71
(2) J2 axis origin setting	5-72
(3) J3 axis origin setting	5-74
(4) J4 axis origin setting (Only 6-axis type)	5-76
(5) J5 axis origin setting	5-77
(6) J6 axis origin setting	5-79
5.5.3 ABS origin method	5-80
5.5.4 User origin method	5-82
5.5.5 Recording the origin data	5-84
(1) Confirming the origin data label	5-84
(2) Confirming the origin data	5-84
(3) Recording the origin data	5-84
(4) Installing the cover	5-84
6Appendix	Appendix-85
Appendix 1 : Configuration flag	Appendix-85

1 Before starting use

This chapter explains the details and usage methods of the instruction manuals, the basic terminology and the safety precautions.

1.1 Using the instruction manuals

1.1.1 The details of each instruction manuals

The contents and purposes of the documents enclosed with this product are shown below. Use these documents according to the application.




For special specifications, a separate instruction manual describing the special section may be enclosed.

Safety Manual	Explains the common precautions and safety measures to be taken for robot handling, system design and manufacture to ensure safety of the operators involved with the robot.
Standard Specifications	Explains the product's standard specifications, factory-set special specifications, option configuration and maintenance parts, etc. Precautions for safety and technology, when incorporating the robot, are also explained.
Robot Arm Setup & Maintenance	Explains the procedures required to operate the robot arm (unpacking, transportation, installation, confirmation of operation), and the maintenance and inspection procedures.
Controller Setup, Basic Operation and Maintenance	Explains the procedures required to operate the controller (unpacking, transportation, installation, confirmation of operation), basic operation from creating the program to automatic operation, and the maintenance and inspection procedures.
Detailed Explanation of Functions and Operations	Explains details on the functions and operations such as each function and operation, commands used in the program, connection with the external input/output device, and parameters, etc.
Explanations of MOVEMASTER COMMANDS	Explains details on the MOVEMASTER commands used in the program. (For RV-1A/2AJ, RV-2A/3AJ and RV-3S/3SJ/3SB/3SJB series)
Troubleshooting	Explains the causes and remedies to be taken when an error occurs. Explanations are given for each error No.

1.1.2 Symbols used in instruction manual

The symbols and expressions shown in Table 1-1 are used throughout this instruction manual. Learn the meaning of these symbols before reading this instruction manual.

Table 1-1: Symbols in instruction manual

Symbol	Meaning
 DANGER	Precaution indicating cases where there is a risk of operator fatality or serious injury if handling is mistaken. Always observe these precautions to safely use the robot.
 WARNING	Precaution indicating cases where the operator could be subject to fatalities or serious injuries if handling is mistaken. Always observe these precautions to safely use the robot.
 CAUTION	Precaution indicating cases where operator could be subject to injury or physical damage could occur if handling is mistaken. Always observe these precautions to safely use the robot.
[JOINT]	If a word is enclosed in brackets or a box in the text, this refers to a key on the teaching pendant.
[+/FORWD]+[+X] (A) (B)	This indicates to press the (B) key while holding down the (A) key. In this example, the [+/Forward] key is pressed while holding down the [+X/+Y] key.
[STEP/MOVE]+([COND]-[RPL]) (A) (B) (C)	This indicates to hold down the (A) key, press and release the (B) key, and then press the (C) key. In this example, the [Step/Move] key is held down, the [Condition] key is pressed and released, and the [Replace] key is pressed.
T/B	This indicates the teaching pendant.


















1.2 Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

- ⚠ CAUTION** All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training
- ⚠ CAUTION** For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan
- ⚠ WARNING** Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch
- ⚠ CAUTION** During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress
- ⚠ DANGER** Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence
- ⚠ CAUTION** Establish a set signaling method to the related operators for starting work, and follow this method.
Signaling of operation start
- ⚠ CAUTION** As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress
- ⚠ CAUTION** Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

1.2.1 Precautions given in the separate Safety Manual

The points of the precautions given in the separate "Safety Manual" are given below. Refer to the actual "Safety Manual" for details.

-  **CAUTION** Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)
-  **CAUTION** Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.
-  **CAUTION** Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.
-  **CAUTION** Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.
-  **CAUTION** Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.
-  **CAUTION** Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.
-  **WARNING** Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.
-  **WARNING** Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.
-  **CAUTION** Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.
-  **WARNING** When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.
-  **CAUTION** Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.
-  **CAUTION** After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.
-  **CAUTION** Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.
-  **CAUTION** Never carry out modifications based on personal judgments, or use non-designated maintenance parts. Failure to observe this could lead to faults or failures.
-  **WARNING** When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.
-  **CAUTION** Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected.
-  **CAUTION** Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters. If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.

2 Unpacking to Installation

2.1 Confirming the product

The standard configuration of the robot arm, part of the purchased product, is shown in [Table 2-1](#).

Confirm the parts.

Users who have purchased optional products should refer to the separate "Standard Specifications".

Table 2-1 : Standard configuration

No.	Part name	Type	Qty.	Remarks
1	Robot arm	RV-3S/3SJ/3SB/3SJB series	Either 1 unit	
2	Guarantee card		1 copy	
3	Installation bolts	M8x35	4 pcs.	
4	Spring washer for installation bolts	For M8	4 pcs.	
5	Plain washer for installation bolts	For M8	4 pcs.	
6	Fixing plates		1 pcs.	This is installed in the robot arm at the time of shipment.
7	Fixing plates J1		1 pcs.	
8	Safety socket for suspension fitting	M4x10	1 pcs.	
9		M5x12	6 pcs.	
10	Plain washer for suspension fitting	For M5	6 pcs.	

2.2 Installation

2.2.1 Unpacking

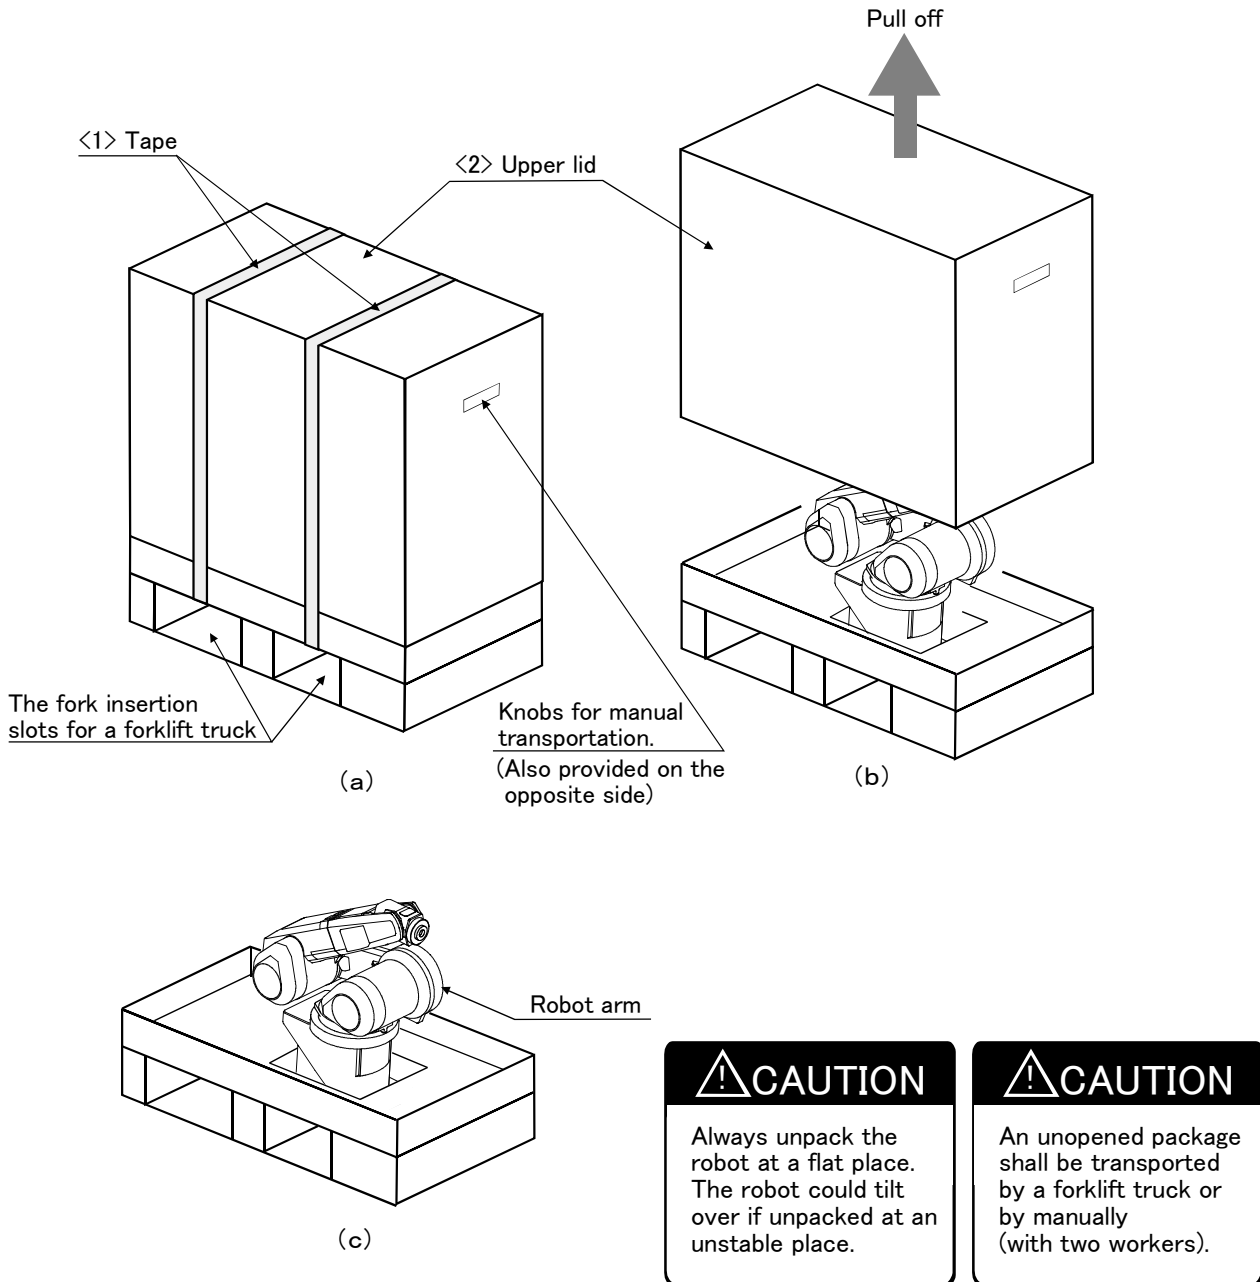


Fig.2-1 : Unpacking the robot arm

The robot is shipped from the factory in cardboard and plywood frame packing. Always refer to Fig. 2-1 and unpack the robot. Handle the robot arm according to "2.2.2 Transportation procedures(Transportation by people)". The unpacking process is shown below.

- 1) Using a knife, etc., slit the tape <1> fixing the upper lid <2> of the cardboard box. (Fig. 2-1 (a))
- 2) Pull the upper lid <2> of the cardboard box off with both hands. (Fig. 2-1 (b))
- 3) Remove the hexagon socket bolts <3> (four positions) connecting the sleeper and the base unit. (Fig. 2-1 (c))
- 4) This completes the unpacking.

2.2.2 Transportation procedures(Transportation by people)

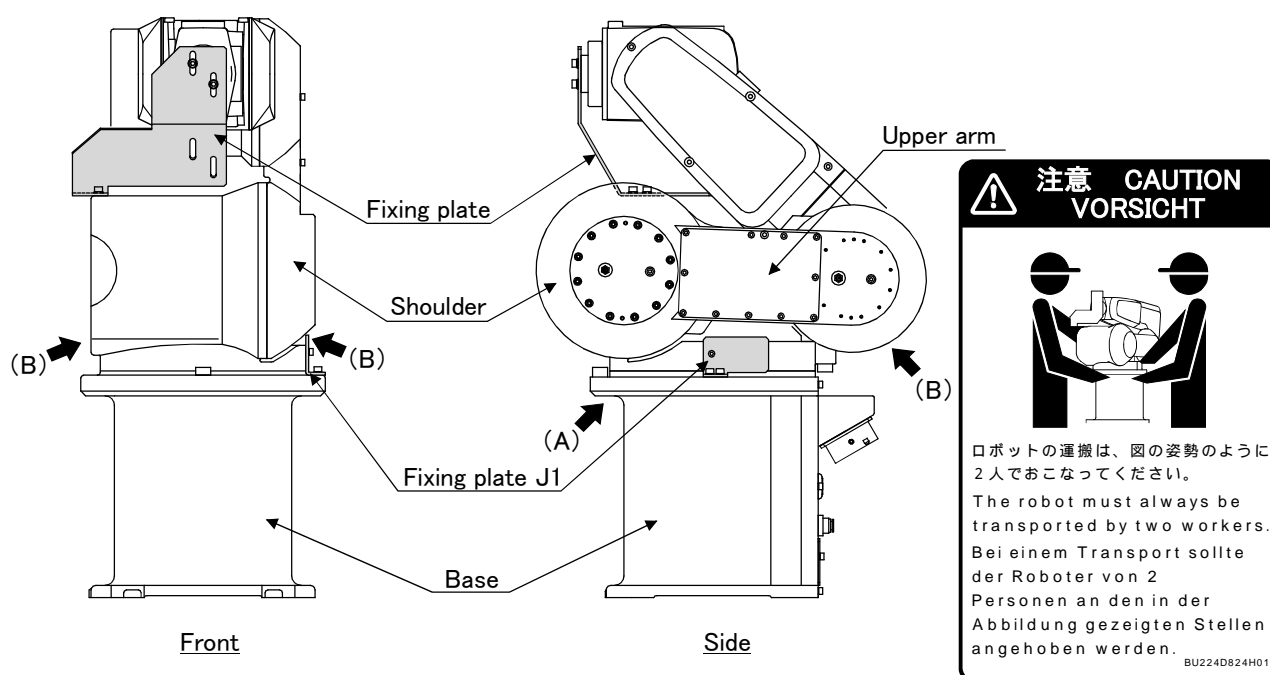


Fig.2-2 : Transportation of robot arm (Transportation by people: 5 axis)

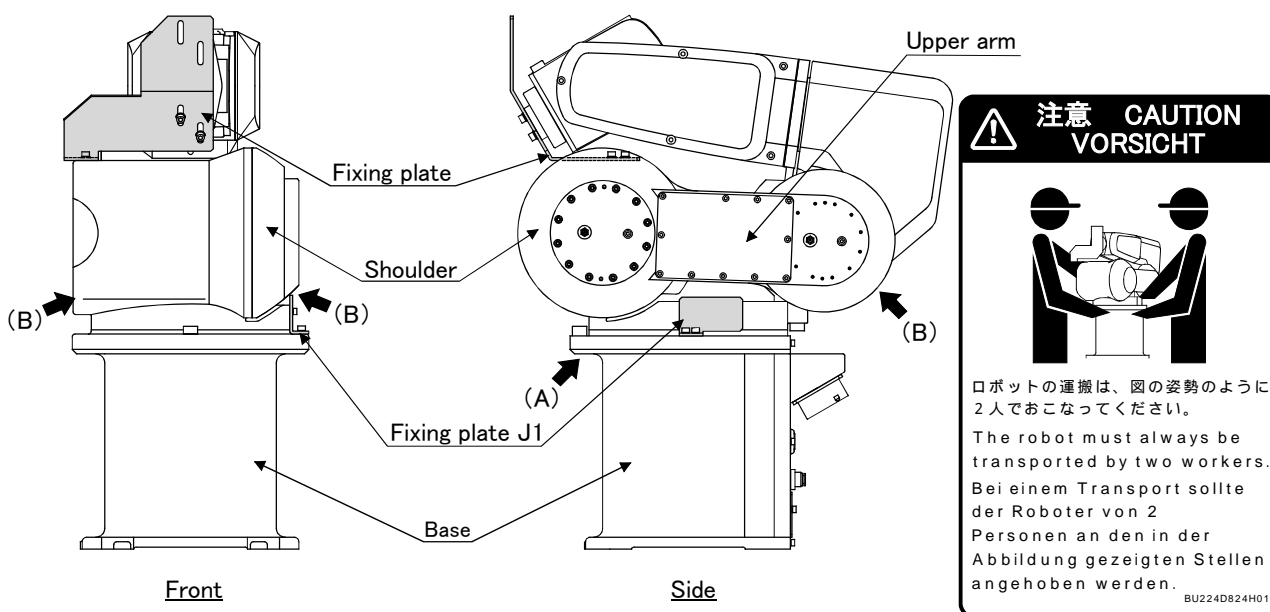


Fig.2-3 : Transportation of robot arm (Transportation by people: 6 axis)

- 1) The robot must be transported by two workers. Place the robot on a dolly, etc. and move it to the vicinity of the installation site.
- 2) When transporting the robot, workers should hold onto the base part (A) with one hand and the upper side of the upper arm area (B) with the other hand and face each other in such a way as to support the arm with their bodies and lift the robot.
Please be sure to avoid holding the robot from the front/back side or by the cover because the robot may tilt over and the cover may be damaged or dropped, which may lead to accidents.
- 3) When transporting the robot, do not apply force on the cover, or apply a strong impact on the robot

**CAUTION**

To prevent accidents, do not hold the robot from the front/back sides, or hold covers that have no grips.

2.2.3 Installation procedures

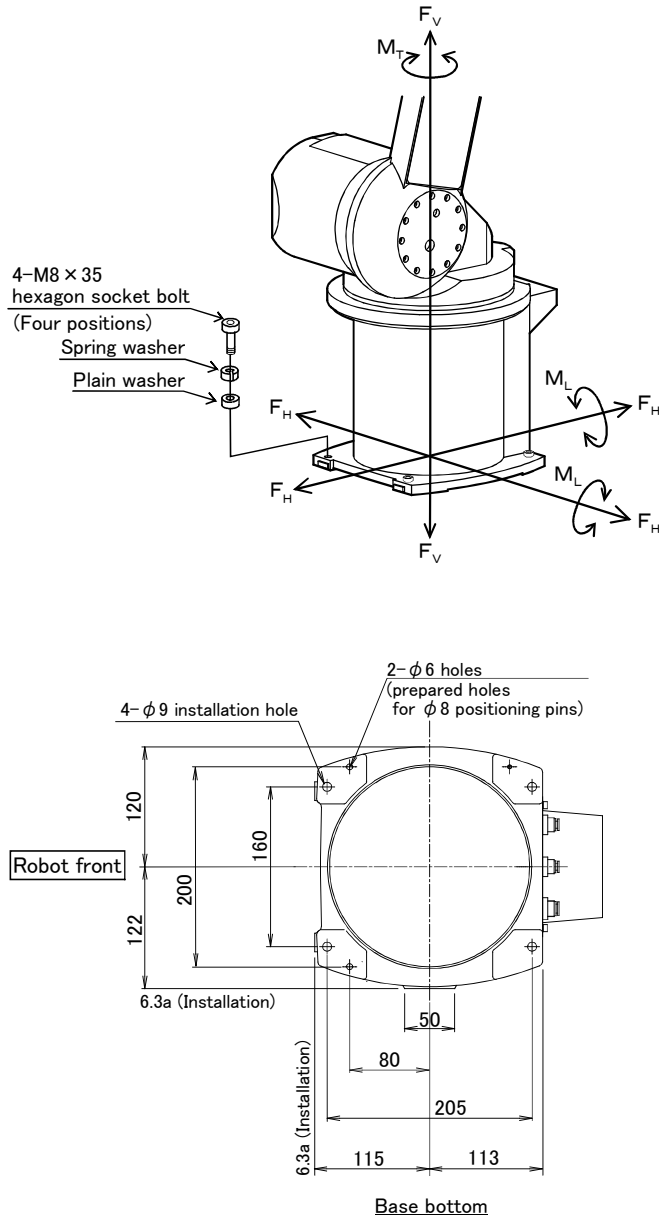


Fig.2-4 : Installation dimensions

1) The robot installation surface has been machine finished. Use the installation holes (4- $\phi 9$ holes) opened at the four corners of the base, and securely fix the robot with the enclosed installation bolts (M8 x 35 hexagon socket bolts).

Installation of the robot arm is a very important step for ensuring the optimum functions of the robot. Observe the following points when designing.

- 2) Install the robot on a level surface.
- 3) It is recommended that the surface roughness of the table onto which the robot is to be installed by 6.3a or more. If the installation surface is rough, the contact with the table will be poor, and positional deviation could occur when the robot moves.
- 4) When installing, use a common table to prevent the position of the devices and jigs subject to robot work from deviating.
- 5) The installation surface must have sufficient strength to withstand the arm reaction during operation, and resistance against deformation and vibration caused by the static (dynamic) load of the robot arm and peripheral devices, etc.
- 6) Remove the fixing plates after installing the robot.
- 7) When the robot is installed by hanging from the ceiling or on the wall, the MEGDIR parameter must be changed. For more information about parameters and how to change the parameters, refer to the separate "Instruction Manual/ Detailed Explanation of Functions and Operations".
- 8) If you operate the robot at a high speed, reaction forces are applied to the installation stand by the robot's operation. Make sure that the installation stand on which the robot is placed has sufficient strength and rigidity. Table 2-2 shows the maximum reaction force (design values) that may be applied to an installation stand. Please use these values as reference when designing the installation stand.

Table 2-2 : Magnitude of each reaction force


	Unit	Value
Tilt moment : M_L	N · m	410
Torsional moment : M_T	N · m	400
Horizontal direction translation force : F_H	N	1,000
Vertical direction translation force : F_V	N	1,200

**CAUTION**

When installing the robot, be sure to allocate a sufficient maintenance space for connecting the cables between devices at the rear of the robot.

2.2.4 Grounding procedures


(1) Grounding methods

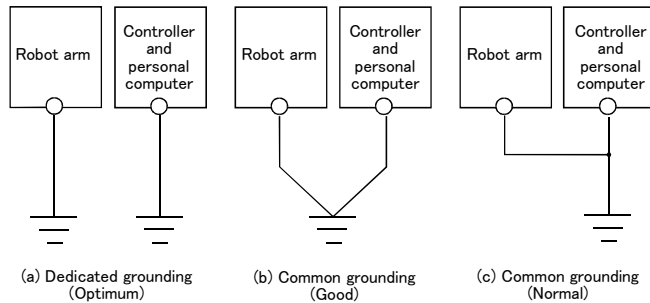

- 1) There are three grounding methods as shown in Fig. 2-5, but the dedicated grounding (Fig. 2-5 (a)) should be used for the robot arm and controller when possible. (Refer to the separate "Controller Setup, Basic Operation and Maintenance" for details on the controller grounding.)
- 2) Use Class D grounding (grounding resistance 100Ω or less). Dedicated grounding separated from the other devices should be used.
- 3) Use a AWG#11(3.5mm²) or more stranded wire for the grounding wire. The grounding point should be as close to the robot arm and controller as possible, and the length of the grounding wire should be short.

Fig.2-5 : Grounding methods

(2) Grounding procedures

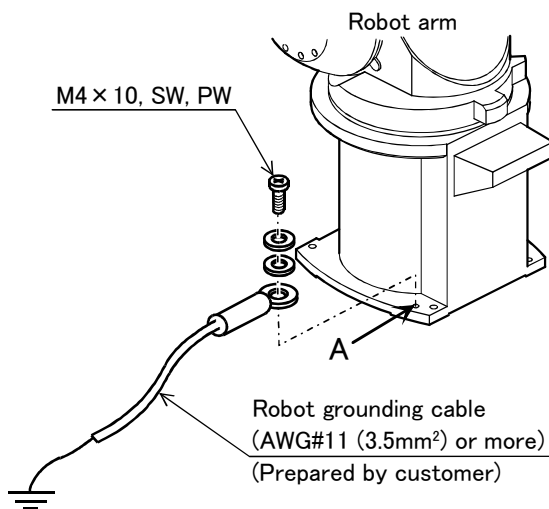

- 1) Prepare the grounding cable (AWG#11(3.5mm²) or more) and robot side installation screw and washer.
- 2) If there is rust or paint on the grounding screw section (A), remove it with a file, etc.
- 3) Connect the grounding cable to the grounding screw section.

Fig.2-6 : Connecting the grounding cable

2.2.5 Connecting with the controller


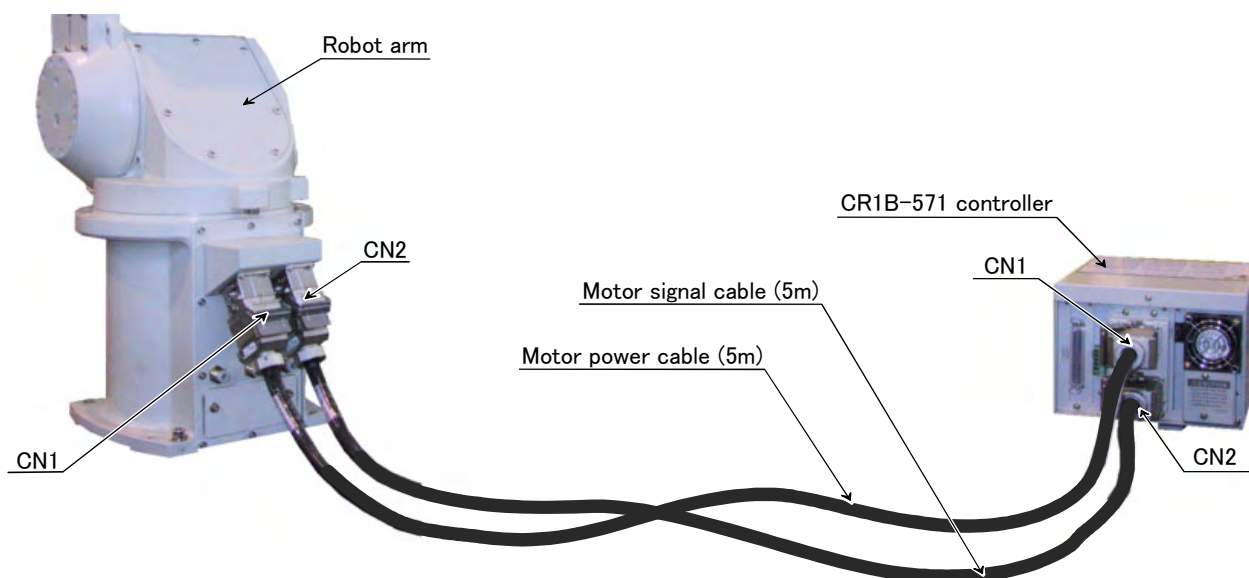



Fig.2-7 : Connecting the machine cables

Carry out the following procedure after installing the controller referring to the separate "Controller Setup, Basic Operation and Maintenance" manual.

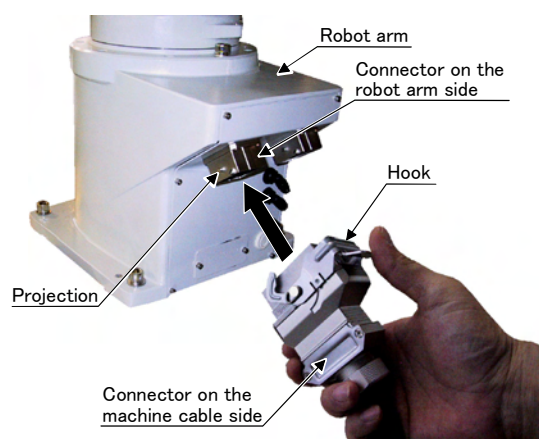


1) Make sure that the power switch on the front of the controller is turned OFF.

2) Connect the machine cable to its corresponding connector on the robot arm side.

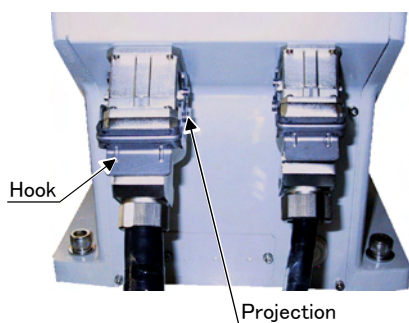

3) After connecting the connector, insert the hook attached to the connector on the machine cable side to the rear of the projection of the robot arm connector to fix securely in place.

⚠ CAUTION Be careful not to get your hand pinched.

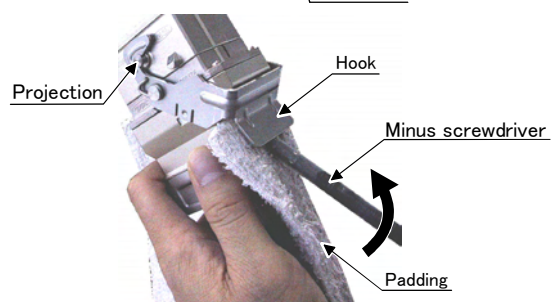

4) To remove the cable, insert a minus screwdriver into the hook while padding with a cloth, and remove the cable by lifting the hook.



CAUTION

The machine cable connectors are dedicated for the controller side and robot arm side, so take special care when connecting.

If connected incorrectly, the connector pins could bend or break. Thus, even if connected correctly, the robot will not operate correctly, creating a dangerous situation.



CAUTION

Take special care to the leading of the connection cable. If the cable is pulled with force or bent excessively, wires could break or the connector could be damaged.

2.3 Setting the origin

The origin is set so that the robot can be used with a high accuracy. After purchasing the robot, always carry out this step before starting work. This step must also be carried out if the combination of robot and controller being used is changed.

There are several methods for setting the origin, but the origin data input method will be explained here. Refer to "5.5 Resetting the origin" on page 55 for the other methods.

The teaching pendant is required for this operation.


[Caution] If the origin data at shipment is erased due to out of battery, it is necessary to set the origin again. Refer to "5.5 Resetting the origin" on page 55 and reset the origin using the jig method or mechanical stopper method or ABS origin method.

2.3.1 Installing the teaching pendant (T/B)

By using the "REMOVE T/B" switch, the T/B can be installed and removed while the controller's control power is ON. However, in this procedure, the teaching pendant will be installed with the control power OFF.

Refer to the separate "Controller setup, basic operation, and maintenance" for details on installing the teaching pendant with the control power ON.

(1) Installing with the control power OFF

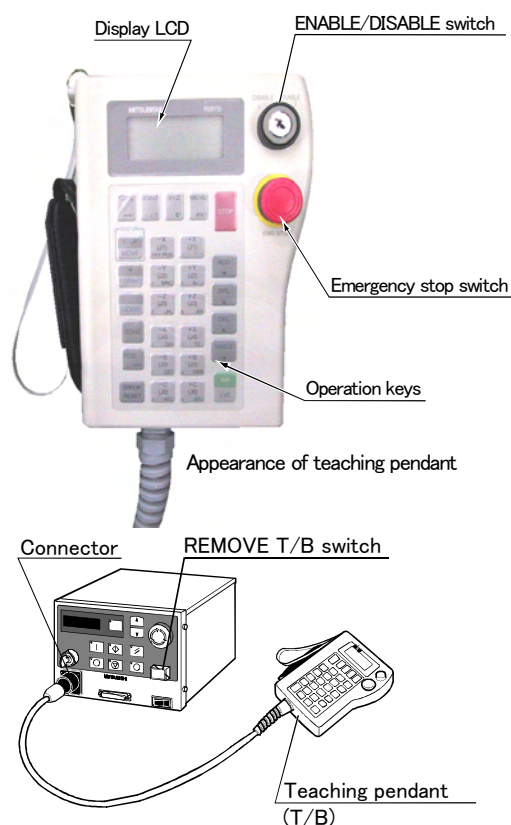

- 1) Confirm that the controller's power supply switch is OFF.
- 2) Connect the T/B connector to the RS-422 (T/B) connector on the controller.
- 3) Do not pull the cable with force or bend it excessively, as the cable could break or the connector could be damaged.
- 4) Confirm that the [REMOVE T/B] switch on the side of the controller is not depressed (is projected).
- 5) Set the T/B [ENABLE/DISABLE] switch to "DISABLE".

Fig.2-8 : Installing the T/B (control power OFF)

◆◆◆ [REMOVE T/B] switch ◆◆◆

When using the robot with the T/B, this switch is used to invalidate the emergency stop from the T/B. This is also used to install the T/B with turning the controller's power supply ON.

2.3.2 Setting the origin with the origin data input method

(1) Confirming the origin data

● Origin data history table (Origin Data History) Serial No.ES804008

Date	Default
D	V!#S29			
J 1	06DTYY			
J 2	2?HL9X			
J 3	1CP55V			
J 4	T6!M\$Y			
J 5	Z2!J%Z			
J 6	A12%Z0			
Method	E	E · N · S P	E · N · S P	E · N · S P

(O: O(Alphabet), 0: Zero)

Note) Meanings of symbols in method column

- E: Jig method
- N: Not used
- SP: Not used

The origin data to be input is noted in the origin data sheet enclosed with the arm, or on the origin data history table attached to the back side of the shoulder cover A. (Refer to Fig. 2-9).

Referring to “5.3.2 Installing/removing the cover” on page 45, remove the shoulder cover A, and confirm the value.

The value given in the default setting column is the origin settings set with the calibration jig before shipment.

Note that the 5-axis type does not have the J4 axis.

Fig.2-9 : Origin data label (an example)



WARNING

Always install/remove the cover with the controller control power turned OFF. Failure to do so could lead to physical damage or personal injury should the robot start moving due to incorrect operations.

(2) Turning ON the control power




CAUTION

Confirm that there are no operators near the robot before turning the power ON.

- 1) Turn the controller [POWER] switch ON.

The control power will be turned ON, and “ □ . 100 ” will appear on the STATUS NUMBER display on the front of the controller.

(3) Preparing the T/B

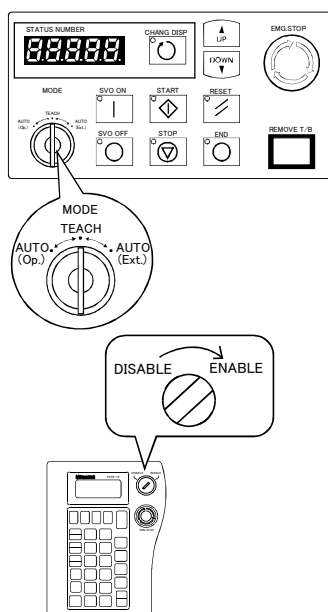

Next, prepare to use the T/B

1) Set the [MODE] switch on the front of the controller to "TEACH".

2) Set the T/B [ENABLE/DISABLE] switch to "ENABLE". The menu selection screen will appear.

The following operations are carried out with the T/B.

◆◆◆ Operating from the T/B ◆◆◆

Always set the [MODE] switch (mode selection key switch) on the front of the controller to "TEACH", and then set the T/B [ENABLE/DISABLE] switch to "ENABLE".

When the T/B is valid, only operations from the T/B are possible. Operations from the controller or external signals will not be accepted.

◆◆◆ When T/B operations are mistaken ◆◆◆

The displayed screen will return to the "menu selection screen" when the [MENU] key is pressed. Carry out the operations again from this screen. Operations can also be carried out again by setting the T/B [ENABLE/DISABLE] switch to "DISABLE" once and then setting to "ENABLE".

(4) Selecting the origin setting method

<T/B screen> [Keys used]

<MENU>
 1.TEACH 2.RUN
 3.FILE 4.MONI
 5.MAINT 6.SET

+C
 (J6)
 5 STU

1) Press the [5] key on the menu screen, and display the maintenance screen.

<MAINT>
 1.PARAM 2.INIT
 3.BRAKE 4.ORIGIN
 5.POWER

-Y
 (J2)
 4 MNO

2) Press the [4] key on the maintenance screen, and display the origin setting method selection screen.

<ORIGIN>
 1.DATA 2.MECH
 3.JIG 4.ABS
 5.USER

-B
 (J5)
 1 DEF

INP
 EXE

3) Press the [1] key on the origin setting method selection screen, and select the data input method.
 The origin data input method will be selected, and the screen for turning OFF the servo power will appear.

<ORIGIN>
 SERVO OFF
 OK?()
 1:EXECUTE

-B
 (J5)
 1 DEF

INP
 EXE

4) Press the [1] and [INP] keys to turn OFF the servo power. The screen for inputting the origin data will appear.

<DATA>D(000000)
 1:000000 000000
 3:000000 000000
 5:000000 000000


◆◆◆ Selecting a menu ◆◆◆

The menu can be selected with one of the following methods.

A: Press the numeral key for the No. of the item to be selected.

B: Using the [↓] and [↑] keys, etc., move the cursor to the item to be selected, and then press the [INP] key.

(5) Inputting the origin data

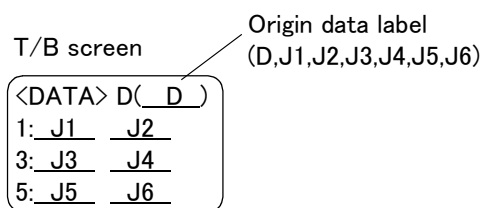

Input the value confirmed in section “(1) Confirming the origin data” on page 14.

The correspondence of the origin data label value and axis to be input is shown in Fig. 2-10. (For the 5-axis robot, the J4 axis is meaningless.)

Fig.2-10 : Correspondence of origin data label and axis

The method for inputting the origin data is explained below. The value shown in Fig. 2-9 will be input as an example.

<T/B screen>	[Keys used]	
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(000000) 1:000000 000000 3:000000 000000 5:000000 000000 </div>		1) Confirm that the cursor is at the “D” position on the T/B display screen.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(V000000) 1:000000 000000 3:000000 000000 5:000000 000000 </div>	<div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">POS CHAR</div> <div style="font-size: 24px;">+</div> <div style="border: 1px solid black; padding: 2px;">+B (J5) 6 VWX</div> </div>	2) Input the D value V!%S29. <u>Inputting “V”</u> Press the [VWX] key once while holding down the [CHAR] key. “V” will appear, so release the [CHAR] key. “V” will be set.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(V!00000) 1:000000 000000 3:000000 000000 5:000000 000000 </div>	<div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">POS CHAR</div> <div style="font-size: 24px;">+</div> <div style="border: 1px solid black; padding: 2px;">SPD #!</div> </div>	<u>Inputting “!”</u> Press the [#!] key three times while holding down the [CHAR] key. “!” will appear, so release the [CHAR] key. “!” will be set.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(V!%0000) 1:000000 000000 3:000000 000000 5:000000 000000 </div>	<div style="display: flex; flex-direction: column; align-items: center; gap: 10px;"> <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">POS CHAR</div> <div style="font-size: 24px;">+</div> <div style="border: 1px solid black; padding: 2px;">SPD #!</div> </div> <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">POS CHAR</div> <div style="font-size: 24px;">+</div> <div style="border: 1px solid black; padding: 2px;">+C (J6) 5 STU</div> </div> <div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">-A (J4) 2 GHI</div> <div style="border: 1px solid black; padding: 2px;">+Y (J2) 9 &<</div> </div> </div>	In the same manner, while holding down the [CHAR] key, press the [“%”] key twice, and the [STU] key once (input “S”). Release the [CHAR] key, and press the [2] key (input “2”) and then the [9] key (input “9”). V!%S29 will appear at the “D” data on the teaching pendant screen.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(V!%S29) 1:000000 000000 3:000000 000000 5:000000 000000 </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;">RPL ↓</div>	3) Press the [↓] key, and move the cursor to the J1 input position. 4) Input the J1 value in the same manner as above.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(V!%S29) 1:A@B&8F G#\$Y5# 3:H+7%2H B=“!1L 5:59A37! K8#&6P </div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;">INP EXE</div>	5) Input the J2, J3, J4, J5 and J6 values in the same manner. Note that the J4 axis is not required for the 5-axis type. 6) After inputting all of the values, press the [INP] key. The origin setting confirmation screen will appear.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <DATA>D(V!%S29) CHANGES TO ORIGIN OK? () █:EXECUTE █ </div>	<div style="display: flex; align-items: center; gap: 10px;"> <div style="border: 1px solid black; padding: 2px;">-B (J5) 1 DEF</div> <div style="border: 1px solid black; padding: 2px;">INP EXE</div> </div>	7) Press [1] (-B/-P) and [INP] key to end the origin setting

◇◆◇ Moving the cursor ◇◆◇

Press the [↑], [↓], [←] and [→] keys.

◇◆◇ Inputting characters ◇◆◇

Hold down the [CHAR] key and press the key with the character to be input on the lower right. Three characters will scroll each time the character key is pressed.

◇◆◇ Correcting an input ◇◆◇

After returning one character by pressing the [DEL] key, input the character again.

(6) Installing the shoulder cover A

Return the shoulder coverA, removed in section “(1) Confirming the origin data” on page 14 to its original position. This completes the setting of the origin with the origin data input method.



WARNING

Always remove and install the cover with the controller power turned OFF. Failure to do so could lead to the robot moving because of incorrect operations, or to physical damage or personal injury.

◇◆◇ If the origin input data is incorrect ◇◆◇

If the origin input data is incorrect, the alarm No. 1760 (origin setting data illegal) will occur when origin data input. In this case, reconfirm the value input for the origin data.

2.4 Confirming the operation

In this section, the robot will be moved manually using the T/B to confirm that the operation is correct. Moving the robot manually is called "jog operation". This operation includes the JOINT jog that moves each axis, the XYZ jog that moves along the base coordinate system, the TOOL jog that moves along the tool coordinate system, and the CYLINDER jog that moves along the circular arc.


This operation is carried out while pressing the deadman switch on the back of the T/B.

CAUTION The robot will move during this operation. Make sure that there are no operators near the robot, and that there are no obstacles, such as tools, in the robot operation range.

CAUTION To immediately stop the robot, release the deadman switch on the back of the T/B. The servo power will turn OFF, and the robot will stop. The robot will also stop if the [EMG.STOP] switch (emergency stop switch) on the front of the T/B or the [EMG.STOP] switch (emergency stop) on the front of the controller is pressed.

WARNING Confirm that the origin has been set. If the origin has not been set, "****" will appear at the current position display on the teaching pendant, the JOINT jog operation will take place in any jog mode selected.

Refer to "2.3 Setting the origin" on page 13 for details on setting the origin.

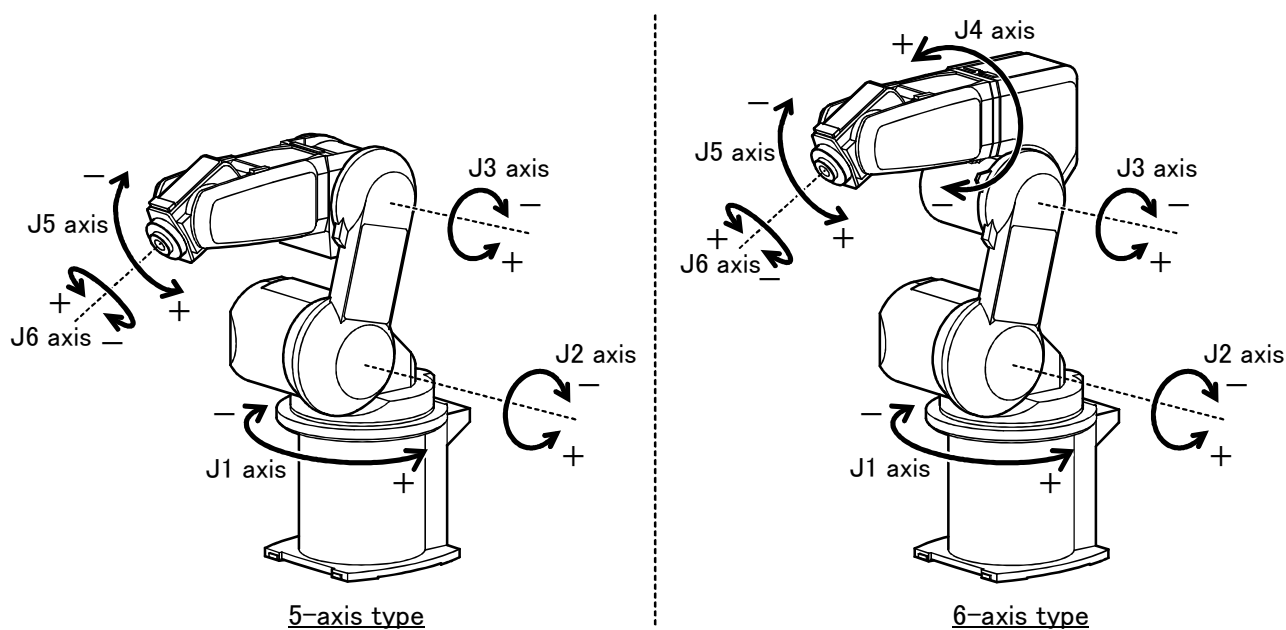

* Each axis moves independently.
The 5-axis type does not have the J4 axis.


Fig.2-11 : JOINT jog operation

(1) JOINT jog operation

Select the JOINT jog mode

JOINT	LOW
J1	+34.50
J2	+20.00
J3	+80.00

JOINT jog mode




Press the [MOVE] + [JOINT] keys to select the JOINT jog mode. "JOINT" will appear at the upper left of the screen.

Set the jog speed

JOINT	LOW
J1	+34.50
J2	+20.00
J3	+80.00

Set the speed




Each time the [MOVE] + [+] keys are pressed, the override will increase in the order of LOW → HIGH → 3 → 5 → 10 → 30 → 50 → 70 → 100%.

When the [MOVE] + [-] keys are pressed, the override will decrease in the reverse order.


The currently set speed will appear on the upper right of the screen.

Set the override to 10% here for confirmation work.

J1 axis jog operation

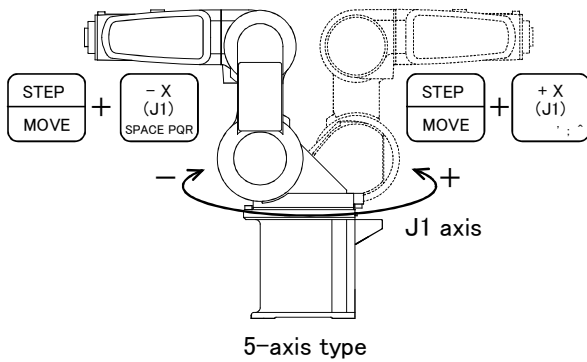


5-axis type

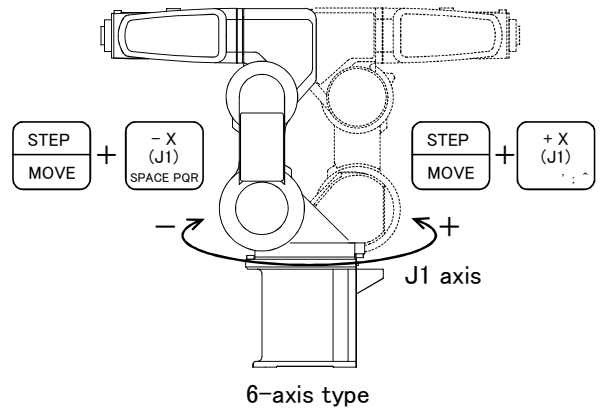


6-axis type

- When the [MOVE] + [+X (J1)] keys are pressed, the J1 axis will rotate in the plus direction.
- When the [MOVE] + [-X (J1)] keys are pressed, Rotate in the minus direction.

J2 axis jog operation

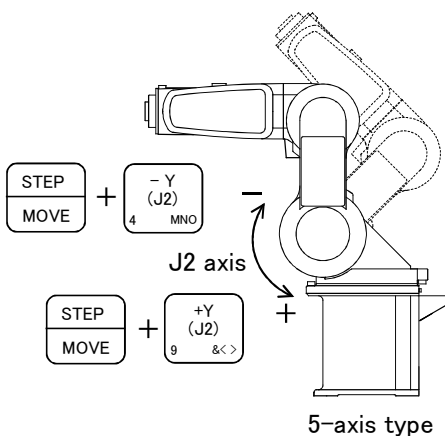

5-axis type

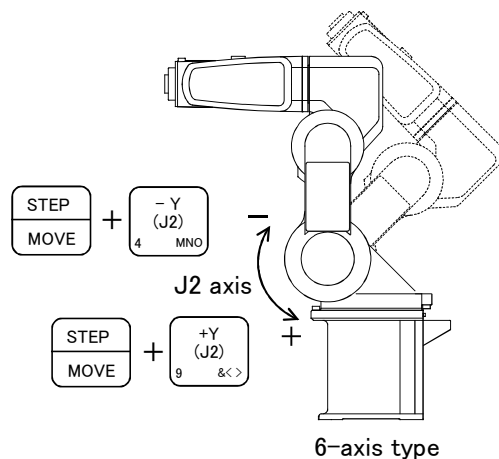


6-axis type

- When the [MOVE] + [+Y (J2)] keys are pressed, the J2 axis will rotate in the plus direction.
- When the [MOVE] + [-Y (J2)] keys are pressed, Rotate in the minus direction.

◆◆◆ When the robot is in the transportation posture ◆◆◆


The axes may be outside the movement area. Move these axes toward the inner side of the movement area. If moved outward, an ☒ will appear on the T/B screen, and the robot will not move.

J3 axis jog operation

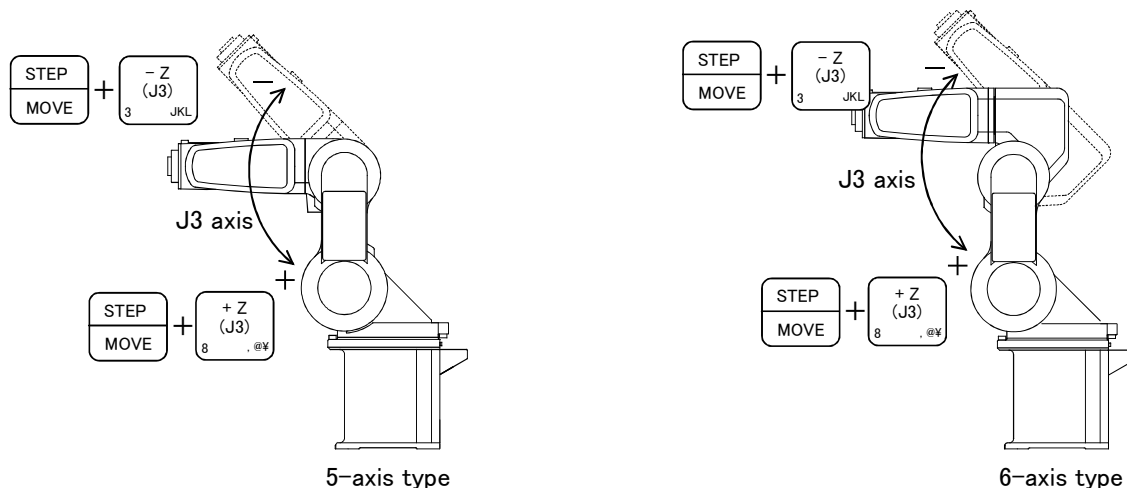

- When the [MOVE] + [+Z (J3)] keys are pressed, the J3 axis will rotate in the plus direction.
When the [MOVE] + [-Z (J3)] keys are pressed, Rotate in the minus direction.

J4, J5 and J6 axis jog operation

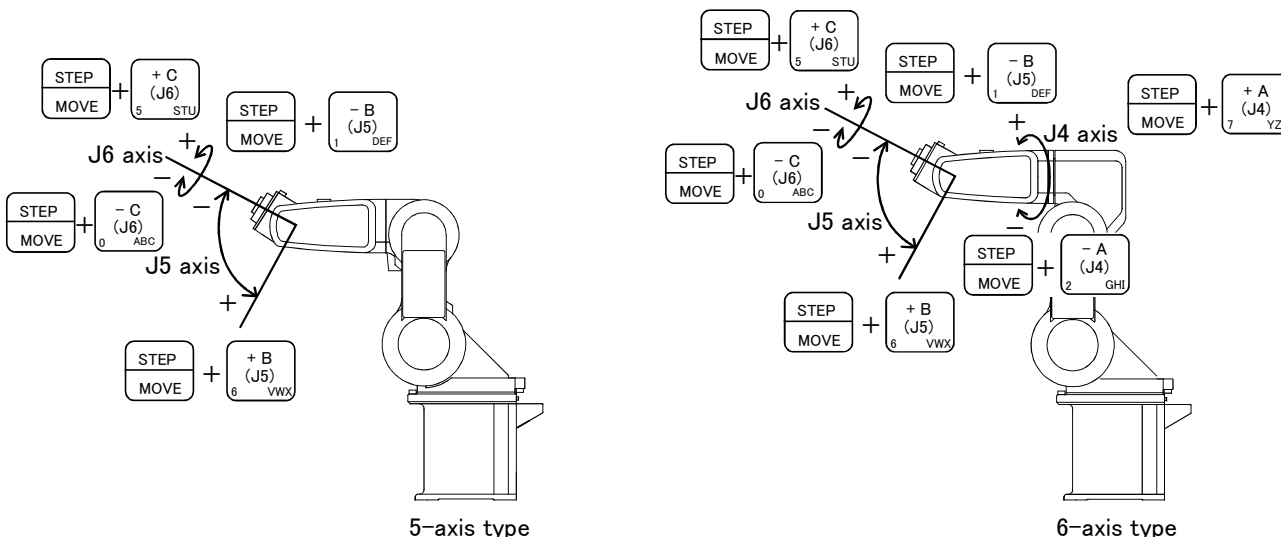

- When the [MOVE] + [+A (J4)] keys are pressed, the J4 axis will rotate in the plus direction.
When the [MOVE] + [-A (J4)] keys are pressed, Rotate in the minus direction. (6-axis type only)
- When the [MOVE] + [+B (J5)] keys are pressed, the J5 axis will rotate in the plus direction
When the [MOVE] + [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [MOVE] + [+C (J6)] keys are pressed, the J6 axis will rotate in the plus direction
When the [MOVE] + [-C (J6)] keys are pressed, Rotate in the minus direction.

◆◆◆ When an appears on the T/B screen display ◆◆◆

If the robot is moved outside the movement area, an will appear. In this case, move the axis in the opposite direction.

JOINT	LOW
<input checked="" type="checkbox"/> J1	+160.00
J2	+20.00
J3	+80.00

In the example on the left, the J1 axis is at the limit of the plus side movement area.

(2) XYZ jog operation

Select the XYZ jog mode

XYZ	LOW
X	+134.50
Y	+220.00
Z	+280.00

XYZ jog mode

Press the [MOVE] + [XYZ] keys to select the XYZ jog mode. "XYZ" will appear at the upper left of the screen.


Set the jog speed

XYZ	LOW
X	+134.50
Y	+220.00
Z	+280.00

Set the speed

Each time the [MOVE] + [+] keys are pressed, the override will increase in the order of LOW → HIGH → 3 → 5 → 10 → 30 → 50 → 70 → 100%. When the [MOVE] + [-] keys are pressed, the override will decrease in the reverse order. The currently set speed will appear on the upper right of the screen. Set the override to 10% here for confirmation work.

Moving along the base coordinate system

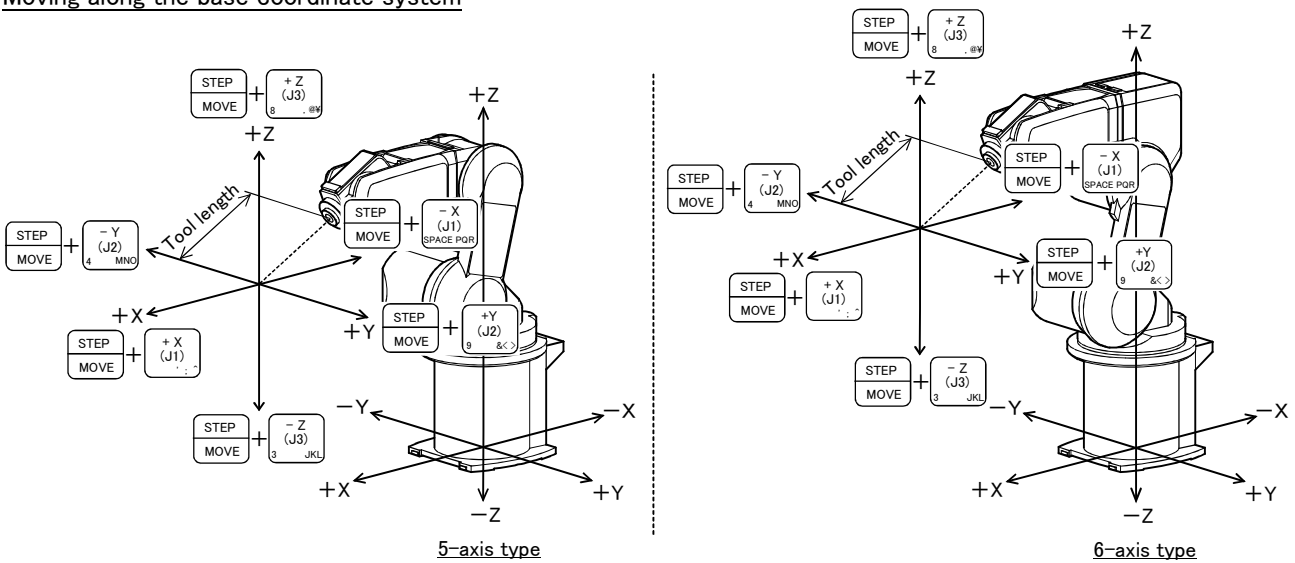

* The direction of the frange will not change

- When the [MOVE] + [+X (J1)] keys are pressed, the robot will move along the X axis plus direction.
When the [MOVE] + [-X (J1)] keys are pressed, Move along the minus direction.
- When the [MOVE] + [+Y (J2)] keys are pressed, the robot will move along the Y axis plus direction.
When the [MOVE] + [-Y (J2)] keys are pressed, Move along the minus direction.
- When the [MOVE] + [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction.
When the [MOVE] + [-Z (J3)] keys are pressed, Move along the minus direction.

◆◆◆ When the robot is in the transportation posture ◆◆◆

There are directions from which linear movement is not possible from the transportation posture. In this case, an will appear on the T/B screen, and the robot will not move. Refer to section "(1) JOINT jog operation" on page 22", and move the robot to a position where linear movement is possible, and then carry out XYZ jog.


◆◆◆ When an appears on the T/B screen display ◆◆◆

If the robot is moved outside the movement area with any of the axes, an will appear. In this case, move the axis in the opposite direction.

XYZ	LOW
<input checked="" type="checkbox"/> X	+360.00
<input checked="" type="checkbox"/> Y	+280.00
<input checked="" type="checkbox"/> Z	+170.00

In the example on the left, further linear movement in the same direction is not possible.

Changing the flange surface posture

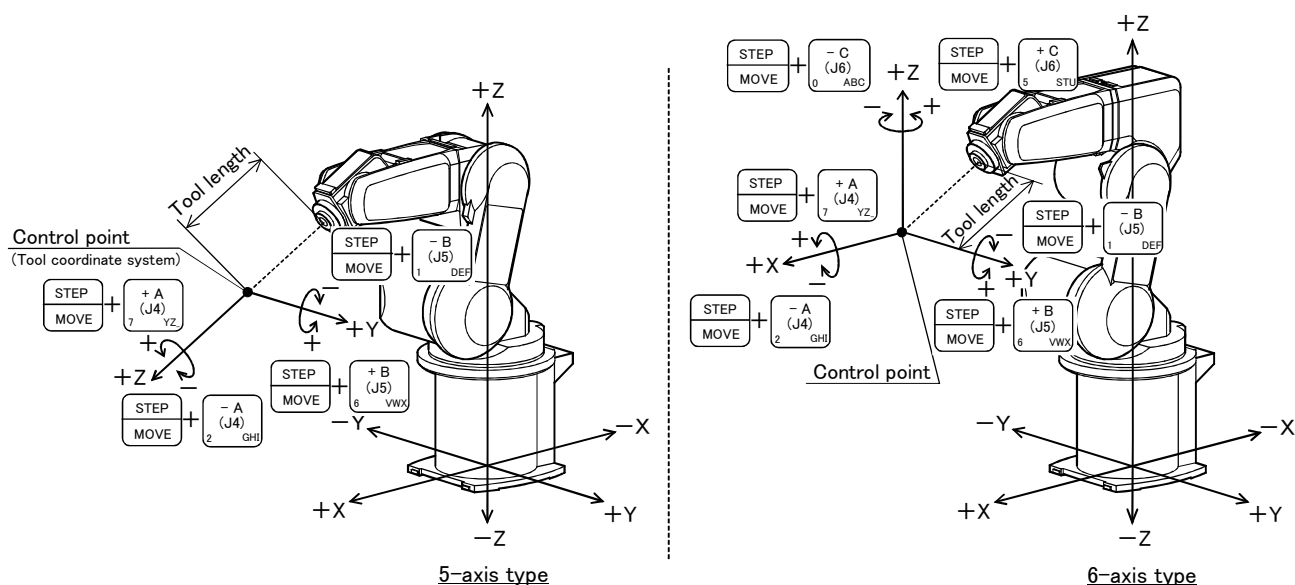

- When the [MOVE] + [+A (J4)] keys are pressed,
6-axis type: The X axis will rotate in the plus direction.
5-axis type: The Z axis will rotate in the plus direction of the tool coordinate system.
When the [MOVE] + [-A (J4)] keys are pressed, Rotate in the minus direction.
- When the [MOVE] + [+B (J5)] keys are pressed,
6-axis type: The Y axis will rotate in the plus direction.
5-axis type: The Y axis will rotate in the plus direction of the tool coordinate system.
When the [MOVE] + [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [MOVE] + [+C (J6)] keys are pressed,
6-axis type: The Z axis will rotate in the plus direction.
5-axis type: There is no operation.
When the [MOVE] + [-C (J6)] keys are pressed,
6-axis type: Rotate in the minus direction.
5-axis type: There is no operation.

◆◆◆ When alarm No. 5150 occurs ◆◆◆

If alarm No. 5150 (ORIGIN NOT SET) occurs, the origin has not been set correctly. Reconfirm the value input for the origin data.

◆◆◆ Tool length ◆◆◆

The default tool length is 0mm, and the control point is the center of the end axis.

After installing the hand, set the correct tool length in the parameters. Refer to the separate manual "Detailed Explanation of Functions and Operations" for details.

(3) TOOL jog operation

Select the TOOL jog mode

TOOL	LOW
X	+134.50
Y	+220.00
Z	+280.00

TOOL jog mode

STEP
MOVE

+

TOOL
-*/

Set the jog speed

TOOL	LOW
X	+134.50
Y	+220.00
Z	+280.00

Set the speed

STEP
MOVE

+

FORWD


-

BACKWD

Press the [MOVE] + [TOOL] keys to select the TOOL jog mode. "TOOL" will appear at the upper left of the screen.

Each time the [MOVE] + [+] keys are pressed, the override will increase in the order of LOW → HIGH → 3 → 5 → 10 → 30 → 50 → 70 → 100%. When the [MOVE] + [-] keys are pressed, the override will decrease in the reverse order. The currently set speed will appear on the upper right of the screen. Set the override to 10% here for confirmation work.

Moving along the tool coordinate system

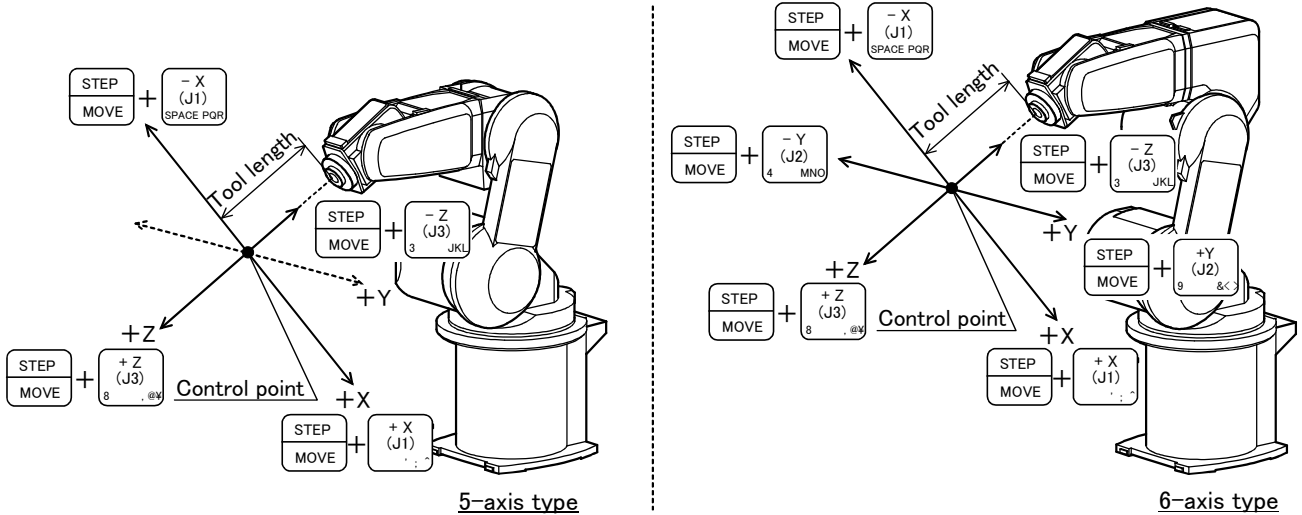

* The direction of the fringe will not change.

- When the [MOVE] + [+X (J1)] keys are pressed, the robot will move along the X axis plus direction of the tool coordinate system.
- When the [MOVE] + [-X (J1)] keys are pressed, Move along the minus direction.
- When the [MOVE] + [+Y (J2)] keys are pressed, the robot will move along the Y axis plus direction of the tool coordinate system.
- When the [MOVE] + [-Y (J2)] keys are pressed, Move along the minus direction. (6-axis type only)
- When the [MOVE] + [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction of the tool coordinate system.
- When the [MOVE] + [-Z (J3)] keys are pressed, Move along the minus direction.


◆◆◆ When the robot is in the transportation posture ◆◆◆
 There are directions from which linear movement is not possible from the transportation posture. In this case, an **X** will appear on the T/B screen, and the robot will not move. Refer to section "(1) JOINT jog operation" on page 22, and move the robot to a position where linear movement is possible, and then carry out TOOL jog.

◆◆◆ When an **X** appears on the T/B screen display ◆◆◆
 If the robot is moved outside the movement area with any of the axes, an **X** will appear. In this case, move the axis in the opposite direction.

TOOL	LOW
X X	+360.00
X Y	+280.00
X Z	+170.00

In the example on the left, further linear movement in the same direction is not possible.

Changing the flange surface posture

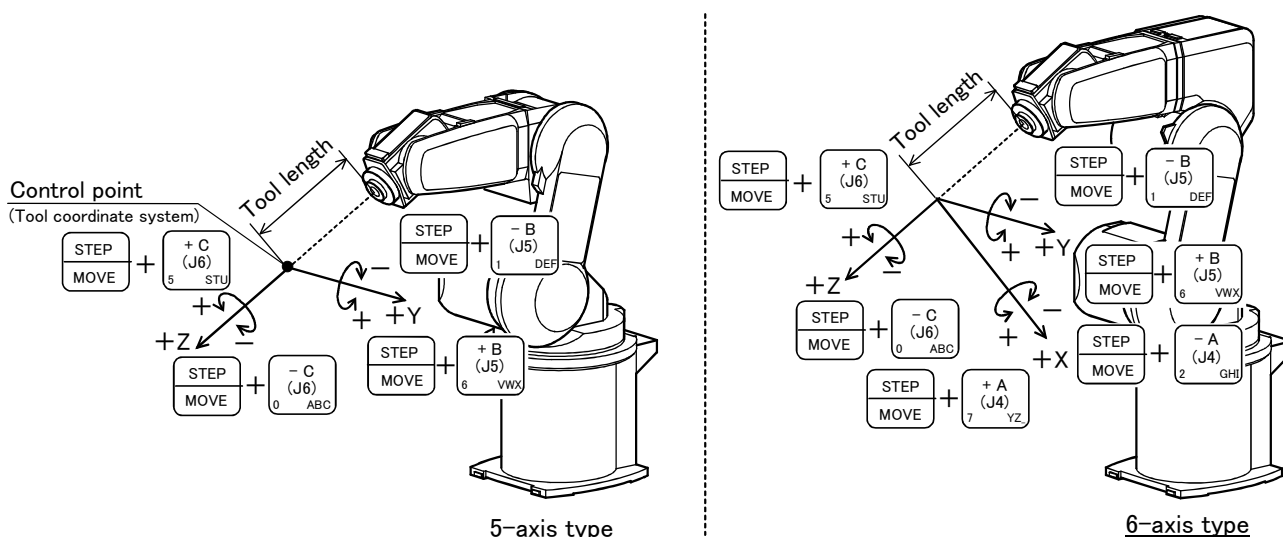

* The control point does not change.

- When the [MOVE] + [+A (J4)] keys are pressed,
 - 6-axis type: The X axis will rotate in the plus direction of the tool coordinate system.
 - 5-axis type: There is no operation.
- When the [MOVE] + [-A (J4)] keys are pressed,
 - 6-axis type: Rotate in the minus direction.
 - 5-axis type: There is no operation.
- When the [MOVE] + [+B (J5)] keys are pressed,
 - 6-axis type: The Y axis will rotate in the plus direction of the tool coordinate system.
 - 5-axis type: The J5 axis will rotate in the plus direction.
- When the [MOVE] + [-B (J5)] keys are pressed,
 - 6-axis type: Rotate in the minus direction.
 - 5-axis type: There is no operation.
- When the [MOVE] + [+C (J6)] keys are pressed,
 - 6-axis type: The Z axis will rotate in the plus direction of the tool coordinate system.
 - 5-axis type: The J6 axis will rotate in the plus direction.
- When the [MOVE] + [-C (J6)] keys are pressed,
 - 6-axis type: Rotate in the minus direction.
 - 5-axis type: There is no operation.

◆◆◆ When alarm No. 5150 occurs ◆◆◆

If alarm No. 5150 (ORIGIN NOT SET) occurs, the origin has not been set correctly. Reconfirm the value input for the origin data.


◆◆◆ Tool length ◆◆◆

The default tool length is 0mm, and the control point is the center of the end axis.


After installing the hand, set the correct tool length in the parameters. Refer to the separate manual "Detailed Explanation of Functions and Operations" for details.

(4) 3-axis XYZ jog operation

Select the 3-axis XYZ jog mode

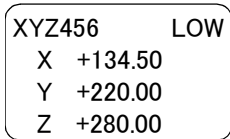


3-axis XYZ jog mode




Press the [MOVE] + [XYZ] keys, and then press only the [XYZ] key. "XYZ456" will appear at the upper left of the screen.

Set the jog speed


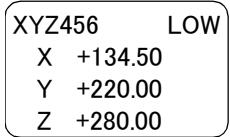


Set the speed



Each time the [MOVE] + [+] keys are pressed, the override will increase in the order of LOW → HIGH → 3 → 5 → 10 → 30 → 50 → 70 → 100%. When the [MOVE] + [-] keys are pressed, the override will decrease in the reverse order. The currently set speed will appear on the upper right of the screen. Set the override to 10% here for confirmation work.

Moving along the base coordinate system

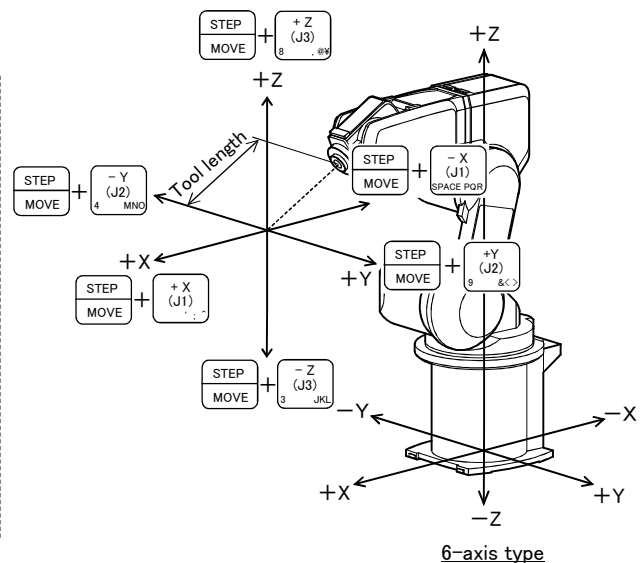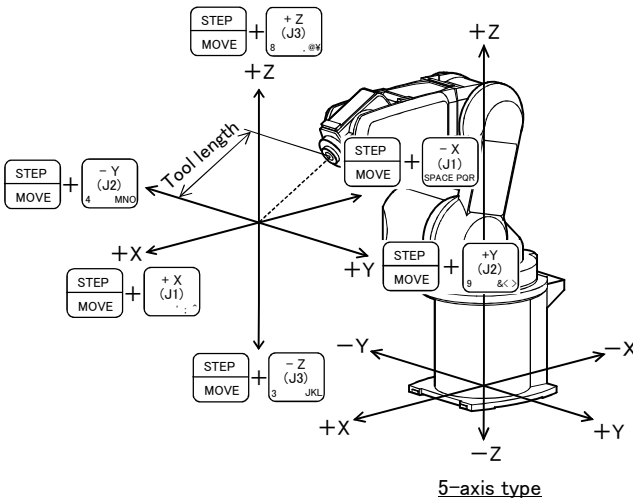


* The flange position does change.

- When the [MOVE] + [+X (J1)] keys are pressed, the robot will move along the X axis plus direction. When the [MOVE] + [-X (J1)] keys are pressed, Move along the minus direction.
- When the [MOVE] + [+Y (J2)] keys are pressed, the robot will move along the Y axis plus direction. When the [MOVE] + [-Y (J2)] keys are pressed, Move along the minus direction.
- When the [MOVE] + [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction. When the [MOVE] + [-Z (J3)] keys are pressed, Move along the minus direction.

◆◆◆ Jog mode will change when only [XYZ] key is pressed again ◆◆◆
 When the [MOVE] + [XYZ] keys are pressed and then only the [XYZ] key is pressed, the upper left display will change in the order of "XYZ" → "XYZ456" → "CYLNDER". Each jog mode can be selected.

◆◆◆ The flange surface end axis posture cannot be maintained with 3-axis XYZ jog. ◆◆◆
 With 3-axis XYZ jog, the flange surface end axis posture (orientation) is not maintained when moving linearly in the X, Y or Z axis direction.
 Use XYZ jog to maintain the posture.

Changing the flange surface posture

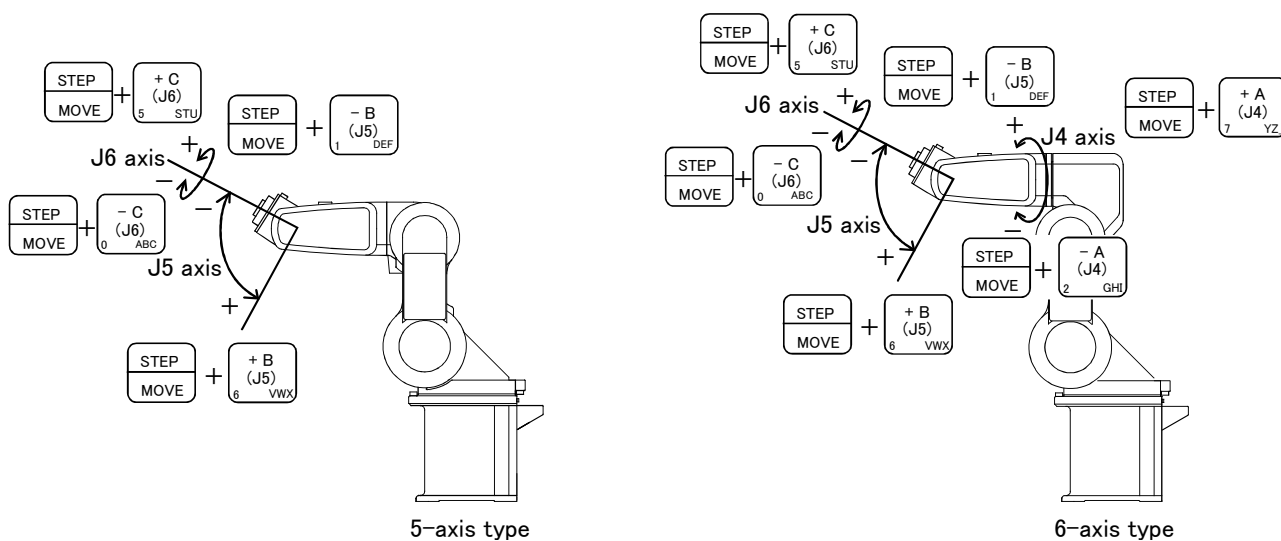

* The flange position changes.


This is the same as the J4, J5 and J6 axis JOINT jog operation.

- When the [MOVE] + [+A (J4)] keys are pressed, the J4-axis will rotate in the plus direction.
When the [MOVE] + [-A (J4)] keys are pressed, Rotate in the minus direction. (6-axis type only)
- When the [MOVE] + [+B (J5)] keys are pressed, the J5-axis will rotate in the plus direction.
When the [MOVE] + [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [MOVE] + [+C (J6)] keys are pressed, the J6-axis will rotate in the plus direction.
When the [MOVE] + [-C (J6)] keys are pressed, Rotate in the minus direction.

(5) CYLINDER jog operation

Select the cylindrical jog mode


CYLINDER LOW
R +134.50
T +220.00
Z +280.00



Press the [MOVE] + [XYZ] keys, and then press only the [XYZ] key. "CYLINDER" will appear at the upper left of the screen.


Set the jog speed

CYLINDER LOW
R +134.50
T +220.00
Z +280.00



Each time the [MOVE] + [+] keys are pressed, the override will increase in the order of LOW → HIGH → 3 → 5 → 10 → 30 → 50 → 70 → 100%. When the [MOVE] + [-] keys are pressed, the override will decrease in the reverse order. The currently set speed will appear on the upper right of the screen. Set the override to 10% here for confirmation work.

Moving along an arc centering on the Z axis

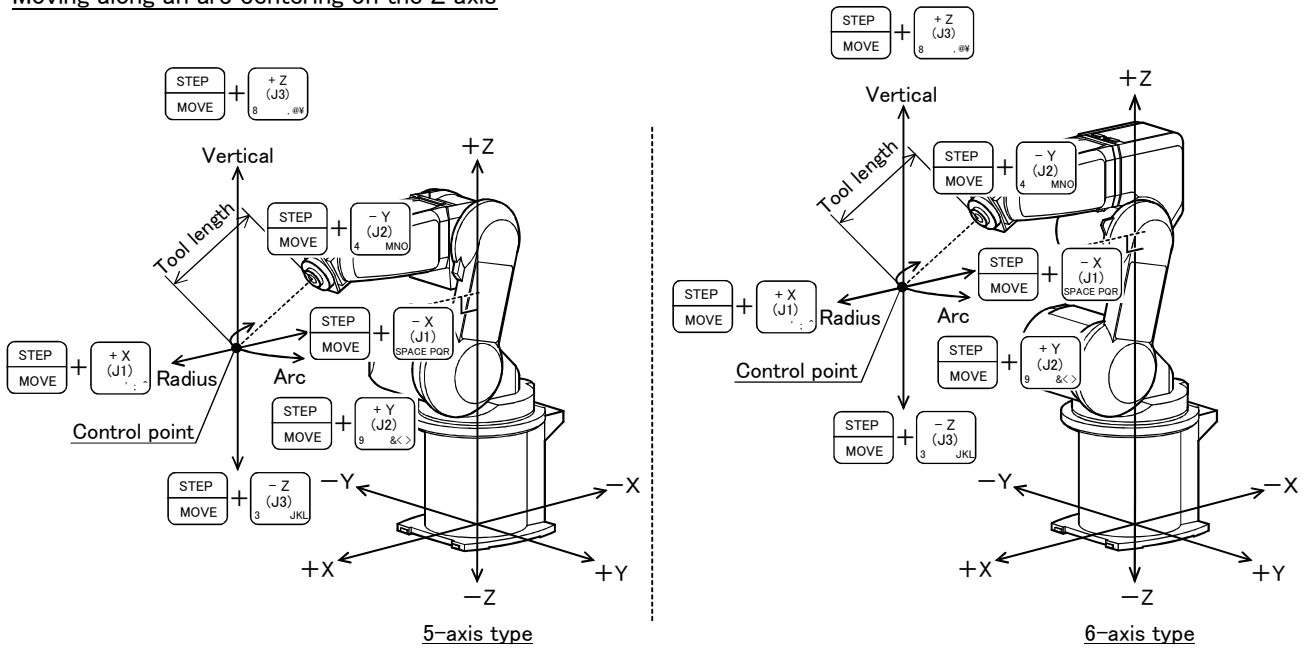


* The direction of the fringe will not change.

Assuming that the current position is on an arc centering on the Z axis, the robot moves along that arc.

- When the [MOVE] + [+Y (J2)] keys are pressed, the robot will move along the arc in the plus direction. When the [MOVE] + [-Y (J2)] keys are pressed, Move in the minus direction.
- When the [MOVE] + [+X (J1)] keys are pressed, the robot will expand in the radial direction. When the [MOVE] + [-X (J1)] keys are pressed, Contract in the radial direction.
- When the [MOVE] + [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction. When the [MOVE] + [-Z (J3)] keys are pressed, Move along the minus direction.

Changing the flange surface posture

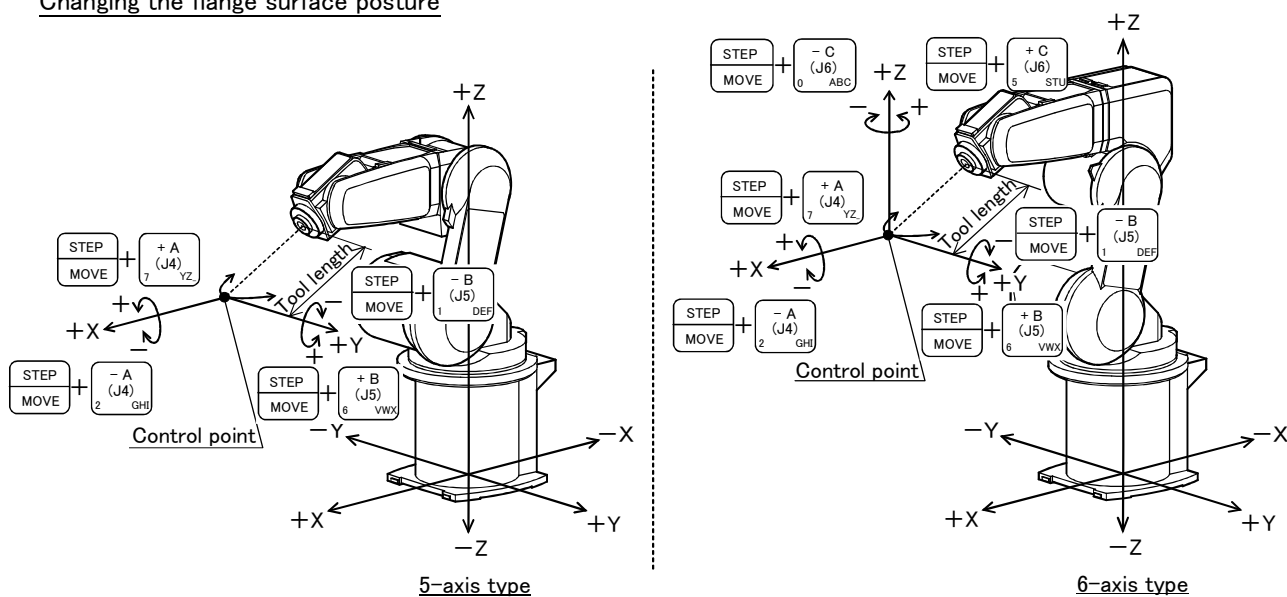

* The flange position does not change.

This is the same as the A, B and C axis XYZ jog operation.

- When the [MOVE] + [+A (J4)] keys are pressed,
6-axis type: The X axis will rotate in the plus direction.
5-axis type: The Z axis will rotate in the plus direction of the tool coordinate system.
When the [MOVE] + [-A (J4)] keys are pressed, Rotate in the minus direction.
- When the [MOVE] + [+B (J5)] keys are pressed,
6-axis type: The Y axis will rotate in the plus direction.
5-axis type: The Y axis will rotate in the plus direction of the tool coordinate system.
When the [MOVE] + [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [MOVE] + [+C (J6)] keys are pressed,
6-axis type: The Z axis will rotate in the plus direction.
5-axis type: There is no operation.
When the [MOVE] + [-C (J6)] keys are pressed,
6-axis type: Rotates in the minus direction.
5-axis type: There is no operation.

3 Installing the option devices

3.1 Installing the solenoid valve set (1S-VD04-02/VD04E-02)

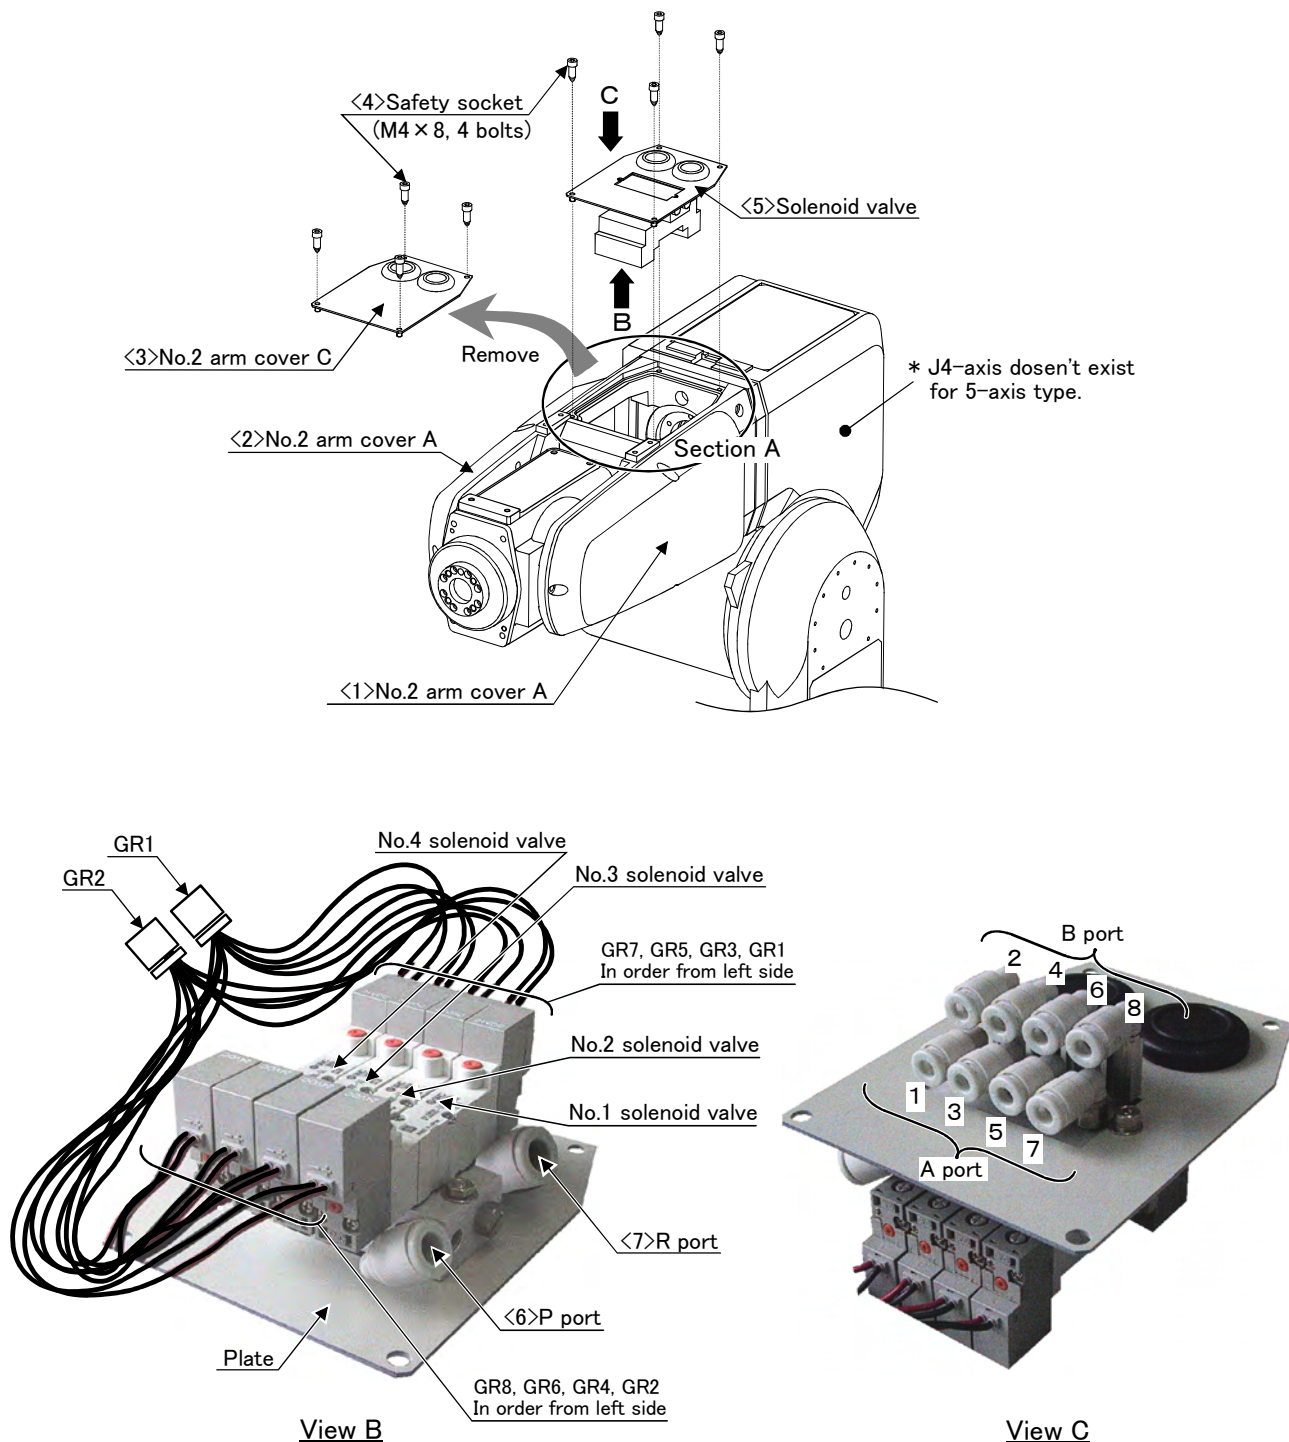


Fig.3-1 : Solenoid valve installation procedures

Fig. 3-1 and Fig. 3-2 shows the solenoid valve installation procedures and the solenoid valve connector connection procedures. The installation procedures are as follow. This work must be carried out with the controller power turned OFF.

- 1) Remove the safety socket (five M4 x 8) that hold the No. 2 arm cover A <2>, and then remove both the No. 2 arm cover A <2>.
- 2) Remove the safety socket <4> (four M4 x 8) that hold the No. 2 arm cover C <3>, and then remove both the No. 2 arm cover C <3>.
- 3) If you are not using the spare line (ADD: stored in a coil) in section A shown in Fig. 3-1, remove it. The spare line is connected to a connector inside section A.

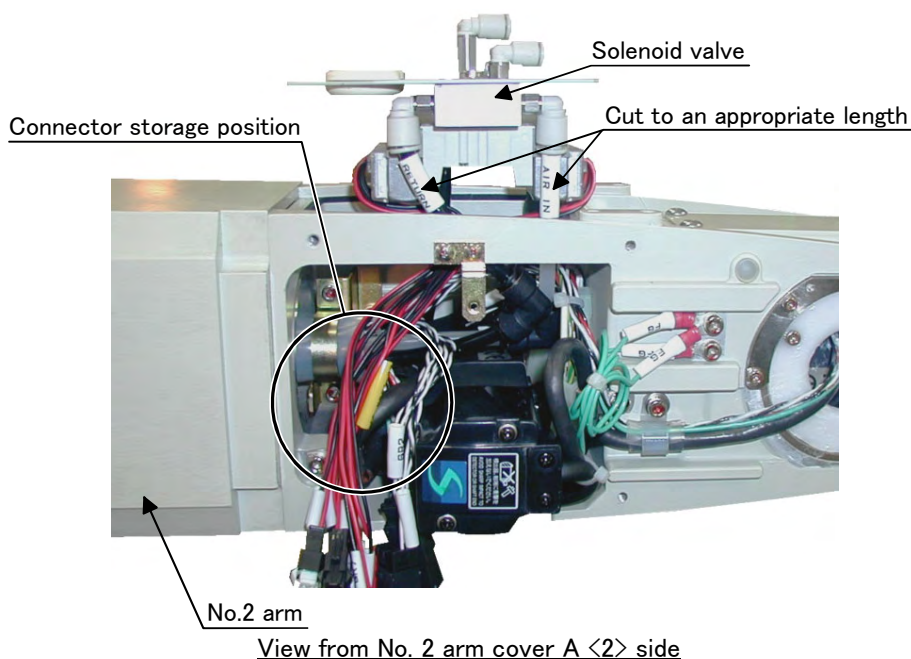


Fig.3-2 : Solenoid valve installation diagram details 1

- 4) The length of the two air hoses ($\phi 6$) stored in section A is longer than necessary by assuming the use of a solenoid valve set not manufactured by Mitsubishi. Cut off the air hoses to an appropriate length, and connect them to the couplings.
- 5) Of the two air hoses ($\phi 6$), the one marked with "AIR IN" is for connecting the quick coupling (P port) <6> of the solenoid valves, and the other marked with "RETURN" is for connecting the quick coupling (R port) <7> of the solenoid valves.
- 6) Using the screw holes of the No. 2 arm cover C <3>, mount the solenoid valves with the safety socket (four M4 x 8) attached to the solenoid valves. When mounting the solenoid valves, be careful not to damage the sponge sealing material attached to the opening of section A. If the sealing material is damaged, it may degrade the protection specification.
- 7) Connect the connectors of "GR1" and "GR2" stored in section A to the plugs of "GR1" and "GR2" coming out of the solenoid valves. Store the connectors near the location marked with \bigcirc shown in Fig. 3-2. Fig. 3-2 shows a view when stored.

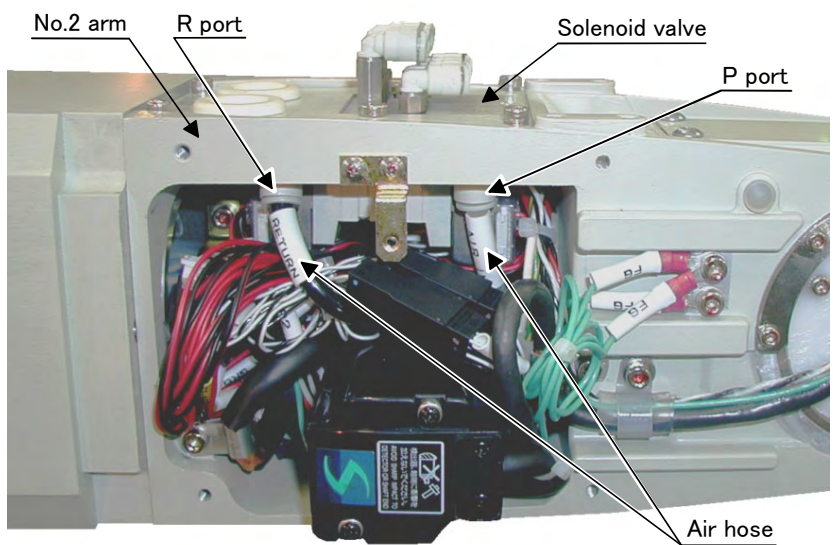


Fig.3-3 : Solenoid valve installation diagram details 2

8) When you have completed the installation, reinstall the No.2 arm cover A <2> to its original position, and be careful not to entangle the cables when you do so.

The connections after the installation appear as in Table 3-1 for single type valves, hand 2 is not applicable.

Table 3-1 : Solenoid valve ports and hoses: Correspondence of couplings and hand ports

Hand	Hand port	Solenoid valve port	Solenoid valve used
Hand 1	OPEN	1	First set
	CLOSE	2	
Hand 2	OPEN	3	Second set
	CLOSE	4	
Hand 3	OPEN	5	Third set
	CLOSE	6	
Hand 4	OPEN	7	Fourth set
	CLOSE	8	

3.2 Installing the hand input cable

The procedure for installing the hand input cable is as follows. Conduct work by referring to "Fig. 3-1 Solenoid valve installation procedures" on page 32 and "Fig. 3-4 Installing the hand input cable" on page 35 below.

This work must be carried out with the controller power turned OFF.

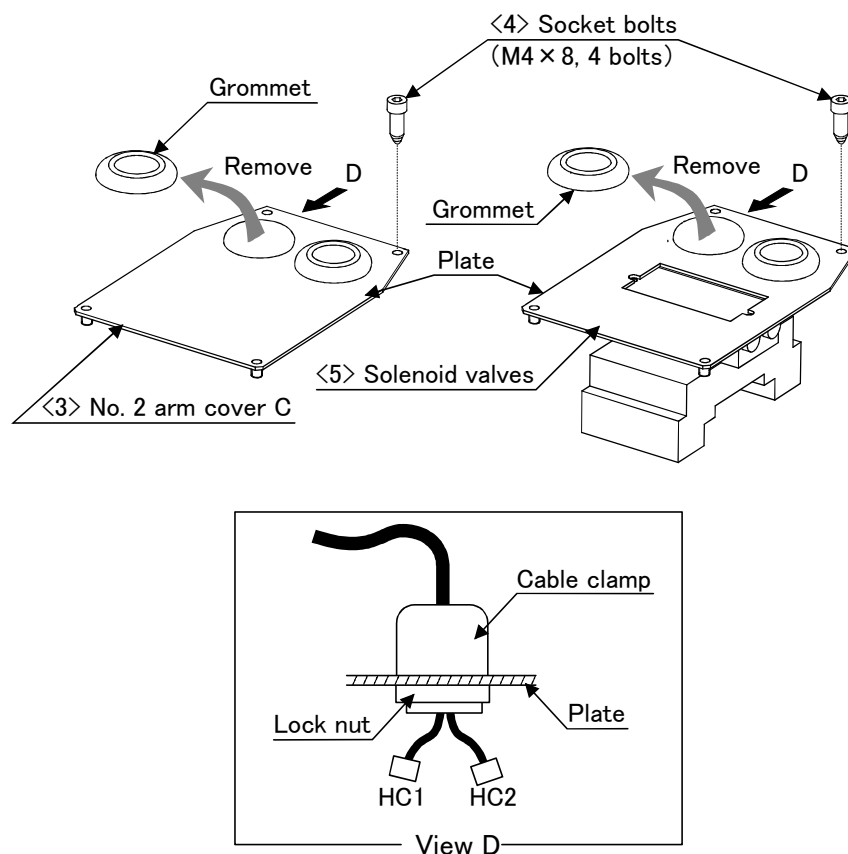


Fig.3-4 : Installing the hand input cable

- 1) Remove the hexagon safety socket (five M4 x 8) that hold the No. 2 arm cover A <2>, and then remove both the No. 2 arm cover A <2>.
- 2) Remove the safety socket <4> (four M4 x 8) that hold the No. 2 arm cover C <3> or the solenoid valves <5>, and then remove the No. 2 arm cover C <3> or the solenoid valves <5>.
- 3) If you are not using the spare line (ADD: stored in a coil) in section A shown in Fig. 3-1, remove it. The spare line is connected to a connector inside section A.
- 4) The hand input cable can be fixed to either the No. 2 arm cover C <3> or the solenoid valves <5>.
- 5) Remove one of the two grommets on either the No. 2 arm cover C <3> or the solenoid valves <5>. After removing the grommet, peel off the sealing material left on the hole section of the plate.
- 6) After removing the lock nut attached to the hand input cable, feed the connector side of the hand input cable (with a cable clamp) through the hole on the plate. Replace the removed lock nut in position and fasten it securely.
- 7) Connect the connectors of "HC1" and "HC2" stored in section A shown in Fig. 3-1 to "HC1" and "HC2" of the hand input cable.
- 8) Mount the No. 2 arm cover C <3> or the solenoid valves <5> to section A shown in Fig. 3-1. When mounting, be careful not to damage the sponge sealing material attached to the opening of section A. If it is damaged, the protection performance may be lowered.
- 9) When you have completed the installation, reinstall the No.2 arm cover B <2> to its original position, and be careful not to entangle the cables when you do so.

3.3 Installing the hand output cable

The procedure for installing the hand output cable is as follows. Conduct work by referring to “Fig. 3-1 Solenoid valve installation procedures” on page 32 and “Fig. 3-5Installing the hand output cable” on page 36 below. This work must be carried out with the controller power turned OFF.

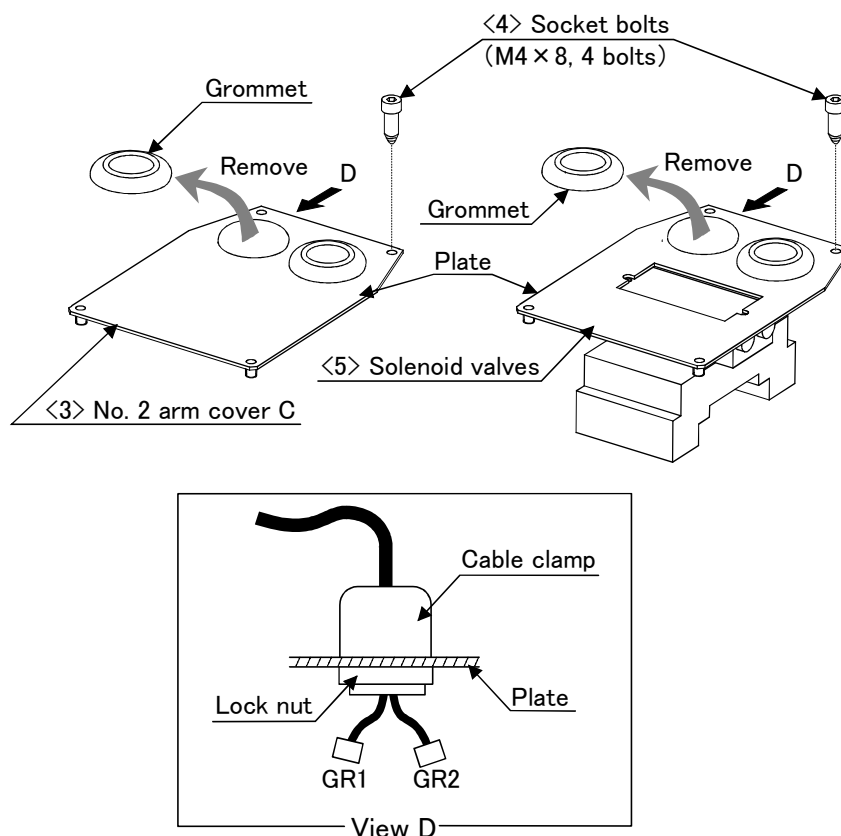


Fig.3-5 : Installing the hand output cable

- 1) Remove the hexagon safety socket (five M4 x 8) that hold the No. 2 arm cover A <2>, and then remove both the No. 2 arm cover A <2>.
- 2) Remove the safety socket <4> (four M4 x 8) that hold the No. 2 arm cover C <3> or the solenoid valves <5>, and then remove the No. 2 arm cover C <3> or the solenoid valves <5>.
- 3) If you are not using the spare line (ADD: stored in a coil) in section A shown in Fig. 3-1, remove it. The spare line is connected to a connector inside section A.
- 4) The hand output cable can be fixed to either the No. 2 arm cover C <3> or the solenoid valves <5>. (attached to the solenoid valve set)
- 5) Remove one of the two grommets on either the No. 2 arm cover C <3> or the solenoid valves <5>. After removing the grommet, peel off the sealing material left on the hole section of the plate.
- 6) After removing the lock nut attached to the hand output cable, feed the connector side of the hand output cable (with a cable clamp) through the hole on the plate. Replace the removed lock nut in position and fasten it securely.
- 7) Connect the connectors of “GR1” and “GR2” stored in section A shown in Fig. 3-1 to “GR1” and “GR2” of the hand output cable.
- 8) Mount the No. 2 arm cover C <3> or the solenoid valves <5> to section A shown in Fig. 3-1. When mounting, be careful not to damage the sponge sealing material attached to the opening of section A. If it is damaged, the protection performance may be lowered.
- 9) When you have completed the installation, reinstall the No.2 arm cover B <2> to its original position, and be careful not to entangle the cables when you do so.

3.4 .Changing the operating range

The operating range of the J1 axis can be changed to the range shown in [Table 3-2](#). (Option)

Table 3-2 : Operating range alternative range

Axis		Standard	Alternative angle					One of the points shown on the left
J 1	+side	Angle	+170	+120	+90	+60	+30	
		Insertion position	None	A	B	C	D	
	-side	Angle	-170	-120	-90	-60	-30	One of the points shown on the left
		Insertion position	None	a	b	c	d	

Note) The insertion position given in the table indicates the insertion position for the operating range change stopper. (Refer to [Fig. 3-6](#).)


The operating range is changed with robot arm settings and parameter settings.

(1) Setting the robot arm

- 1) Move the upper arm to the posture as shown in [Fig. 3-6](#) by jog operation.
- 2) Turn OFF the controller power.
- 3) By referring to [Table 3-2](#) and [Fig. 3-6](#), insert the two stoppers (M10 x 20) used to change the movement range of J1 axis at the angular position to be changed, and fix securely by applying a clamping torque of 70 N · m to 86 N · m.



CAUTION Do not remove the stopper for the standard specification of ± 170 degree shown in [Fig. 3-6](#).



Type: 1S-DH-03
Specification:
Hexagon socket bolt (2 bolts)
M10 x 20 plating
Strength classification 10.9

Detail of the stopper used to change the operating range of the J1 axis

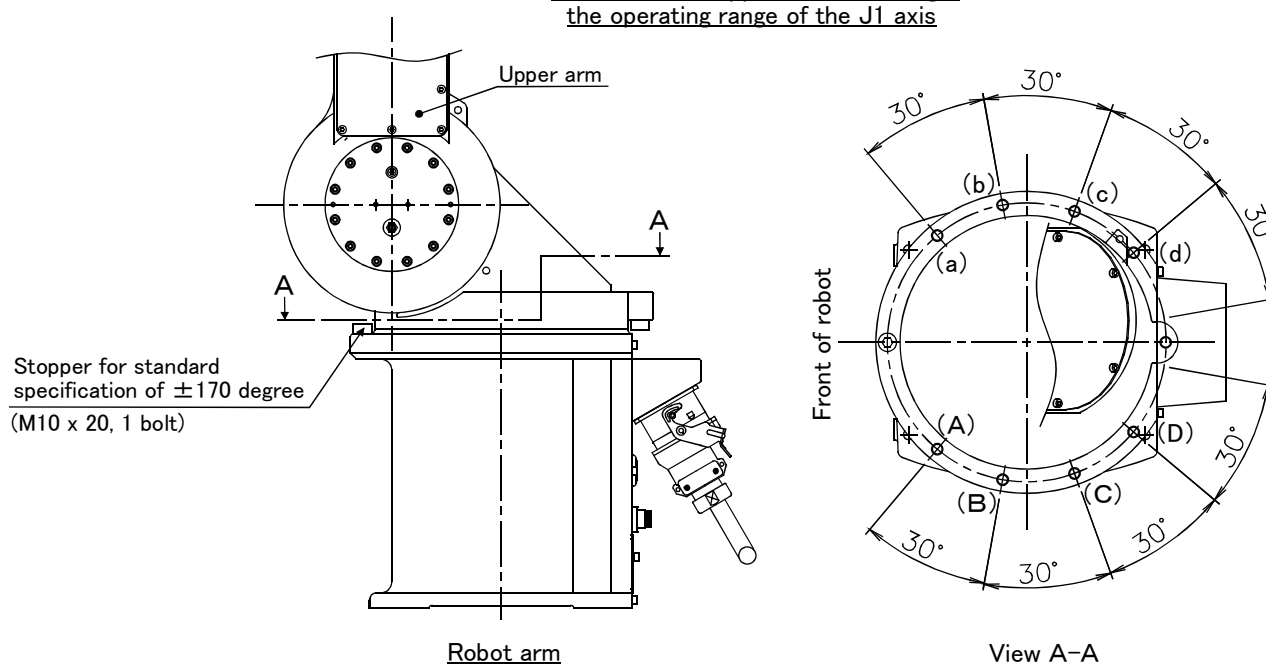


Fig.3-6 : Installation of operating range change option

(2) Setting the parameters

- 1) Change the values of the first element (J1 axis minus side) and second element (J1 axis plus side) of the joint operating range parameter MEJAR. Set the value to the angle corresponding to the position where the operating range change stopper was inserted in [“\(1\)Setting the robot arm”](#) above. Refer to the separate “Instruction Manual/Detailed Explanation of Functions and Operations” for details on changing the parameter.
- 2) When completed changing the parameters, turn the controller power OFF and ON. Move the waist axis to the operating range limit with JOINT jog operation, and confirm that the limit over occurs and the robot stops at the angle changed for both the +/- sides.

This completes setting the parameters and the changing of the operating range.

4 Basic operations

The basic operations from creating the program to automatic operation are explained in section "4. Basic operations" in the "From Controller Setup to Maintenance" manual. Refer that manual as necessary.

5 Maintenance and Inspection


The maintenance and inspection procedures to be carried out to use the robot for a long time without trouble are described in this chapter. The types and replacement methods of consumable parts are also explained.

5.1 Maintenance and inspection interval

Maintenance and inspection are divided into the inspections carried out daily, and the periodic inspections carry out at set intervals. Always carry these out to prevent unforeseen trouble, to maintain the product for a long time, and to secure safety.

(1) Inspection schedule

In addition to the monthly inspection, add the following inspection items every three months (estimated at 500 Hr operation hours).

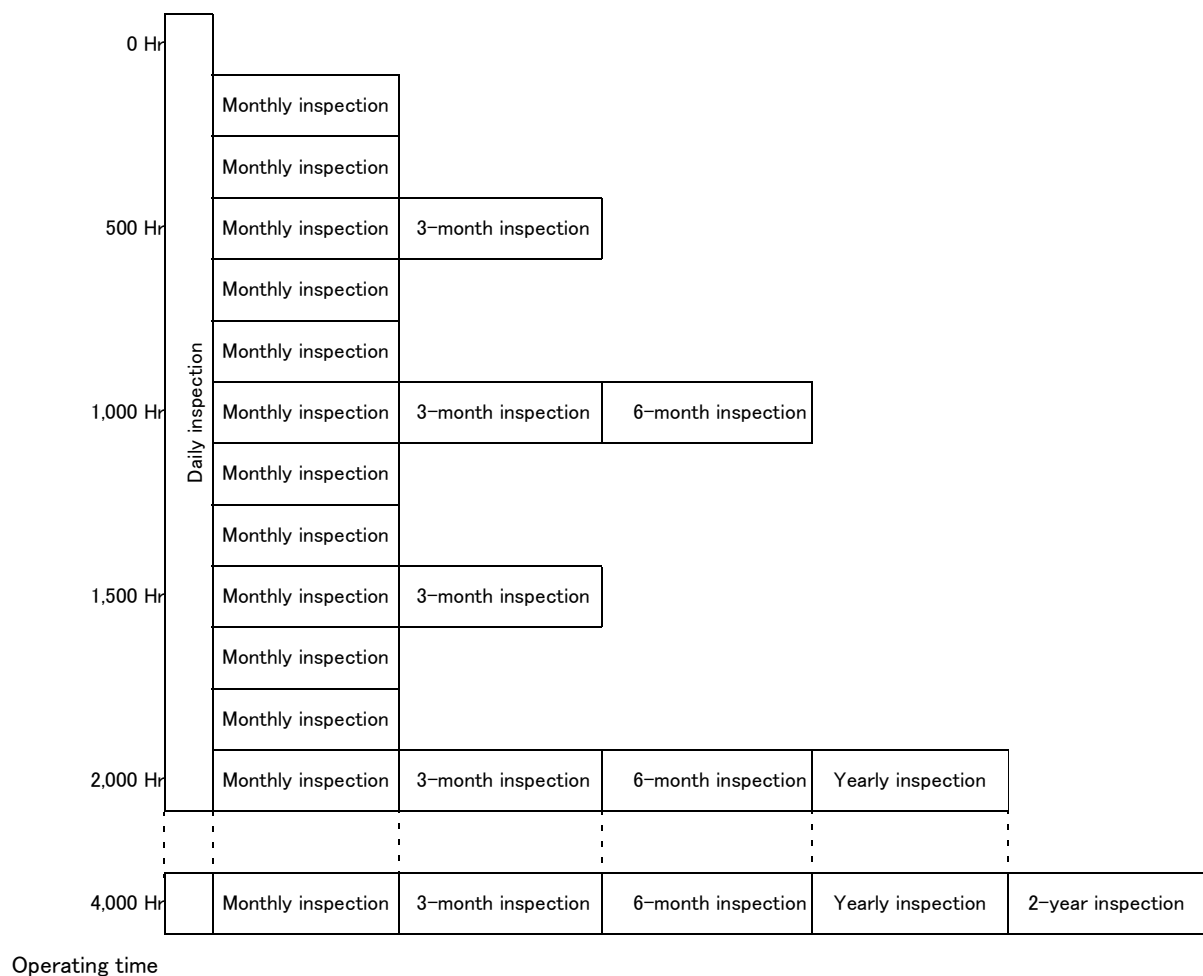

<Guideline for inspection period>

For one shift

$$8 \text{ Hr/day} \times 20 \text{ days/month} \times 3 \text{ months} = \text{approx. } 500 \text{ Hr}$$

$$10 \text{ Hr/day} \times 20 \text{ days/month} \times 3 \text{ months} = \text{approx. } 600 \text{ Hr}$$

For two shifts

$$15 \text{ Hr/day} \times 20 \text{ days/month} \times 3 \text{ months} = \text{approx. } 1000 \text{ Hr}$$

[Caution] When using two lines, the 3-month inspection, 6-month inspection and yearly inspection must be carried out when half the time has passed.

Fig.5-1 : Inspection schedule

5.2 Inspection items

The inspection items for the robot arm are shown below.

Also refer to section "5. Maintenance and inspection" in the "Controller setup, basic operation, and maintenance" manual, and inspect the controller.

5.2.1 Daily inspection items

Carry out the daily inspections with the procedures given in [Table 5-1](#).

Table 5-1 : Daily inspection items (details)

Procedure	Inspection item (details)	Remedies
Before turning power ON (Check the following items before turning the power ON.)		
1	Are any of the robot installation bolts loose? (Visual)	Securely tighten the bolts.
2	Are any of the cover tightening screws loose? (Visual)	Securely tighten the screws.
3	Are any of the hand installation bolts loose? (Visual)	Securely tighten the bolts
4	Is the power supply cable securely connected? (Visual)	Securely connect.
5	Is the machine cable between the robot and controller securely connected? (Visual)	Securely connect.
6	Are there any cracks, foreign contamination or obstacles on the robot and controller cover?	Replace with a new part, or take remedial measures.
7	Is any grease leaking from the robot arm? (Visual)	After cleaning, replenish the grease.
8	Is there any abnormality in the pneumatic system? Are there any air leaks, drain clogging or hose damage? Is the air source normal? (Visual)	Drain the drainage, and remedy the air leaks (replace the part).
After turning the power ON (Turn the power ON while monitoring the robot.)		
1	Is there any abnormal motion or abnormal noise when the power is turned ON?	Follow the troubleshooting section.
During operation (try running with an original program)		
1	Check whether the movement points are deviated? Check the following points if there is any deviation. 1. Are any installation bolts loose? 2. Are any hand installation section bolts loose? 3. Are the positions of the jigs other than the robot deviated? 4. If the positional deviation cannot be corrected, refer to "Troubleshooting", check and remedy.	Follow the troubleshooting section.
2	Is there any abnormal motion or abnormal noise? (Visual)	Follow the troubleshooting section.

5.2.2 Periodic inspection

Carry out periodic inspection with the procedures given in [Table 5-2](#).

Table 5-2 : Periodic inspection items (details)

Procedure	Inspection item (details)	Remedies
Monthly inspection items		
1	Are any of the bolts or screws on the robot arm loose?	Securely tighten the bolts.
2	Are any of the connector fixing screws or terminal block terminal screws loose?	Securely tighten the screws.
3	Remove the cover at each section, and check the cables for wear damage and adherence of foreign matter.	Check and eliminate the cause. If the cables are severely damaged, contact the Mitsubishi Service Department.
3-month inspection items		
1	Is the timing belt tension abnormal?	If the timing belt is loose or too tense, adjust it.
6-month inspection items		
1	Is the friction at the timing belt teeth severe?	If the teeth are missing or severe friction is found, replace the timing belt.
Yearly inspection items		
1	Replace the backup battery in the robot arm.	Exchange it referring to "5.3.5 Replacing the backup battery" on page 53.
2-year inspection items		
1	Lubricate the grease at the harmonic reduction gears for each axis.	Lubricate it referring to "5.3.4 Lubrication" on page 51.

5.3 Maintenance and inspection procedures

The procedures for carrying out the periodic maintenance and inspection are described in this section. Thoroughly read the contents, and follow the instructions. This work can be commissioned to the Mitsubishi Service Department for a fee. (Never disassemble, etc., the parts not described in this manual.)

The maintenance parts, etc., required for the customer to carry out maintenance and inspection are described in "5.4 Maintenance parts" on page 54 of this manual. Always contact your dealer when parts are needed.



CAUTION The origin of the machine system could deviate when this work is carried out. "Review of the position data" and "re-teaching" will be required.

5.3.1 Robot arm structure

An outline structure drawing of the 5-axis type robot arm is shown in Fig. 5-2, and of the 6-axis type robot arm in Fig. 5-3. Each part is as shown below.

- 1) The J1 axis rotation is driven by the J1 axis motor <1> and reduction gears <2> arranged in the base.
Non-excitation magnetic brakes are mounted in the J1 axis motor <1>.
- 2) The J2 axis rotation is driven by the J2 axis motor <3> and reduction gears <4> arranged in the shoulder.
Non-excitation magnetic brakes are mounted in the J2 axis motor <3>.
- 3) The J3 axis rotation is driven by the J3 axis motor <5> and reduction gears <6> arranged in the shoulder.
Non-excitation magnetic brakes are mounted in the J3 axis motor <5>.
- 4) The rotation of the J4 axis motor <7> arranged in the elbow block is conveyed to the reduction gears <9> via the timing belt <8> to rotate the forearm and following parts.
The J4 axis motor <7> of the RV-3S/3SJ series is not equipped with a brake.
The J4 axis motor <7> of the RV-3SB/3SJB series is equipped with non-excitation magnetic brakes.
- 5) The rotation of the J5 axis motor <10> arranged in the forearm is conveyed to the reduction gears <12> via the timing belt <11> to rotate the wrist housing and following parts.
Non-excitation magnetic brakes are mounted in the J5 axis motor <10>.
- 6) The rotation of the J6 axis is driven by the J6 axis motor <13> arranged in the wrist housing and the reduction gears <13>.
The J6 axis motor <13> of the RV-3S/3SJ series is not equipped with a brake.
The J6 axis motor <13> of the RV-3SB/3SJB series is equipped with non-excitation magnetic brakes.

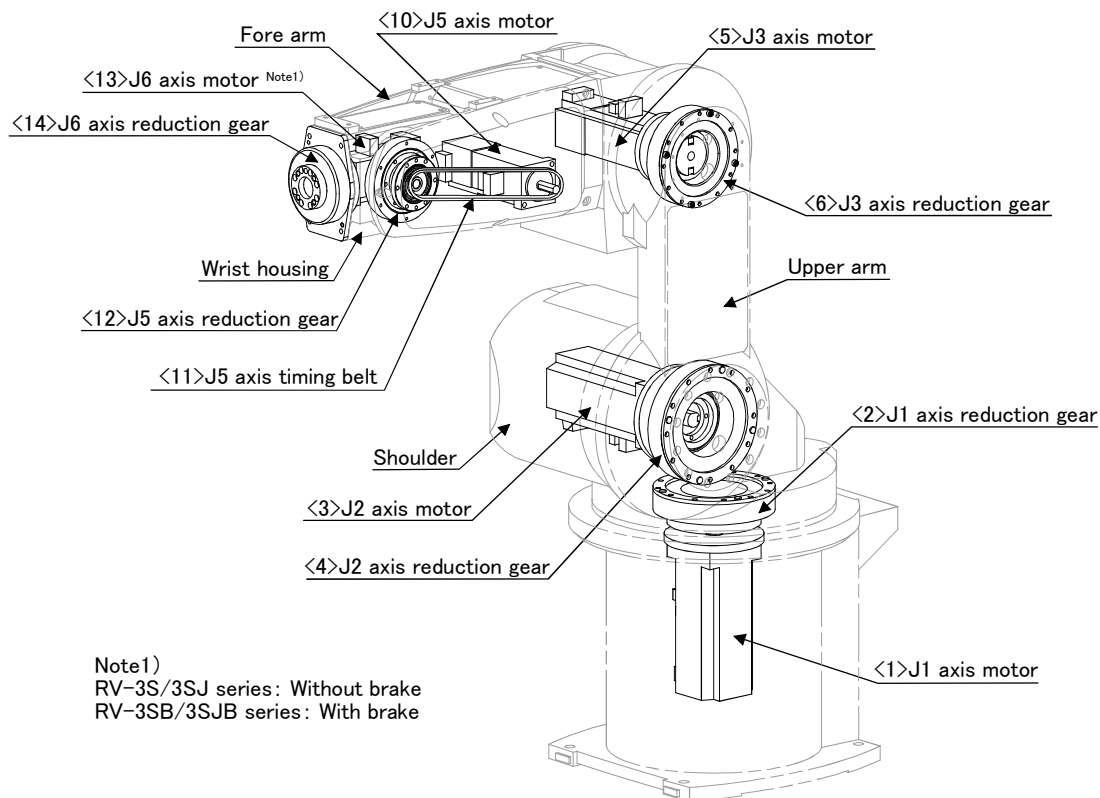


Fig.5-2 : Outline structure drawing of robot arm (5-axis type)

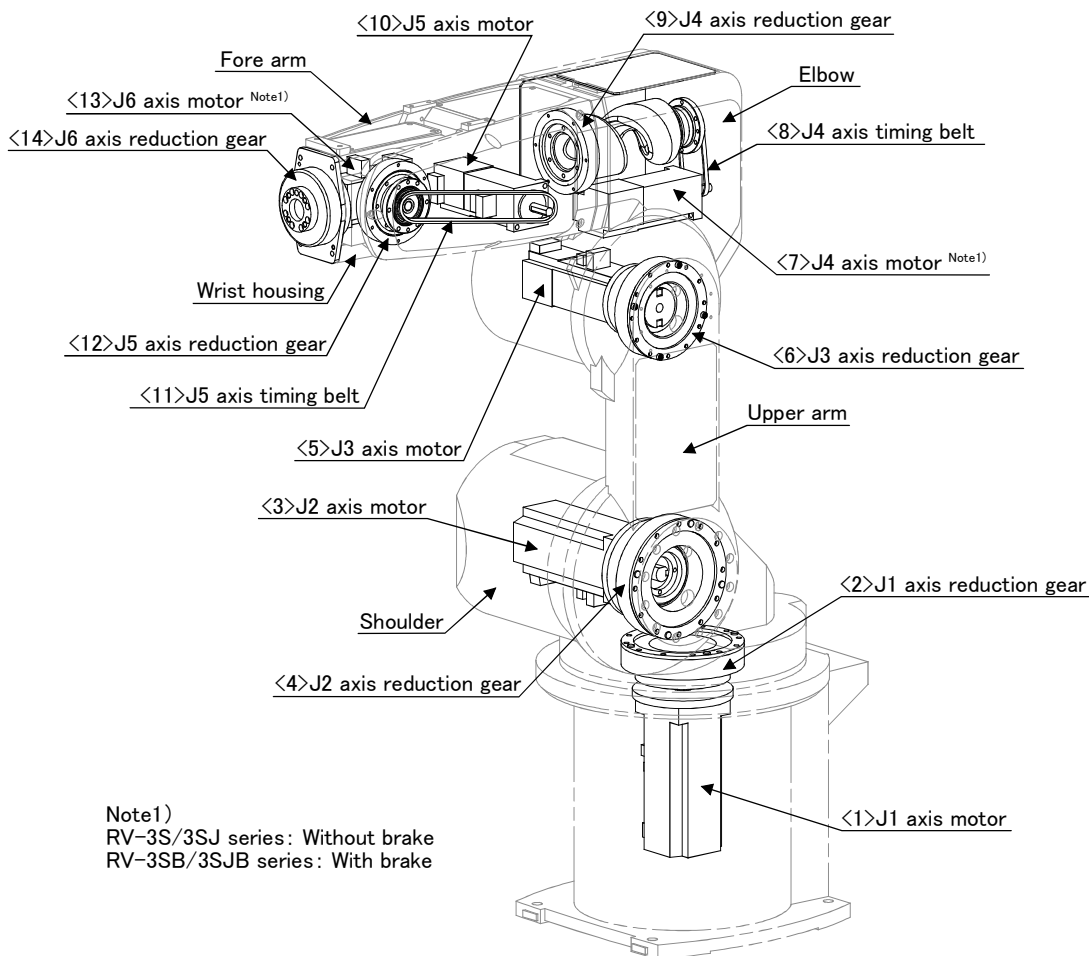


Fig.5-3 : Outline structure drawing of robot arm (6-axis type)

5.3.2 Installing/removing the cover

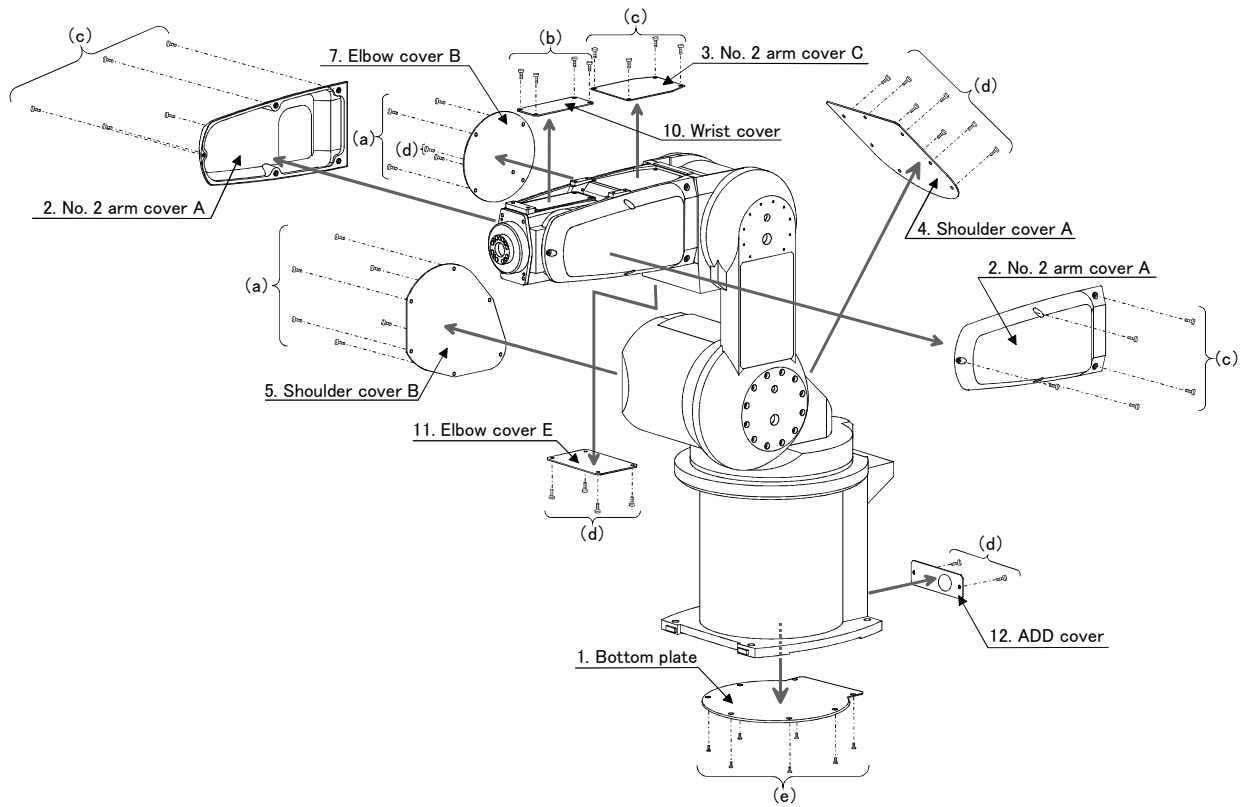


Fig.5-4 : Installing/removing the cover (5-axis type)

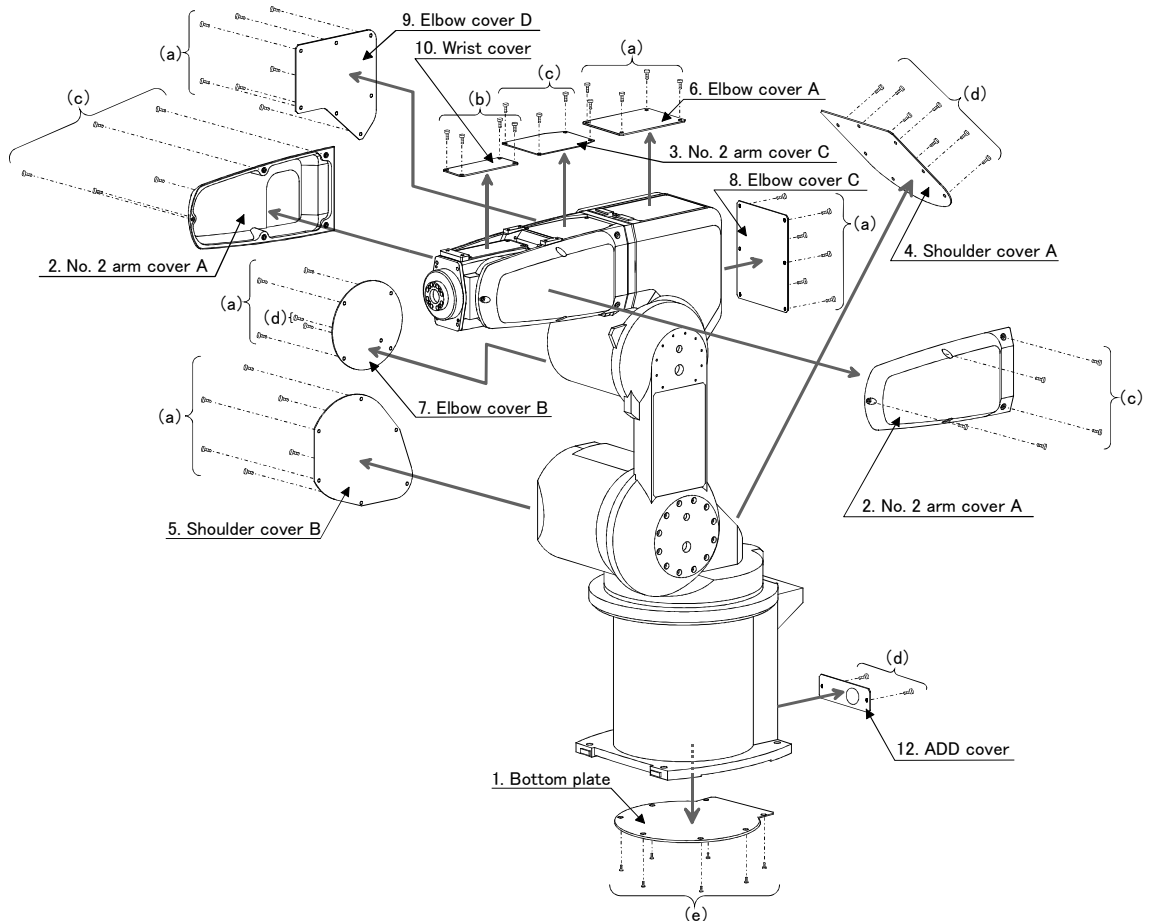


Fig.5-5 : Installing/removing the cover (6-axis type)

Table 5-3 : Cover names

No	Cover names	Qty.		Remarks
		For 5-axis type	For 6-axis type	
1	Bottom plate	1	1	The packing is attached to the robot arm side.
2	No. 2 arm cover A	2	2	With No. 2 arm packing A and packing B
3	No. 2 arm cover C	1	1	The packing is attached to the robot arm side.
4	Shoulder cover A	1	1	With shoulder A packing T and shoulder A packing B
5	Shoulder cover B	1	1	With shoulder B packing T and shoulder B packing B
6	Elbow cover A	0	1	With elbow A packing L and elbow A packing R
7	Elbow cover B	1	1	With elbow B packing
8	Elbow cover C	0	1	With elbow C packing L and elbow C packing R
9	Elbow cover D	0	1	With elbow D packing T and elbow D packing B
10	Elbow cover E	1	0	With elbow E packing F and elbow E packing B
11	Wrist cover	1	1	The packing is attached to the robot arm side.
12	ADD cover	1	1	With ADD packing.

Note) This robot has packing. Refer to "Table 5-7 : Spare parts list" on page 54 for type name of packing.

Table 5-4 : Cover installation screw list

Installation screw name	Qty.		Remarks
	For 5-axis type	For 6-axis type	
P truss screw M4 x 8	10	26	
P truss screw M4 x 6	4	4	
Safety socket M4 x 8 (nickel plated)	14	14	
Socket bolt M4 x 10 (nickel plated)	14	10	With seal washer
P flat head screw M4 x 8 (nickel plated)	7	7	

- (1) Refer to Fig. 5-4 when using the 5-axis type robot arm, and Fig. 5-5 when using the 6-axis type robot arm, and remove the cover.
- (2) The names of the covers are given in Table 5-3, and a list of the cover installation screws is given in Table 5-4.
- (3) There are some covers that may be difficult to remove due to the robot posture. In this case, change the robot posture with jog operation, and then remove the cover.
- (4) When attaching the cover after maintenance and inspection, use the detaching procedure in reverse.

The part Nos. and symbols in Table 5-3 and Table 5-4 correspond to Fig. 5-4 and Fig. 5-5.



CAUTION

Check to see that the packing has not been torn or peeled off when the cover was mounted/removed. If it has been torn or peeled off, please contact your nearest Mitsubishi Electric System & Service office (please refer to the back side of this Standard Specifications Manual for the contact information). If the cover is used with the packing torn or peeled off, oil mist and other substances may enter inside the arm and cause a malfunction.

5.3.3 Inspection, maintenance and replacement of timing belt

This robot uses a timing belt for the drive conveyance system of the J5 axis. Compared to gears and chains, the timing belt does not require lubrication and has a low noise. However, if the belt usage method and tension adjustment are inadequate, the life could drop and noise could be generated. Sufficient aging to remove the initial elongation of the belt, and adjustment of the belt tension have been carried out before shipment from the factory. However, depending on the robot working conditions, elongation will occur gradually over a long time. The tension must be confirmed during the periodic inspection. The timing belt must be replaced in the following cases.

(1) Timing belt replacement period

The timing belt life is greatly affected by the robot working conditions, so a set time cannot be given. However, if the following symptoms occur, replace the belt.

- 1) When cracks form at the base or back of the belt teeth.
- 2) When the belt expands due to adherence of oil, etc.
- 3) When the belt teeth wear (to approx. half of the tooth width).
- 4) When the belt teeth jump due to belt teeth wear.
- 5) When the belt snaps.

CAUTION

Due to the manufacturing of the timing belt, initial wear will occur. Wear chips may accumulate in the cover after approx. 300 Hr of operating the robot, but this is not a fault. If the wear chips appear soon after wiping them off, replace the belt.

CAUTION

When the belt is replaced, the machine system origin may deviate. In this case, the position data must be reviewed.

(2) Inspection, maintenance and replacement of J4 axis timing belt (6-axis only)

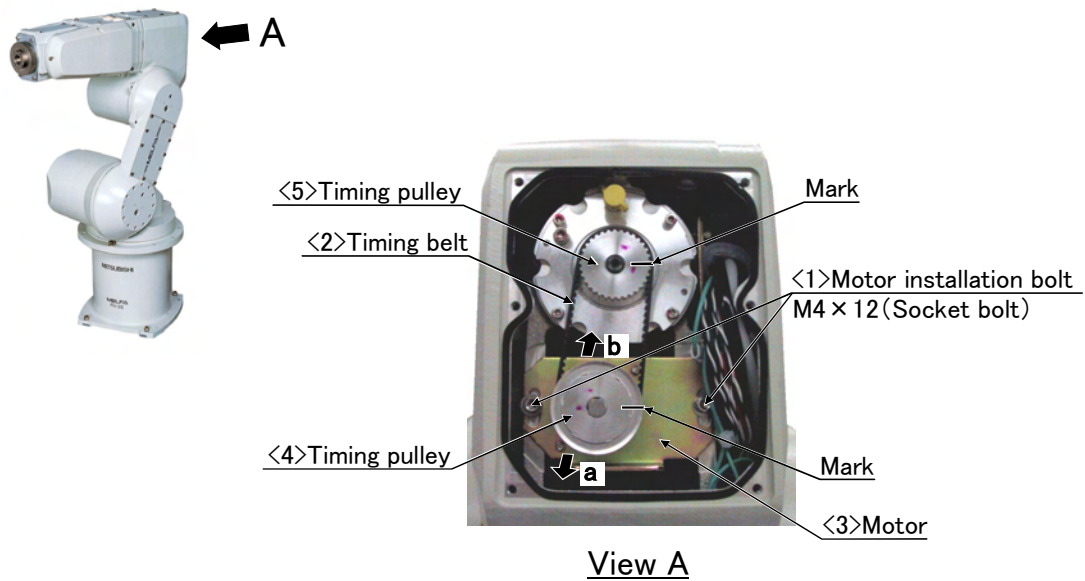


Fig.5-6 : Inspection, maintenance and replacement of J4 axis timing belt

■ Inspecting the J4 axis timing belt

- 1) Confirm that the robot controller power is OFF.
- 2) Refer to "5.3.2 Installing/removing the cover" on page 45, and remove the Elbow cover C.
- 3) Visually confirm that the symptoms indicated in "(1) Timing belt replacement period" have not occurred with the timing belt.
- 4) Confirm that the belt tension is adjusted to slacken approx. 0.9mm when the center of the belt is lightly pressed with a finger (approx. 1.3N) as shown in "Fig.5-8 : Belt tension".


■ Adjusting the J4 axis timing belt

- 1) Carry out steps "1)" and "2)" indicated in "■ Inspecting the J5 axis timing belt" above.
- 2) Lightly loosen the two motor installation bolts <1>. (Do not loosen too much.)
- 3) Move the motor <3> in the directions of the arrows shown in Fig. 5-7, using the tension adjustment screw while checking the tension of the timing belt <2>. Lightly pushing the center of the belt with your finger (approximately 1.3 N), move the motor to the position where the belt flexes about 0.9 mm.
- 4) The belt tension will increase when moved in the direction of arrow "a", and will decrease when moved in the direction of arrow "b".
- 5) If the belt is loosened too much when adjusting the tension causing it to come off the timing pulleys <4> and <5>, or if the belt and pulley teeth engagement is deviated, the machine system's origin will deviate.
- 6) After adjusting, securely tighten the two motor installation bolts <1>. Improper tightening can cause the belt to loosen with vibration.

■ Replacing the J4 axis timing belt

- 1) Fig. 5-7 shows the methods for inspecting, adjusting and replacing the timing belt.
- 2) Make sure that the pulleys do not move while replacing the belt.
- 3) If the pulley <4> and <5> position relation deviates, the position could deviate.
- 4) Make marks on the timing belt <2> and timing pulleys <4> and <5> with a felt-tip pen as shown in Fig. 5-7 so that the engagement of the timing belt <2> and timing pulleys <4> and <5> does not deviate.
- 5) Loosen the two motor installation screws <1>, and remove the belt.
- 6) Copy the marks onto the new timing belt. Make sure that both belts are tense when making the marks.
- 7) Align the new timing belt with the marks on the timing pulleys <4> and <5>, and install.
- 8) Refer to steps "3)" to "6)" in "■ Adjusting the J5 axis timing belt" and "(4) Timing belt tension" to adjust the tension.
- 9) The position could deviate after the belt is replaced. Confirm that the position has not deviated. If deviated, refer to "5.5 Resetting the origin" on page 55, and reset the origin position.

(3) Inspection, maintenance and replacement of J5-axis timing belt

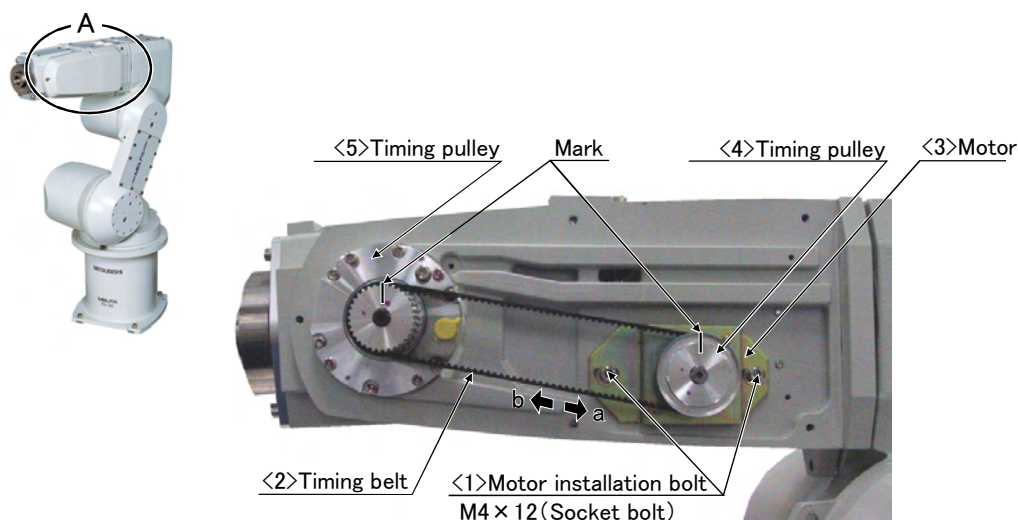

Detail of section A

Fig.5-7 : Inspection, maintenance and replacement of J5-axis timing belt

■ Inspecting the J5 axis timing belt

- 1) Confirm that the robot controller power is OFF.
- 2) Refer to "5.3.2 Installing/removing the cover" on page 45, and remove the No. 2 arm cover A (on the right side facing the robot).
- 3) Visually confirm that the symptoms indicated in "(1) Timing belt replacement period" have not occurred with the timing belt.
- 4) Confirm that the belt tension is adjusted to slacken approx. 2.3mm when the center of the belt is lightly pressed with a finger (approx. 1.3N) as shown in "Fig.5-8 : Belt tension".

■ Adjusting the J5 axis timing belt

- 1) Carry out steps "1)" and "2)" indicated in "■ Inspecting the J5 axis timing belt" above.
- 2) Lightly loosen the two installation bolts <1>. (Do not loosen too much.)
- 3) Move the motor <3> in the directions of the arrows shown in Fig. 5-7, using the tension adjustment screw while checking the tension of the timing belt <2>. Lightly pushing the center of the belt with your finger (approximately 1.3 N), move the motor to the position where the belt flexes about 2.3 mm.
- 4) The belt tension will increase when moved in the direction of arrow "a", and will decrease when moved in the direction of arrow "b".
- 5) If the belt is loosened too much when adjusting the tension causing it to come off the timing pulleys <4> and <5>, or if the belt and pulley teeth engagement is deviated, the machine system's origin will deviate.
- 6) After adjusting, securely tighten the two motor installation bolts <1>. Improper tightening can cause the belt to loosen with vibration.

■ Replacing the J5 axis timing belt

- 1) Fig. 5-7 shows the methods for inspecting, adjusting and replacing the timing belt.
- 2) Move the robot posture with the teaching pendant so that the J5 axis may be downward. (Turn it to the direction of gravity.)
- 3) Make sure that the pulleys do not move while replacing the belt.
- 4) If the pulley <4> and <5> position relation deviates, the position could deviate.
- 5) Make marks on the timing belt <2> and timing pulleys <4> and <5> with a felt-tip pen as shown in Fig. 5-7 so that the engagement of the timing belt <2> and timing pulleys <4> and <5> does not deviate.
- 6) Loosen the two motor installation screws <1>, and remove the belt.
- 7) Copy the marks onto the new timing belt. Make sure that both belts are tense when making the marks.
- 8) Align the new timing belt with the marks on the timing pulleys <4> and <5>, and install.
- 9) Refer to steps "3)" to "6)" in "■ Adjusting the J5 axis timing belt" and "(4) Timing belt tension" to adjust the tension.
- 10) The position could deviate after the belt is replaced. Confirm that the position has not deviated. If deviated, refer to "5.5 Resetting the origin" on page 55, and reset the origin position.

(4) Timing belt tension

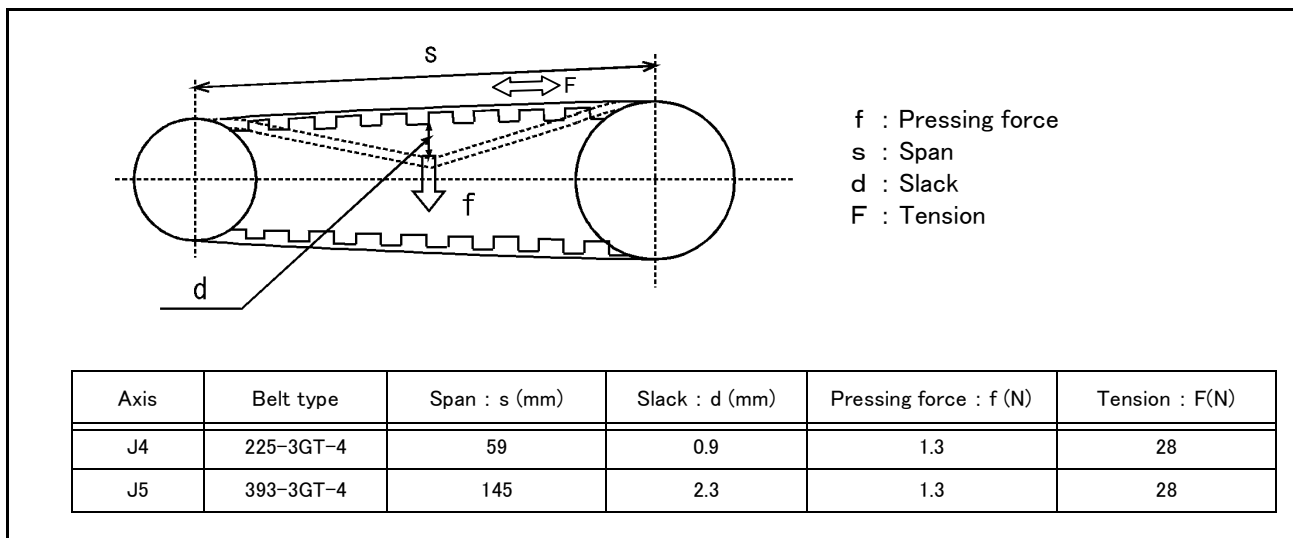


Fig.5-8 : Belt tension

The timing belt can satisfactorily convey the drive and keep a durable force only when it has an adequate tension. The belt tension should not be too tight or too loose. Instead, it should be adjusted to a degree that elasticity is felt when the belt is pressed with the thumb. If the belt tension is too weak, the belt loosening side will vibrate. On the other hand, if the belt tension is too strong, a sharp sound will be heard and the belt tension side will vibrate.

The detailed adjustment (tension) is shown in Fig. 5-8.

Check and adjust with the belt pressing force f and the slack amount d between span s .

5.3.4 Lubrication

(1) Lubrication position and specifications

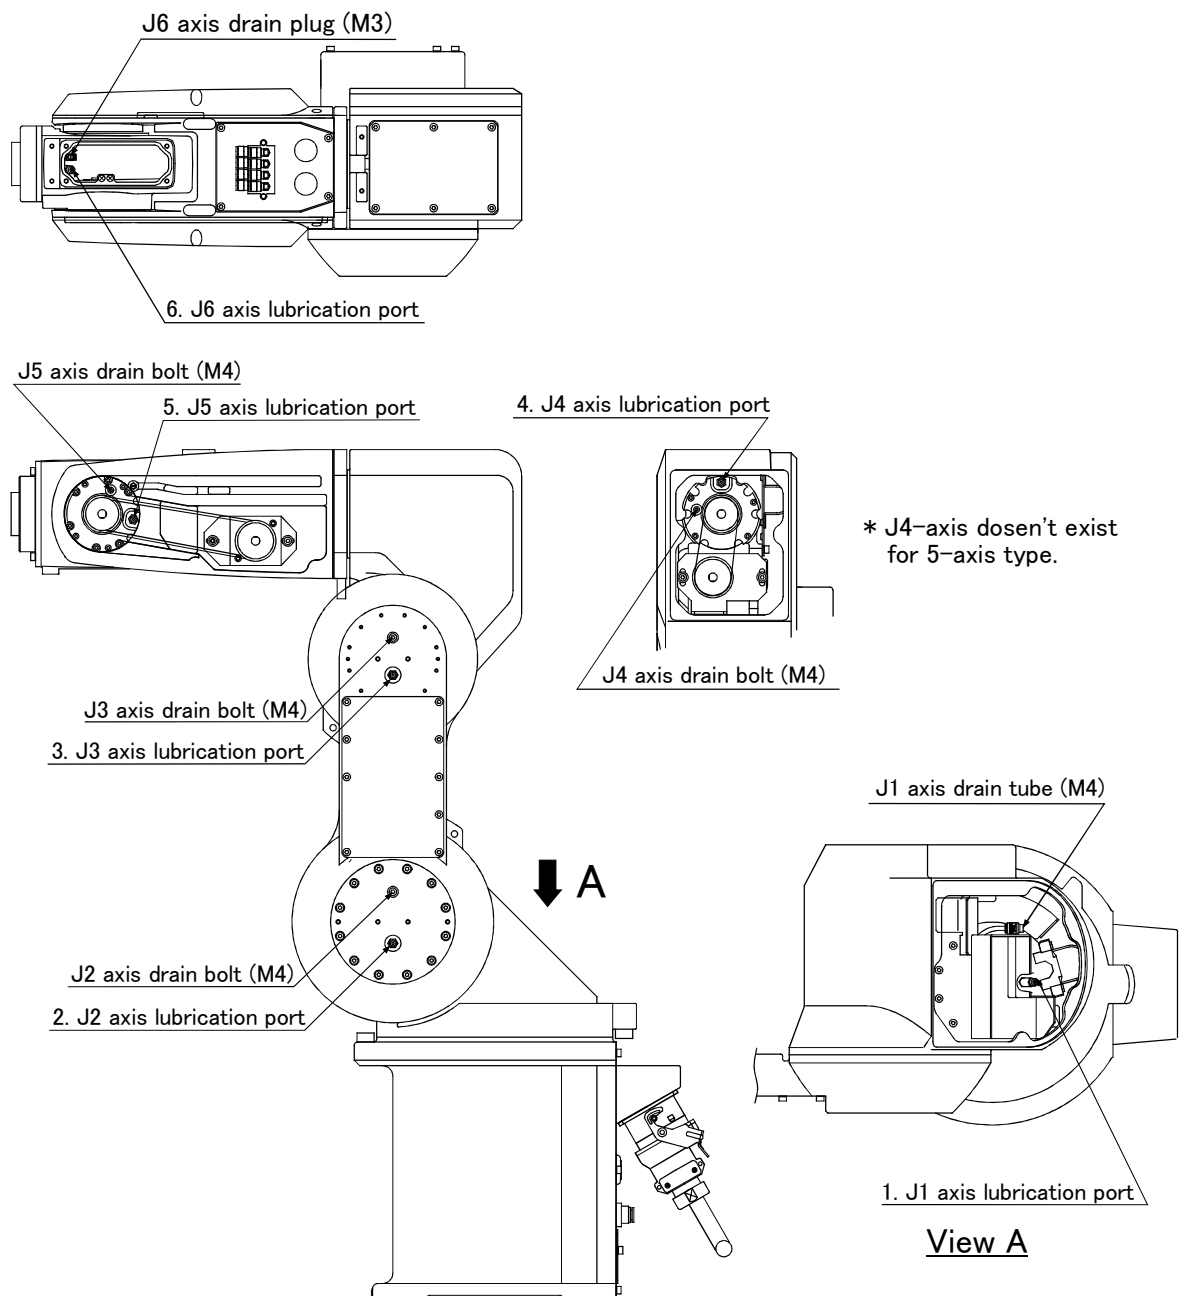


Fig.5-9 : Lubrication positions

Table 5-5 : Lubrication specifications

No.	Parts to be lubricated	Oiling method	Lubrication oil (maker)	Default charge amount	Lubrication interval	Lubrication amount	Cover to remove
1	J1 axis reduction gears	Grease nipple WB-610	Grease Harmonic grease SK-1A (Japan Harmonic Systems)	40g	4,000Hr	8g	Shoulder cover A
2	J2 axis reduction gears	Grease nipple WA-610		40g		8g	
3	J3 axis reduction gears			16g		5g	
4	J4 axis reduction gears			5.5g		1g	Elbow cover C
5	J5 axis reduction gears			5.5g		1g	No.2 arm cover A
6	J6 axis reduction gears	Grease nipple WB-610		10g		2g	Wrist cover

The grease nipple position is shown in Fig. 5-9. The lubrication specifications for each place are shown in Fig. 5-9.

[Caution]

- The brands of grease given in Table are those filled when the robot is shipped.
- The lubrication time is a cumulative value of the operation at the maximum speed. If the operation has been suspended, or if the designated speed is slow, the lubrication time can be lengthened in proportion. (The "Lubrication interval" in Table is usually based on the two-year inspection. 8Hr x 20 days x 24 months = 4,000Hr.)
- Depending on the robot operation state, the lubrication time will fluctuate, so determine the time according to the state so that the grease does not run out.
- With the maintenance forecast function of the personal computer support software (option), the guidance of lubrication time is calculated according to the operating environment of the customer.
- The numbers in the correspond to the supply positions in Fig. 5-9.
- Avoid excessive lubrication since it may lead to grease leak. Also, the number of lubrications is limited to 3 times.

(2) Lubrication method

- 1) Set the robot to the posture shown in Fig. 5-9.
- 2) Refer to the "5.3.2Installing/removing the cover" on page 45 and remove the covers.
- 3) Remove the drain bolt or plug.
- 4) Insert the grease shown in Table using a grease gun from the lubrication grease nipple.
- 5) Install the drain bolt or plug.
- 6) Replace the covers with the removal procedure in reverse.

5.3.5 Replacing the backup battery

An absolute encoder is used for the position detector, so the position must be saved with the backup battery when the power is turned OFF. The controller also uses a backup battery to save the program, etc. These batteries are installed when the robot is shipped from the factory, but as these are consumable parts, they must be replaced periodically by the customer.

The guideline for replacing the battery is one year, but this will differ according to the robot's usage state. When the battery life nears, the "Battery cumulative time over alarm (Alarm No. 7520)" will occur. Once the alarm occurs, replace all batteries in the robot arm and controller as soon as possible. Lithium batteries (type: A6BAT and ER6) are used in both the controller and robot arm.

(1) Replacing the robot arm battery

CAUTION

Don't disconnect connector, etc. While replacing the battery, the encoder position data is saved by the power supplied from the controller. Thus, if the cable connection is incomplete, the encoder position data will be lost when the controller power is turned OFF. Several batteries are used in the robot arm, but replace all old batteries with new batteries at the same time.

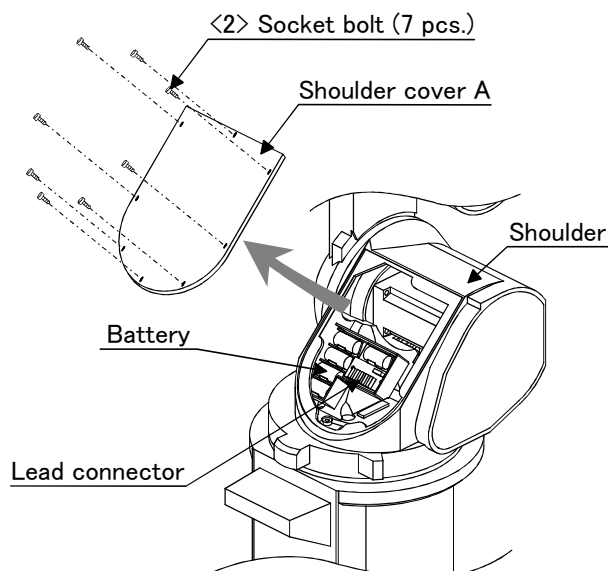


Fig.5-10 : Replacing the battery

- 1) Confirm that the robot arm and controller are connected with a cable.
- 2) Turn the controller control power ON.
The position data is retained by the power supplied from the controller while replacing the battery. Thus, if the cable is not connected correctly, or if the controller power is OFF, the position data will be lost.
- 3) Press the emergency stop button to set the robot in the emergency stop state. This is a measure for safety, and must always be carried out.
- 4) Remove the seven socket bolt <2>, and remove the shoulder cover A. (Refer to "5.3.2 Installing/removing the cover" on page 45.)
- 5) The battery holder is located in the shoulder. Remove the old battery from the holder, and disconnect the lead connector.
- 6) Insert the new battery into the holder, and connect the lead connector. Replace all batteries with new ones at the same time.
- 7) Mount shoulder cover A.
- 8) Initialize the battery consumption time.

Always carry out this step after replacing the battery, and initialize the battery usage time. Refer to the separate "Instruction Manual/Detailed Explanation of Functions and Operations" for details on the operation methods.

[Caution] If the old battery is replaced because it has been used up, it is necessary to set the origin again. Refer to "5.5 Resetting the origin" on page 55 and reset the origin using the jig method or mechanical stopper method or ABS origin method.

5.4 Maintenance parts

The consumable parts that must be replaced periodically are shown in Table 5-6, and spare parts that may be required during repairs are shown in Table 5-7. Purchase these parts from the dealer when required. Some Mitsubishi-designated parts differ from the maker's standard parts. Thus, confirm the part name, robot arm and controller serial No. and purchase the parts from the dealer.

Table 5-6 : Consumable part list

No.	Part name	Type ^{Note1)}	Usage place	Q'ty	Supplier
1	Timing belt		J4 axis	1	Mitsubishi Electric System & Service;Co.,Ltd.
2	Timing belt		J5 axis	1	
3	Grease		Reduction gears of each axis	An needed	
4	Lithium battery		In shoulder cover A	5	

Table 5-7 : Spare parts list

No.	Part name	Type ^{Note1)}	Usage place	Q'ty	Supplier
1	AC servo motor		J1 axis	1	Mitsubishi Electric System & Service;Co.,Ltd.
2			J2 axis	1	
3			J3 axis	1	
4			J4 axis (6-axis type only)	1	
5			J5 axis	1	
6			J6 axis	1	
7	Reduction gears		J1 axis	1	
8			J2 axis	1	
9			J3 axis	1	
10			5-axis type: J5 axis	1	
11			6-axis type: J4 axis and J5 axis	2	
	5-axis type (RV-3SJ series)				
12	Shoulder A packing T		Shoulder cover A	1	Mitsubishi Electric System & Service;Co.,Ltd.
13	Shoulder A packing B		Shoulder cover A	1	
14	Shoulder B packing T		Shoulder cover B	1	
15	Shoulder B packing B		Shoulder cover B	1	
16	Elbow B packing		Elbow cover B	2	
17	Elbow E packing F		Elbow cover E	1	
18	Elbow E packing B		Elbow cover E	1	
19	No. 2 arm packing A		No. 2 arm cover A	2	
20	No. 2 arm packing B		No. 2 arm cover A	2	
21	Packing		Bottom plate, No. 2 arm cover C and Wrist cover	4	
22	ADD packing		ADD cover	2	
23	Seal washer		ADD cover, Shoulder cover A, Elbow cover B and Elbow cover E	14	
	6-axis type (RV-3S series)				
24	Shoulder A packing T		Shoulder cover A	1	Mitsubishi Electric System & Service;Co.,Ltd.
25	Shoulder A packing B		Shoulder cover A	1	
26	Shoulder B packing T		Shoulder cover B	1	
27	Shoulder B packing B		Shoulder cover B	1	
28	Elbow D packing T		Elbow cover D	1	
29	Elbow D packing B		Elbow cover D	1	
30	Elbow C packing L		Elbow cover C	1	
31	Elbow C packing R		Elbow cover C	1	
32	Elbow B packing		Elbow cover B	2	
33	Elbow A packing L		Elbow cover A	1	
34	Elbow A packing R		Elbow cover A	1	
35	No. 2 arm packing A		No. 2 arm cover A	2	
36	No. 2 arm packing B		No. 2 arm cover A	2	
37	Packing		Bottom plate, No. 2 arm cover C and Wrist cover	4	
38	ADD packing		ADD cover	2	
39	Seal washer		ADD cover, Shoulder cover A and Elbow cover B	10	

Note1) Confirm the robot arm serial No., and contact the dealer or service branch of Mitsubishi Electric Co., for the type.

5.5 Resetting the origin

The origin is set so that the robot can be used with a high accuracy. After purchasing the robot, always carry out this step before starting work. The origin must be reset if the combination of robot and controller being used is changed or if the motor is changed causing an encoder area. The types of origin setting methods are shown in [Table 5-8](#).

[Caution] If the old battery is replaced because it has been used up, it is necessary to set the origin again. Reset the origin using the jig method or mechanical stopper method or ABS origin method.

Table 5-8 : Origin setting method


No	Method	Explanation	Remarks
1	Origin data input method	The origin data set as the default is input from the T/B.	The setting method is explained in "2.3 Setting the origin" on page 13 .
2	Mechanical stopper method	This origin posture is set by contacting each axis against the mechanical stopper.	The setting method is explained in "5.5.1 Mechanical stopper method" on page 56 .
3	Jig method	The origin posture is set with the calibration jig installed.	The setting method is explained in "5.5.2 Jig method" on page 70 .
4	User origin method	A randomly designated position is set as the origin posture.	Before using this method, the origin must be set with the other method. The setting method is explained in "5.5.4 User origin method" on page 82 .
5	ABS origin method	This method is used when the encoder backup data lost in the cause such as battery cutting.	Before using this method, the origin must be set with the other method with same encoder. The setting method is explained in "5.5.3 ABS origin method" on page 80 .

5.5.1 Mechanical stopper method

The method for setting the origin with the transportation jig is explained below.

This operation is carried out with the T/B. Set the [MODE] switch on the front of the controller to "TEACH", and set the T/B [ENABLE/DISABLE] switch to "ENABLE" to validate the T/B. Move the J4 axis to the upper end with jog operation beforehand.

(1) Select the T/B

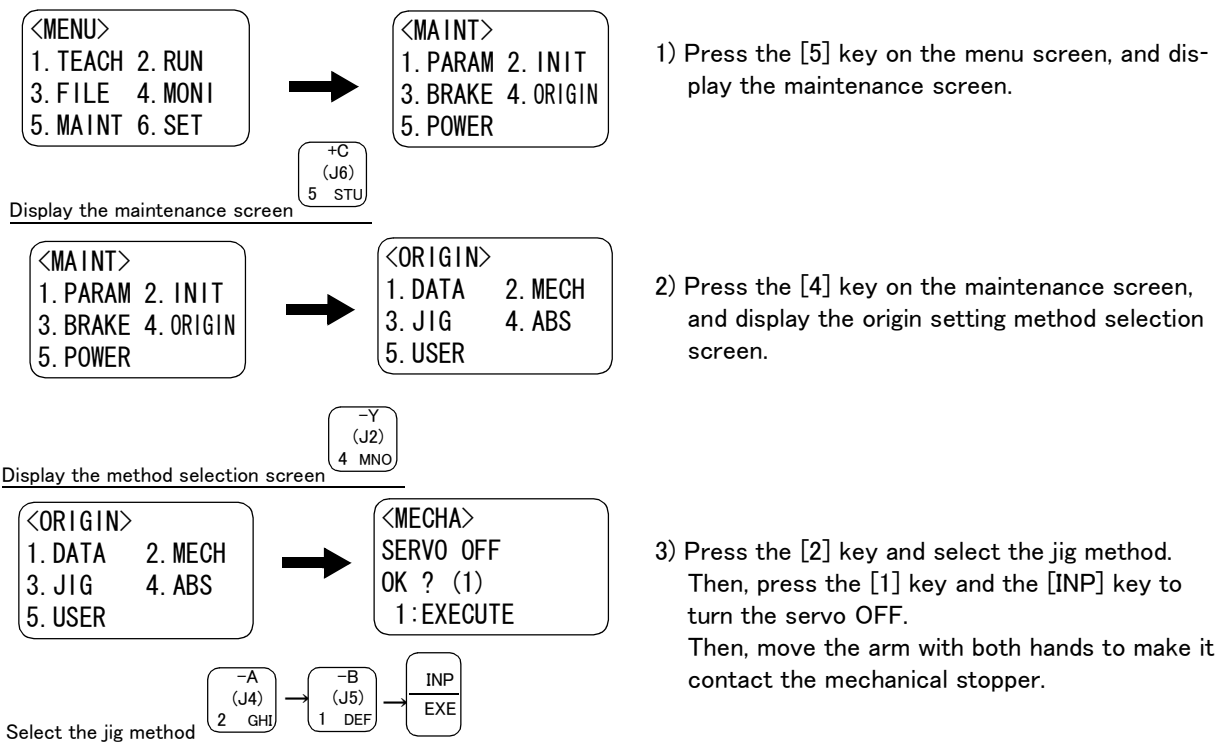

When setting the origin, all axes can be set, or only random axes can be set.

The methods corresponding to the axes to be set are described below, so select the corresponding explanation and set the origin.

CAUTION

Here, if an axis is equipped with a brake, release the brake and move the arm with both hands.

To ensure safety, the brake-release procedure described below should always be done by two persons.

(2) J1 axis origin setting

```
<MECHA> 12345678
BRAKE (10000000)
SET AXIS (11111000)
ORIGIN :NOT DEF
```

```
-B
(J5)
1 DEF
```


Designate the origin setting axis

1) Press the [1] key. "1" will display at the 1 position to set the brake release.

2) Confirm the axis for which the brakes are to be released.

3) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.

4) With both hands, slowly move the J1 axis in + (plus) direction, and contact the axis against the mechanical stopper.

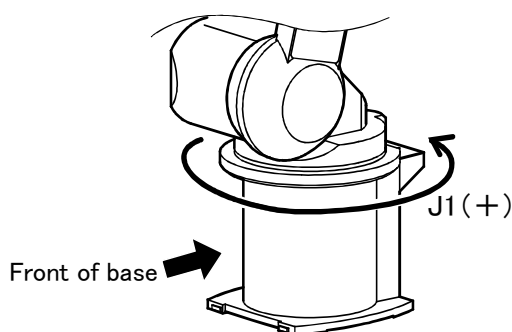

```
RPL
↓
```

Move the cursor

```
<MECHA> 12345678
BRAKE (10000000)
SET AXIS (10000000)
ORIGIN :NOT DEF
```

```
-B (J5) 1 DEF · -C (J6) 0 ABC → INP EXE
```

Designate the origin setting axis

5) Press the [↓] key. The cursor will move to "SET AXIS".

6) Designate the axis for which the origin is to be set. Set "1" for the 1 axis, and set "0" for the other axes. Then, press [INP]. Next, a confirmation screen will appear.

```
<MECHA>
SET ORIGIN
OK?(1)
1:EXECUTE
```

```
-B (J5) 1 DEF → INP EXE
```

Set the origin

7) Press the [1] and [INP] keys. The origin posture will be set.

8) Setting of the origin is completed.

```
<MECHA> 12345678
BRAKE (10000000)
SET AXIS (10000000)
ORIGIN :COMPLETED
```

9) Refer to "5.5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(3) J2 axis origin setting

```
<MECHA> 12345678
BRAKE (01000000)
SET AXIS (11111000)
ORIGIN :NOT DEF
```



Designate the origin setting axis



1) Press the [0] key and then press the [1] key. "1" will display at the 2 position to set the brake release.


2) Confirm the axis for which the brakes are to be released.

- 3) One worker must securely support the upper arm with both hands.
- 4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 5) With both hands, slowly move the J2 axis in - (minus) direction, and contact the axis against the mechanical stopper.


CAUTION For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

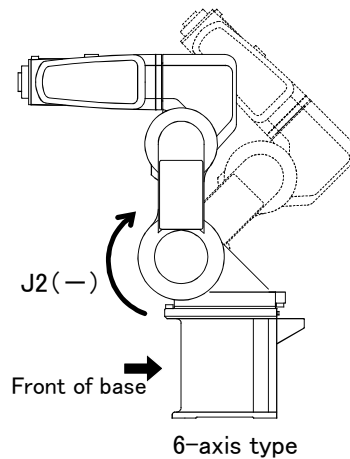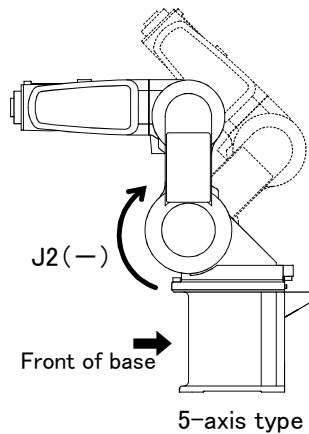

Move the cursor 

```
<MECHA> 12345678
BRAKE (01000000)
SET AXIS (01000000)
ORIGIN :NOT DEF
```




Designate the origin setting axis

6) Press the [↓] key. The cursor will move to SET AXIS.

7) Designate the axis for which the origin is to be set. Set "1" for the 2 axis, and set "0" for the other axes. Then, press [INP]. Next, a confirmation screen will appear.

```
<MECHA>
SET ORIGIN
OK? (1)
1: EXECUTE
```



Set the origin

8) Press the [1] and [INP] keys. The origin posture will be set.

9) Setting of the origin is completed.

```
<MECHA> 12345678
BRAKE (01000000)
SET AXIS (01000000)
ORIGIN :COMPLETED
```

10) Refer to "5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(4) J3 axis origin setting

```
<MECHA> 12345678
BRAKE (00100000)
SET AXIS (11101000)
ORIGIN :NOT DEF
```

```
-B
(J5)
1 DEF
```

Designate the origin setting axis

- 1) Press the [0] key twice and then press the [1] key. "1" will display at the 3 position to set the brake release.
- 2) Confirm the axis for which the brakes are to be released.


- 3) One worker must securely support the fore arm with both hands.
- 4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 5) With both hands, slowly move the J3 axis in + (plus) direction, and contact the axis against the mechanical stopper.

CAUTION

For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION

If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

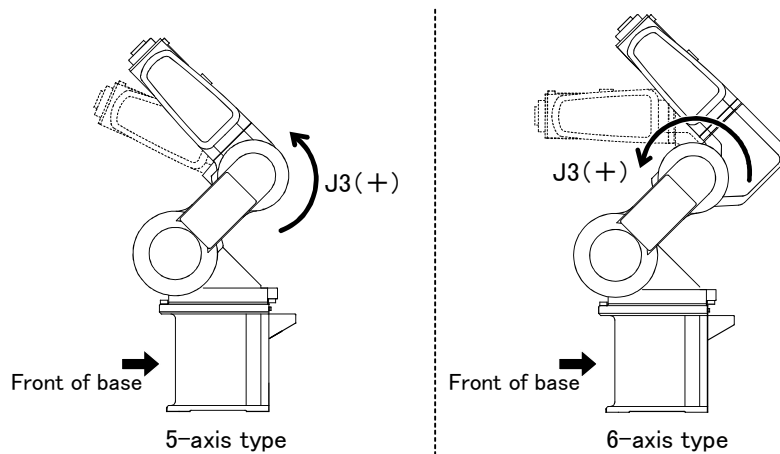

```
RPL
↓
```

Move the cursor

```
<MECHA> 12345678
BRAKE (00100000)
SET AXIS (00100000)
ORIGIN :NOT DEF
```

```
-B (J5) 1 DEF
-C (J6) 0 ABC
INP EXE
```

Designate the origin setting axis

- 6) Press the [↓] key. The cursor will move to AXIS.
- 7) Designate the axis for which the origin is to be set.. Set "1" for the 3 axis, and set "0" for the other axes. Then, press [INP]. Next, a confirmation screen will appear.

```
<MECHA>
SET ORIGIN
OK? (1)
1:EXECUTE
```

```
-B (J5) 1 DEF
INP EXE
```

Set the origin

- 8) Press the [1] and [INP] keys. The origin posture will be set.

```
<MECHA> 12345678
BRAKE (00100000)
SET AXIS (00100000)
ORIGIN :COMPLETED
```

- 9) Setting of the origin is completed.
- 10) Refer to "5.5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.


The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(5) J4 axis origin setting (Only 6-axis type)

<MECHA>	12345678
BRAKE	(00100000)
SET AXIS	(11111000)
ORIGIN	:NOT DEF

-B
(J5)
1 DEF


Designate the origin setting axis

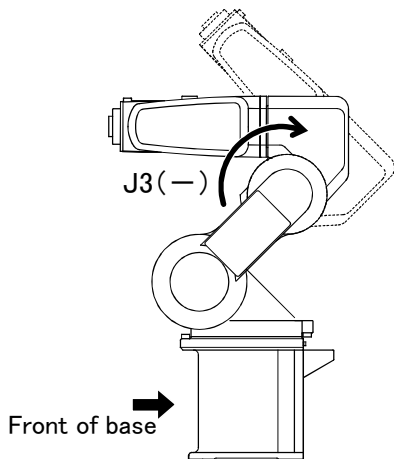

<MECHA>	12345678
BRAKE	(00100000)
SET AXIS	(11111000)
ORIGIN	:NOT DEF

-B
(J5)
1 DEF

Designate the origin setting axis


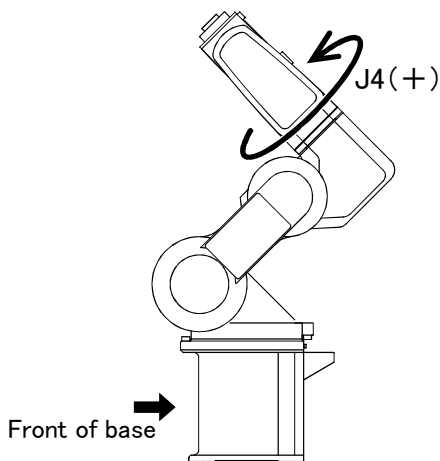


- 1) Before moving the twist axis, move the J3 axis to prevent arm interference.
Press the [0] key twice and then press the [1] key. "1" will display at the 3 position to set the brake release.
- 2) Confirm the axis for which the brakes are to be released.
- 3) One worker must securely support the fore arm with both hands.
- 4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 5) With both hands, slowly move the J3 axis in - (minus) direction. Stop at a position where the arm will not interfere even if the J4 axis is rotated, and then apply the brakes.
Then, set the J4 axis origin.

- 6) Since the RV-3S/3SJ series is not equipped with a brake, move to step "9". In the case of RV-3SB/3SJB series, release the brake. Enter [0] and [1] for 3 and 4 of "BRAKE," respectively, on the T/B screen and specify brake release for the J4 axis only.
- 7) Confirm the axis for which the brakes are to be released.
- 8) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 9) With both hands, slowly move the J4 axis in + (plus) direction, and contact the axis against the mechanical stopper.

CAUTION For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

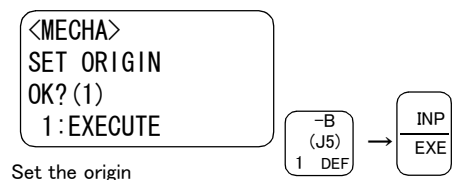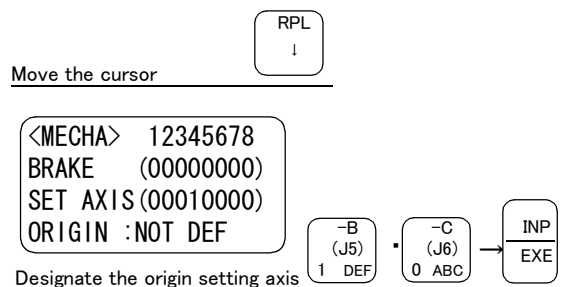

```

<MECHA> 12345678
BRAKE (00000000)
SET AXIS(00010000)
ORIGIN :COMPLETED
  
```

10) Press the [↓] key. The cursor will move to AXIS .

11) Designate the axis for which the origin is to be set.
Set "1" for the 4 axis, and set "0" for the other axes. Then, press [INP]. Next, a confirmation screen will appear.

12) Press the [1] and [INP] keys.
The origin posture will be set.

13) Setting of the origin is completed.

14) Refer to ["5.5.5Recording the origin data"](#) on [page 84](#) in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(6) J5 axis origin setting

```
<MECHA> 12345678
BRAKE (00001000)
SET AXIS(11101000)
ORIGIN :NOT DEF
```

```
-B
(J5)
1 DEF
```

Designate the origin setting axis

- 1) Press the [0] key four times and then press the [1] key. "1" will display at the 5 position to set the brake release.
- 2) Confirm the axis for which the brakes are to be released.


- 3) One worker must securely support the wrist part with both hands.
- 4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 5) With both hands, slowly move the J5 axis in + (plus) direction, and contact the axis against the mechanical stopper.

CAUTION


For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION

If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

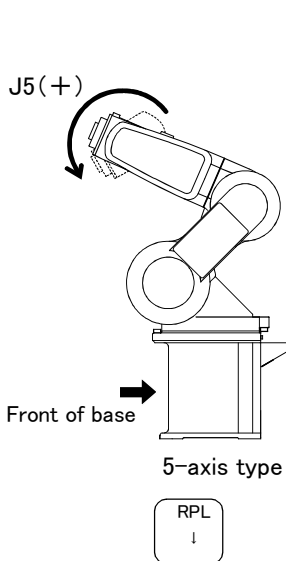

5-axis type

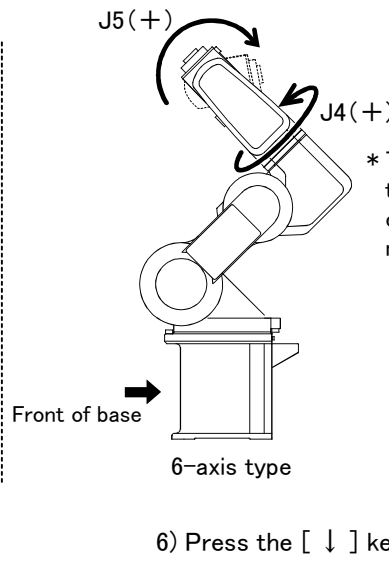

6-axis type

* The J5 axis direction of 6-axis type in the drawing shows the case when the J4 axis is at the mechanical stopper position.

Move the cursor

```
<MECHA> 12345678
BRAKE (00001000)
SET AXIS(00001000)
ORIGIN :NOT DEF
```

```
-B (J5) 1 DEF
-C (J6) 0 ABC
INP EXE
```

Designate the origin setting axis

- 6) Press the [↓] key. The cursor will move to SET AXIS.
- 7) Designate the axis for which the origin is to be set. Set "1" for the 5 axis, and set "0" for the other axes. Then, press [INP]. Next, a confirmation screen will appear.

```
<MECHA>
SET ORIGIN
OK? (1)
1 :EXECUTE
```

```
-B (J5) 1 DEF
INP EXE
```

Set the origin

- 8) Press the [1] and [INP] keys. The origin posture will be set.

```
<MECHA> 12345678
BRAKE (00001000)
SET AXIS(00001000)
ORIGIN :COMPLETED
```

- 9) Setting of the origin is completed.
- 10) Refer to "5.5Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.


The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(7) J6 axis origin setting

```
<MECHA> 12345678
BRAKE (00001000)
SET AXIS(11111000)
ORIGIN :NOT DEF
```

Designate the origin setting axis

```
-B
(J5)
1 DEF
```

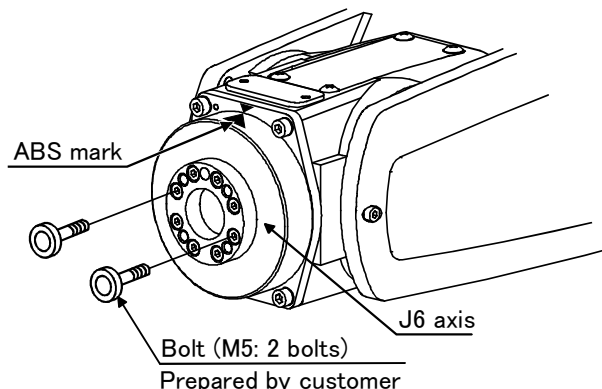

CAUTION The J6-axis dose not have a mechanical stopper. When setting the origin position , do not rotate the axis more than themotion range(± 200 deg.).

```
RPL
↓
```

Move the cursor

```
<MECHA> 12345678
BRAKE (00000000)
SET AXIS(00000100)
ORIGIN :NOT DEF
```

Designate the origin setting axis

```
-B (J5) 1 DEF
-C (J6) 0 ABC
→ INP EXE
```

```
<MECHA>
SET ORIGIN
OK? (1)
1 : EXECUTE
```

Set the origin

```
-B (J5) 1 DEF
→ INP EXE
```

```
<MECHA> 12345678
BRAKE (00000000)
SET AXIS(00000100)
ORIGIN :COMPLETED
```

- 1) Install the bolts (two M5 bolts prepared by customer) at opposing positions on the mechanical interface.
- 2) Since the RV-3S/3SJ series is not equipped with a brake, move to step "5". In the case of RV-3SB/3SJB series, release the brake. Press [0] five times and then press the [1] key. "1," indicating specification of brake release, appears in 6 of "BRAKE."
- 3) Confirm the axis for which the brakes are to be released.
- 4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 5) Hold the bolts mounted in step "1)" above with hands, rotate them slowly and line up the ABS mark of the J6 axis with the ABS mark of the wrist area.
- 6) Press the [↓] key. The cursor will move to "SET AXIS".
- 7) Designate the axis for which the origin is to be set.. Set "1" for the 6 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.
- 8) Press the [1] and [INP] keys. The origin posture will be set.
- 9) Setting of the origin is completed.
- 10) Refer to "5.5.5Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.


◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(8) All axis origin setting

■ In the case of the 5-axis type

- 1) Refer to the paragraphs from "(2)J1 axis origin setting" on page 57 to "(7)J6 axis origin setting" on page 66 above for the description of how to adjust the origins of the J1 to J6 axes. Line up the ABS marks for the J6 axis and move the other axes into contact with the mechanical stoppers. At this point, the robot will have the posture shown below.

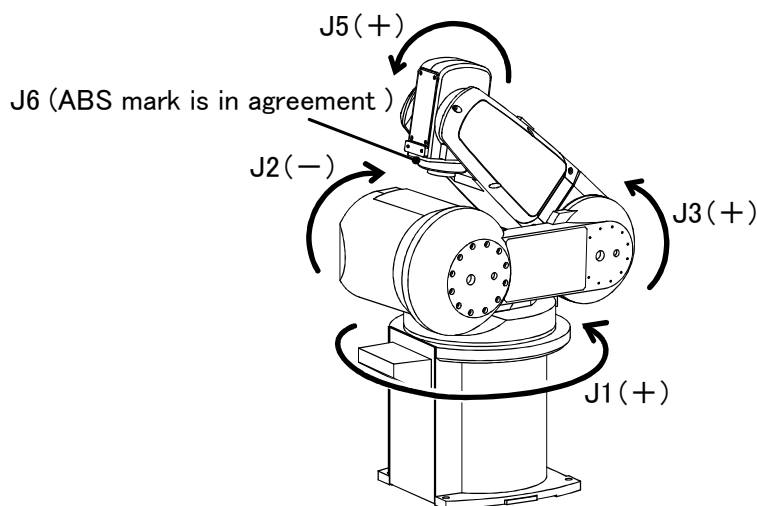

Move the cursor

RPL
↓

```
<MECHA> 12345678
BRAKE (11101000)
SET AXIS(11101100)
ORIGIN :NOT DEF
```

Designate the origin setting axis

-B (J5) 1 DEF -C (J6) 0 ABC INP/EXE

- 2) Press the [↓] key. The cursor will move to "SET AXIS".

```
<MECHA>
SET ORIGIN
OK? (1)
1:EXECUTE
```

Set the origin

-B (J5) 1 DEF INP/EXE

- 3) Designate the axis for which the origin is to be set. Since the 5-axis type does not have the J4 axis, set "0" for "SET AXIS" 4, set 1 for the other axes and press the [INP] key. Next, a confirmation screen will appear.

- 4) Press the [1] and [INP] keys. The origin posture will be set.

```
<MECHA> 12345678
BRAKE (11101000)
SET AXIS(11101100)
ORIGIN :COMPLETED
```

- 5) Setting of the origin is completed.

- 6) Refer to "5.5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.



◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".


■ In the case of the 6-axis type

1) First, adjust the origin positions of the J4, J5 and J6 axes by referring to the paragraphs “(5)J4 axis origin setting (Only 6-axis type)” on page 62, “(6)J5 axis origin setting” on page 64 and “(7)J6 axis origin setting” on page 66 above. Line up the ABS marks for the J6 axis and move the other axes into contact with the mechanical stoppers. At this point, the robot will have the posture shown below.

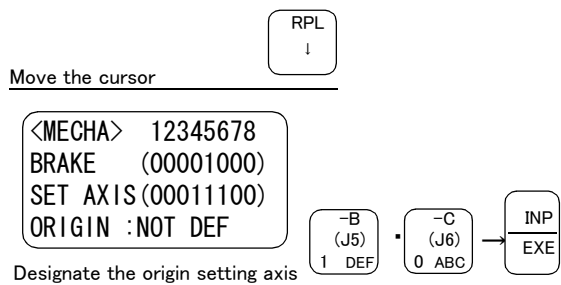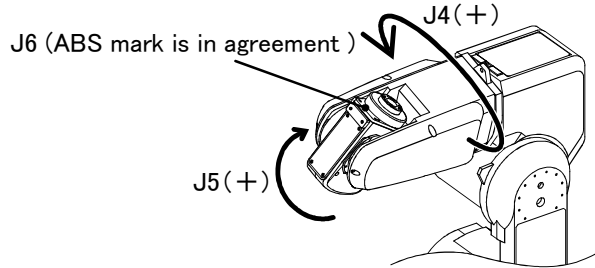


2) Press the [↓] key. The cursor will move to “SET AXIS”.

3) Designate the axis for which the origin is to be set. Set “1” for “SET AXIS” 4 to 6, set 0 for the other axes and press the [INP] key. Next, a confirmation screen will appear.

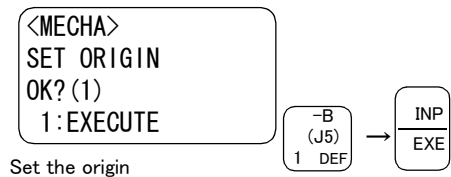

4) Press the [1] and [INP] keys. The origin posture will be set.

5) The origin setting for the axes J4, J5 and J6 is now completed.

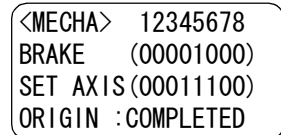


6) Refer to “5.5.5Recording the origin data” on page 84 in this manual, and record the origin data on the origin data seal.


7) Next, set the origins for the J1, J2 and J3 axes.

8) In order to avoid interference with the robot arm, return the J4 and J5 axes to the ABS mark positions. See “Fig. 5-11ABS mark attachment positions” on page 80 for the ABS mark positions.

9) Move the J1, J2 and J3 axes into contact with the mechanical stoppers by referring to “(2)J1 axis origin setting” on page 57, “(3)J2 axis origin setting” on page 58 and “(4)J3 axis origin setting” on page 60.

At this point, the robot will have the posture shown below.

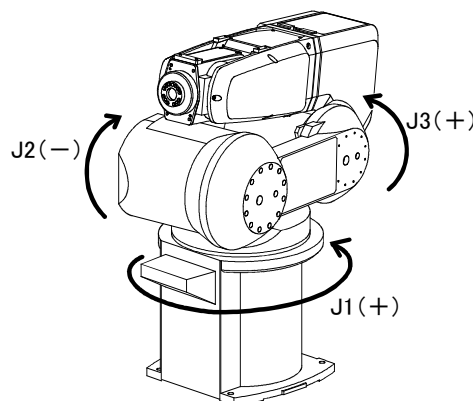

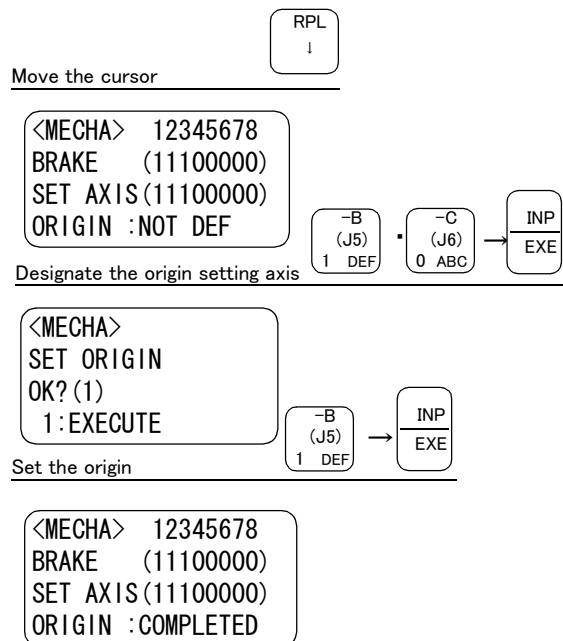

10) Press the [↓] key. The cursor will move to "SET AXIS".

11) Designate the axis for which the origin is to be set. Set "1" for "SET AXIS" 1 to 3, set 0 for the other axes and press the [INP] key. Next, a confirmation screen will appear.

12) Press the [1] and [INP] keys. The origin posture will be set.

13) Setting of the origin is completed.

14) Refer to ["5.5.5 Recording the origin data"](#) on [page 84](#) in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.


The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

5.5.2 Jig method

The procedure of setting the origin with the jig is shown below.

This operation is carried out with the teaching pendant. Set the [MODE] switch on the front of the controller to "TEACH", and set the [ENABLE/DISABLE] switch on the teaching pendant to "ENABLE" to enable the teaching pendant.

The following operation is carried out while lightly pressing the deadman switch on the teaching pendant.

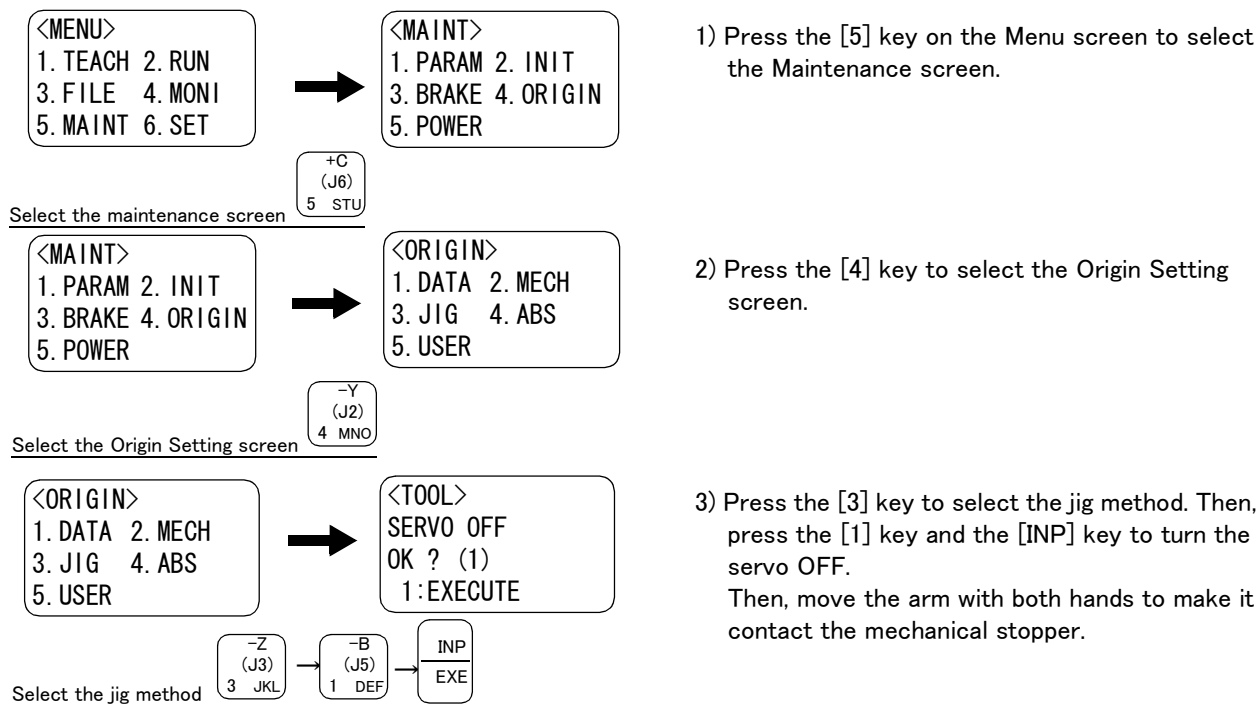

⚠ CAUTION

Here, if an axis is equipped with a brake, release the brake and move the arm with both hands.

To ensure safety, the brake-release procedure described below should always be done by two persons.

(1) J1 axis origin setting

```

<TOOL> 12345678
BRAKE (10000000)
SET AXIS(11111100)
ORIGIN :NOT DEF

```

Designate the origin setting axis

```

-B
(J5)
1 DEF

```

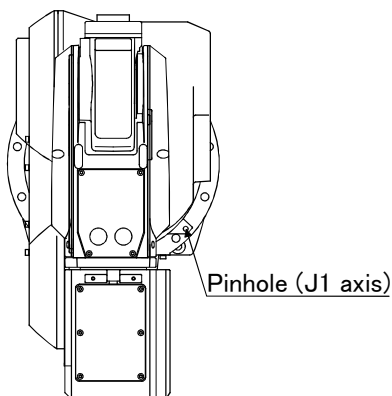


Diagram of the robot viewed from the top

Move the cursor

```

RPL
↓

```

```

<TOOL> 12345678
BRAKE (10000000)
SET AXIS(10000000)
ORIGIN :NOT DEF

```

Designate the origin setting axis

```

-B (J5)  -C (J6)  INP
1 DEF   0 ABC  EXE

```

```

<TOOL>
SET ORIGIN
OK?(1)
1:EXECUTE

```

Set the origin

```

-B (J5)  INP
1 DEF   EXE

```

```

<TOOL> 12345678
BRAKE (10000000)
SET AXIS (10000000)
ORIGIN :COMPLETED

```

- 1) Press the [1] key. "1" will display at the 1 position to set the brake release.
- 2) Confirm the axis for which the brakes are to be released.
- 3) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 4) Move the J1 axis slowly toward the front using both hands. Align the pinhole of the No.1 arm and the pinhole at the base section, feed through the origin jig ($\phi 6$) into the pinholes and fasten.
- 5) Press the [↓] key. The cursor will move to "SET AXIS".
- 6) Designate the axis for which the origin is to be set. Set "1" for the 1 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.
- 7) Press the [1] and [INP] keys. The origin posture will be set.
- 8) Setting of the origin is completed.
- 9) Refer to "5.5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(2) J2 axis origin setting

```
<TOOL> 12345678
BRAKE (01000000)
SET AXIS(11111100)
ORIGIN :NOT DEF
```

```
-B
(J5)
1 DEF
```

Designate the origin setting axis

1) Press the [0] key and then press the [1] key. "1" will display at the 2 position to set the brake release.

2) Confirm the axis for which the brakes are to be released.



3) One worker must securely support the upper arm with both hands.



4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.

5) Slowly rotate the J2 axis in the direction of minus 90° with both hands. Align the pinholes of the No. 1 arm and shoulder, feed through the origin jig (φ8) into the pinholes and fasten.

CAUTION For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

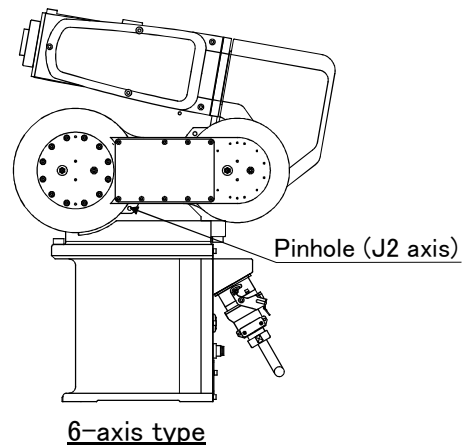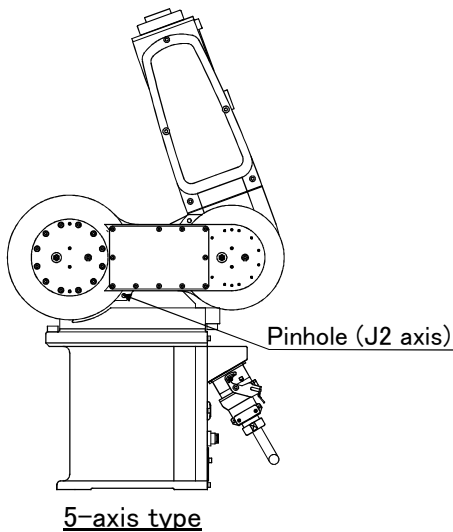

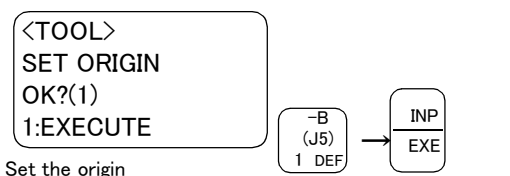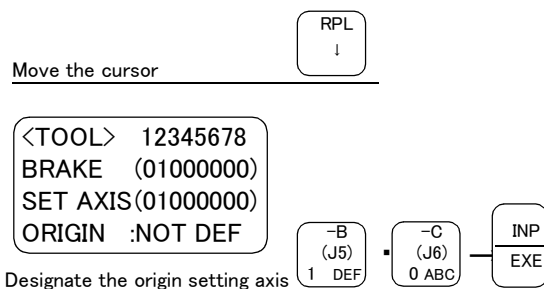

```
<TOOL> 12345678
BRAKE (01000000)
SET AXIS (01000000)
ORIGIN :COMPLETED
```

6) Press the [↓] key. The cursor will move to "SET AXIS".

7) Designate the axis for which the origin is to be set. Set "1" for the 2 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.

8) Press the [1] and [INP] keys.
The origin posture will be set.

9) Setting of the origin is completed.

10) Refer to ["5.5.5Recording the origin data"](#) on [page 84](#) in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(3) J3 axis origin setting

```
<TOOL> 12345678
BRAKE (00100000)
SET AXIS(11111100)
ORIGIN :NOT DEF
```

```
-B
(J5)
1 DEF
```

Designate the origin setting axis

1) Press the [0] key twice and then press the [1] key. "1" will display at the 3 position to set the brake release.

2) Confirm the axis for which the brakes are to be released.



3) One worker must securely support the fore arm with both hands.



4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.

5) Slowly rotate the J3 axis to the plus direction with both hands. Align the pinholes of the No. 1 and No. 2 arm, feed through the origin jig ($\phi 6$) into the pinholes and fasten.

CAUTION For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

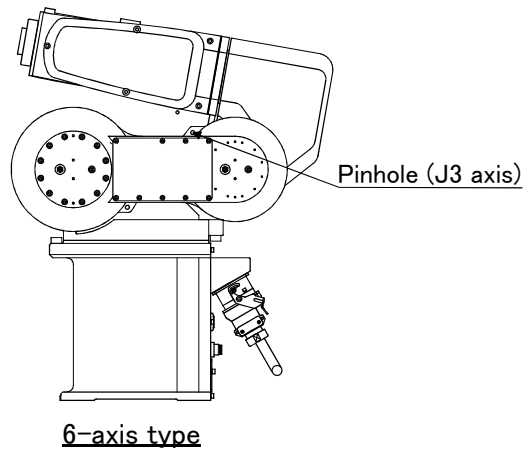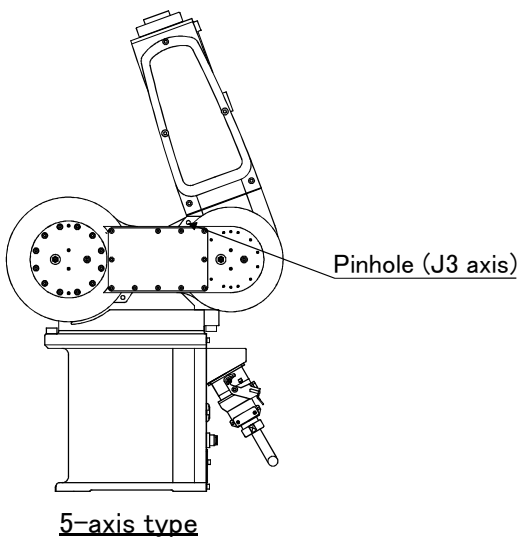

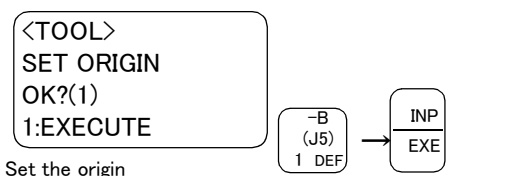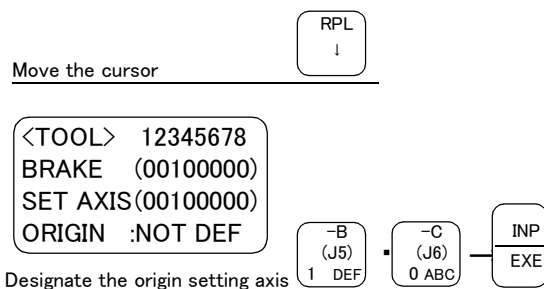

```

<TOOL> 12345678
BRAKE (00100000)
SET AXIS (00100000)
ORIGIN :COMPLETED

```

6) Press the [↓] key. The cursor will move to "SET AXIS".

7) Designate the axis for which the origin is to be set. Set "1" for the 3 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.

8) Press the [1] and [INP] keys.
The origin posture will be set.

9) Setting of the origin is completed.

10) Refer to ["5.5.5Recording the origin data"](#) on [page 84](#) in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.


The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(4) J4 axis origin setting (Only 6-axis type)

<TOOL> 12345678
 BRAKE (00000000)
 SET AXIS(11111100)
 ORIGIN :NOT DEF

-B
(J5)
1 DEF

Designate the origin setting axis

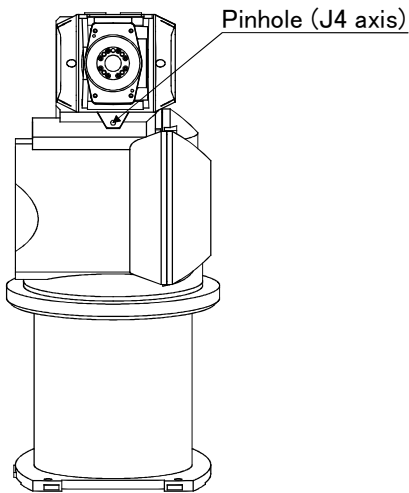

RPL
↓

Move the cursor

<TOOL> 12345678
 BRAKE (00000000)
 SET AXIS(00010000)
 ORIGIN :NOT DEF

-B
(J5)
1 DEF

-C
(J6)
0 ABC

INP
EXE

Designate the origin setting axis

<TOOL>
 SET ORIGIN
 OK?(1)
 1:EXECUTE

-B
(J5)
1 DEF

INP
EXE

Set the origin

<TOOL> 12345678
 BRAKE (00000000)
 SET AXIS (00010000)
 ORIGIN :COMPLETED

- 1) Since the RV-3S/3SJ series is not equipped with a brake, move to step "4". In the case of RV-3SB/3SJB series, release the brake. Press [0] three times and then press the [1] key. "1," indicating specification of brake release, appears in 4 of "BRAKE."
- 2) Confirm the axis for which the brakes are to be released.
- 3) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 4) Slowly rotate the J4 axis to the plus direction with both hands. Align the pinholes of the No. 2 arm and elbow, feed through the origin jig (φ6) into the pinholes and fasten.
- 5) Press the [↓] key. The cursor will move to "SET AXIS".
- 6) Designate the axis for which the origin is to be set. Set "1" for the 4 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.
- 7) Press the [1] and [INP] keys. The origin posture will be set.
- 8) Setting of the origin is completed.
- 9) Refer to "5.5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(5) J5 axis origin setting

```

<TOOL> 12345678
BRAKE (00001000)
SET AXIS(11111100)
ORIGIN :NOT DEF


```

Designate the origin setting axis

```

-B
(J5)
1 DEF

```

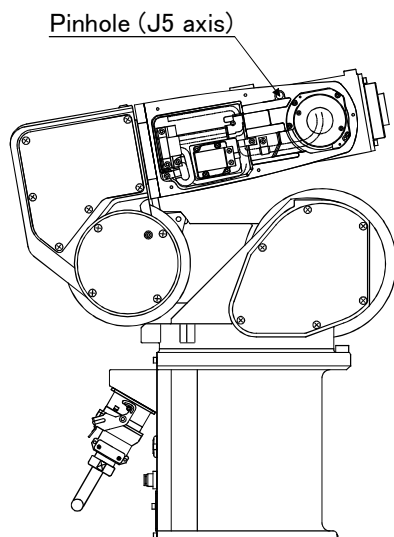

- 1) Remove the No. 2 arm cover A (on the left side facing the front of the robot). There is a pin hole in the cover.
- 2) Press the [0] key four times and then press the [1] key. "1" will display at the 5 position to set the brake release.
- 3) Confirm the axis for which the brakes are to be released.
- 4) One worker must securely support the wrist part with both hands.
- 5) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 6) Slowly rotate the J5 axis in the direction of plus 90° with both hands. Align the pinholes of the No. 2 arm and wrist housing, feed through the origin jig ($\phi 6$) into the pinholes and fasten.

CAUTION

For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

CAUTION

If the T/B [+X] key or the deadman switch is released, the brakes will be applied immediately.

Move the cursor

```

RPL
↓

```

```

<TOOL> 12345678
BRAKE (00001000)
SET AXIS(00001000)
ORIGIN :NOT DEF

```

Designate the origin setting axis

```

-B      -C      INP
(J5)    (J6)    /
1 DEF  0 ABC  / EXE

```

```

<TOOL>
SET ORIGIN
OK?(1)
1:EXECUTE

```

Set the origin

```

-B      INP
(J5)    /
1 DEF  / EXE

```

```

<TOOL> 12345678
BRAKE (00001000)
SET AXIS (00001000)
ORIGIN :COMPLETED

```

- 7) Press the [↓] key. The cursor will move to "SET AXIS".
- 8) Designate the axis for which the origin is to be set. Set "1" for the 5 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.
- 9) Press the [1] and [INP] keys.
The origin posture will be set.
- 10) Setting of the origin is completed.
- 11) Refer to ["5.5.5 Recording the origin data"](#) on [page 84](#) in this manual, and record the origin data on the origin data seal.
- 12) Replace the cover.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key.

The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0".

If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key.

The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

(6) J6 axis origin setting

```

<TOOL> 12345678
BRAKE (00000000)
SET AXIS(11111100)
ORIGIN :NOT DEF


```

Designate the origin setting axis

```

-B
(J5)
1 DEF

```

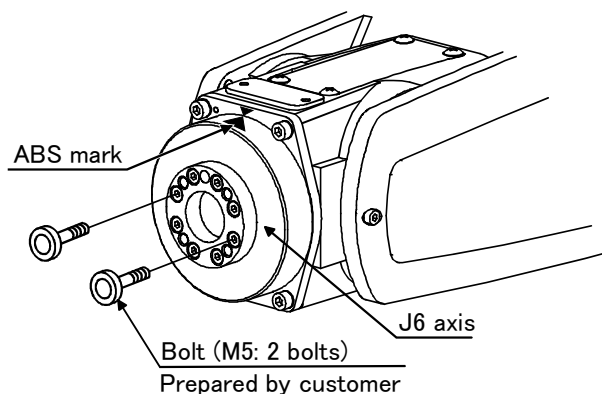**CAUTION**

The J6-axis does not have a mechanical stopper. When setting the origin position, do not rotate the axis more than the motion range (± 200 deg.).

Move the cursor

```

RPL
↓

```

```

<TOOL> 12345678
BRAKE (00000000)
SET AXIS(00000100)
ORIGIN :NOT DEF

```

Designate the origin setting axis

```

-B (J5)  -C (J6)  INP
1 DEF   0 ABC  EXE

```

```

<TOOL>
SET ORIGIN
OK?(1)
1:EXECUTE

```

Set the origin

```

-B (J5)  INP
1 DEF   EXE

```

```

<TOOL> 12345678
BRAKE (00000000)
SET AXIS (00000100)
ORIGIN :COMPLETED

```

- 1) Install the bolts (two M5 bolts prepared by customer) at opposing positions on the mechanical interface.
- 2) Since the RV-3S/3SJ series is not equipped with a brake, move to step "5". In the case of RV-3SB/3SJB series, release the brake. Press [0] five times and then press the [1] key. "1," indicating specification of brake release, appears in 6 of "BRAKE."
- 3) Confirm the axis for which the brakes are to be released.
- 4) While holding down the deadman switch, hold down the [MOVE] + [+X] keys. The brakes will be released while the keys are held down.
- 5) Hold the bolts mounted in step "1" above with hands, rotate them slowly and line up the ABS mark of the J6 axis with the ABS mark of the wrist area.
- 6) Press the [↓] key. The cursor will move to "SET AXIS".
- 7) Designate the axis for which the origin is to be set. Set "1" for the 6 axis, and set "0" for the other axes. Then, press [INP] key. Next, a confirmation screen will appear.
- 8) Press the [1] and [INP] keys.
The origin posture will be set.
- 9) Setting of the origin is completed.
- 10) Refer to "5.5 Recording the origin data" on page 84 in this manual, and record the origin data on the origin data seal.

This completes the setting of the origin with the jig method.

◆◆◆ Releasing the brakes ◆◆◆

To release the brakes, move the cursor to the "BRAKE" axis No. with the [←] or [→] key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [+X] key on the teaching pendant or the deadman switch is pressed while the brakes are released, the brakes will be applied immediately.

◆◆◆ Origin setting axis designation ◆◆◆

Move the cursor to the "SET AXIS" axis No. in the origin setting with the [←] or [→] key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".

5.5.3 ABS origin method

When the origin setting of the robot is performed for the first time, this product records the angular position of the origin within one rotation of the encoder as the offset value. If the origin setting is performed according to the ABS origin method, this value is used to suppress variations in the origin setting operations and to reproduce the initial origin position accurately.

This operation is carried out with the teaching pendant. Set the [MODE] switch on the front of the controller to "TEACH", and set the [ENABLE/DISABLE] switch on the teaching pendant to "ENABLE" to enable the teaching pendant.

First, set to the ABS mark arrow of the axis for which the origin is to be set with jog operation. This can be set for all axes simultaneously or each axis independently.

When setting the ABS mark, always view the operations from the mark, and set at the end of the triangular mark. The positions where the ABS mark is attached are shown in Fig. 5-28. Refer to "(1)JOINT jog operation" on page 22" for details on the jog operation.

Note that if the ABS marks are peeled off, the positions can be matched using the following alternative methods.

- (1) Axes J1 to J5 ^{Note)}..... Match the pin holes described in "5.5.2Jig method" on page 70 above.
- (2) Axis J5 ^{Note)} and J6..... Match the ruling lines of the ABS mark mounting position surfaces.

Note) Both methods (1) and (2) above can be used for the J5 axis. When adjusting the position using method (2), there is no need to remove and install the cover.

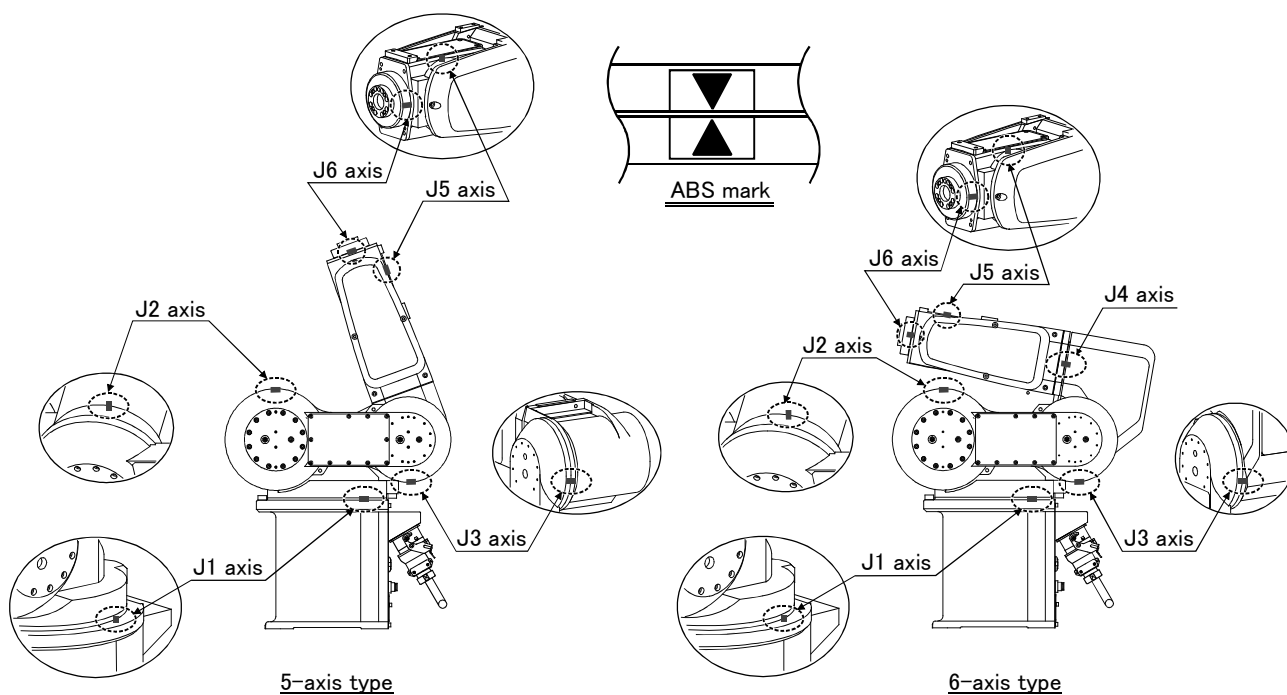


Fig.5-11 : ABS mark attachment positions

The procedures for setting the origin with the ABS method are explained below.

(1) Select the T/B

```
<MENU>
1.TEACH 2.RUN
3.FILE  4.MONI
5.MAINT 6.SET
```



```
<MAINT>
1.PARAM 2.INIT
3.BRAKE 4.ORIGIN
5.POWER
```

1) Press the [5] key on the Menu screen to select the Maintenance screen.

```
+C
(J6)
5 STU
```

Select the Maintenance screen

```
<MAINT>
1.PARAM 2.INIT
3.BRAKE 4.ORIGIN
5.POWER
```



```
<ORIGIN>
1.DATA  2.MECH
3.JIG   4.ABS
5.USER
```

2) Press the [4] key to select the Origin Setting screen.

```
-Y
(J2)
4 MNO
```

Select the Origin Setting screen

```
<ORIGIN>
1.DATA  2.MECH
3.JIG   4.ABS
5.USER
```



```
<ABS>
SERVO OFF
OK ? (1)
1:EXECUTE
```

3) Press the [4] key to select the ABS method. After that, press the [1] key and [INP] key to turn the servo OFF.

```
-Y (J2)  -B (J5)  INP
4 MNO    1 DEF  EXE
```

Select the ABS method

```
<ABS> 12345678
BRAKE(00000000)
SET AXIS (11110000)
ORIGIN :NOT DEF
```



```
<ABS>
SERVO OFF
OK ? (1)
1:EXECUTE
```

4) Press the [↓] key, and input "1" for the axis to set the origin in "SET AXIS". Press the [INP] key to display the Confirmation screen.

```
RPL  -B (J5)  INP
1    1 DEF  EXE
```

Execute the origin setting (confirmation)

```
<ABS>
SET ORIGIN
OK?(1)
1:EXECUTE
```



```
<ABS> 12345678
BRAKE (00000000)
SET JIG (11110000)
ORIGIN :NOT DEF
```

5) Press the [1] key and then press the [INP] key. The origin will be set.

```
-B (J5)  INP
1 DEF  EXE
```

Execute the origin setting

This completes the setting of the origin with the ABS method.

5.5.4 User origin method

CAUTION Before using this method, the origin must be set with the other method. The setting method is explained in "5.5.4 User origin method" on page 82.


The procedure for setting the origin with the user origin method is explained below. This operation is carried out with the teaching pendant. Set the [MODE] switch on the front of the controller to "TEACH", and set the [ENABLE/DISABLE] switch on the teaching pendant to "ENABLE" to enable the teaching pendant. The operation method is shown below.

When setting the origin for the first time using this method, carry out the operations in order from step 1). For the second and following time, move the robot arm to the user origin position with jog operation, and accurately position all axes. Then start the procedure from step 4).


- 1) Determine the user origin position
Move the robot to the position to be set as the origin with jog operation. Refer to "2.4 Confirming the operation" on page 19 for details on the jog operation.

CAUTION Choose the user origin position as the position where it doesn't move by the gravity. This position is left as a guideline to position all axes with jog operation when setting the origin again with this method.


- 2) Enter the JOINT jog mode, and display the joint coordinates on the teaching pendant screen. Record the value of the axis for which the origin is to be set.
- 3) Input the value recorded in the "user designated origin parameter (USRORG)".
The parameter details and input methods are described in the separate "Instruction Manual/Detailed Explanation of Functions and Operations". Refer to that manual and input the user designated origin position.

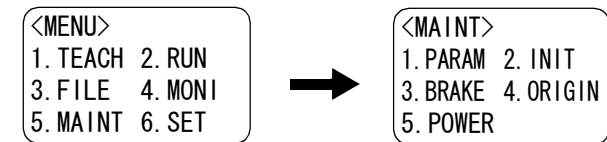


Display the maintenance screen

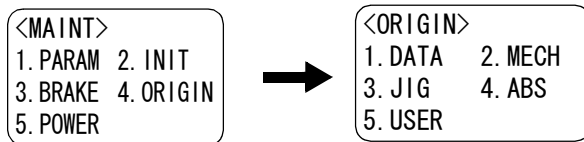


Display the origin setting method selection screen

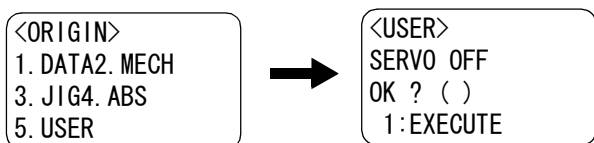


- 4) Next, set the origin.
Press the [MENU] key to display the Menu screen.
- 5) Press the [5] key to display the Maintenance screen.
- 6) Press the [4] key to select the Origin Setting screen.
- 7) Press the [5] key to select the user origin method.
Then, press [1] key and [INP] key to turn OFF the servo.

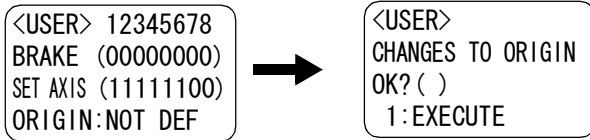


8) Press the [↓] key, and input "1" for the axis for which the origin is to be set. Press the [INP] key to display the Confirmation screen.



Designate the origin setting axis

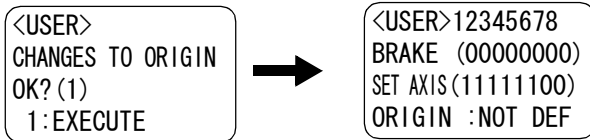

9) Press the [1] key and then the [INP] key. The origin will be set



Set the origin

This completes the setting of the origin with the user origin method.

5.5.5 Recording the origin data

When the origin has been set with the jig method, record that origin data on the origin data label. With this, the origin can be set with the origin data input method the next time.

Confirm the origin data on the teaching pendant screen (origin data input screen). The origin data label is enclosed with the arm or attached on the back of the shoulder cover A.

The teaching pendant operation method and shoulder cover A removal method for confirming the origin data is the same as the methods for setting the origin with the origin data input method. Refer to [“2.3.2 Setting the origin with the origin data input method” on page 14](#), and write the origin data displayed on the teaching pendant onto the origin label.

(1) Confirming the origin data label

Remove the shoulder cover A.

Refer to [“5.3.2 Installing/removing the cover” on page 45](#), and remove the shoulder cover A.

(2) Confirming the origin data

Confirm the value displayed on the teaching pendant's Origin Data Input screen.

Refer to [“2.3.2 Setting the origin with the origin data input method”](#) [“\(5\) Inputting the origin data”](#), and display the Origin Data Input screen on the teaching pendant display screen.

(3) Recording the origin data

Write the origin data displayed on the teaching pendant to the origin data label attached to the back of the shoulder cover A. Refer to [“Fig. 2-9 Origin data label \(an example\)” on page 14](#), and [“Fig. 2-10 Correspondence of origin data label and axis” on page 17](#) for details on the origin data label.

(4) Installing the cover

Install the shoulder cover A removed in step [“\(1\) Confirming the origin data label”](#) above.

Refer to [“5.3.2 Installing/removing the cover” on page 45](#), and replace the shoulder cover A.

This completes the recording of the origin data.

6 Appendix

Appendix 1 : Configuration flag

The configuration flag indicates the robot posture.

For the 6-axis type robot, the robot hand end is saved with the position data configured of X, Y, Z, A, B and C. However, even with the same position data, there are several postures that the robot can change to. The posture is expressed by this configuration flag, and the posture is saved with FL1 in the position constant (X, Y, Z, A, B, C) (FL1, FL2).

The types of configuration flags are shown below.

(1) RIGHT/LEFT

P is center of flange in comparison with the plane through the J1 axis vertical to the ground.

Q is center of J5 axis rotation in comparison with the plane through the J1 axis vertical to the ground.

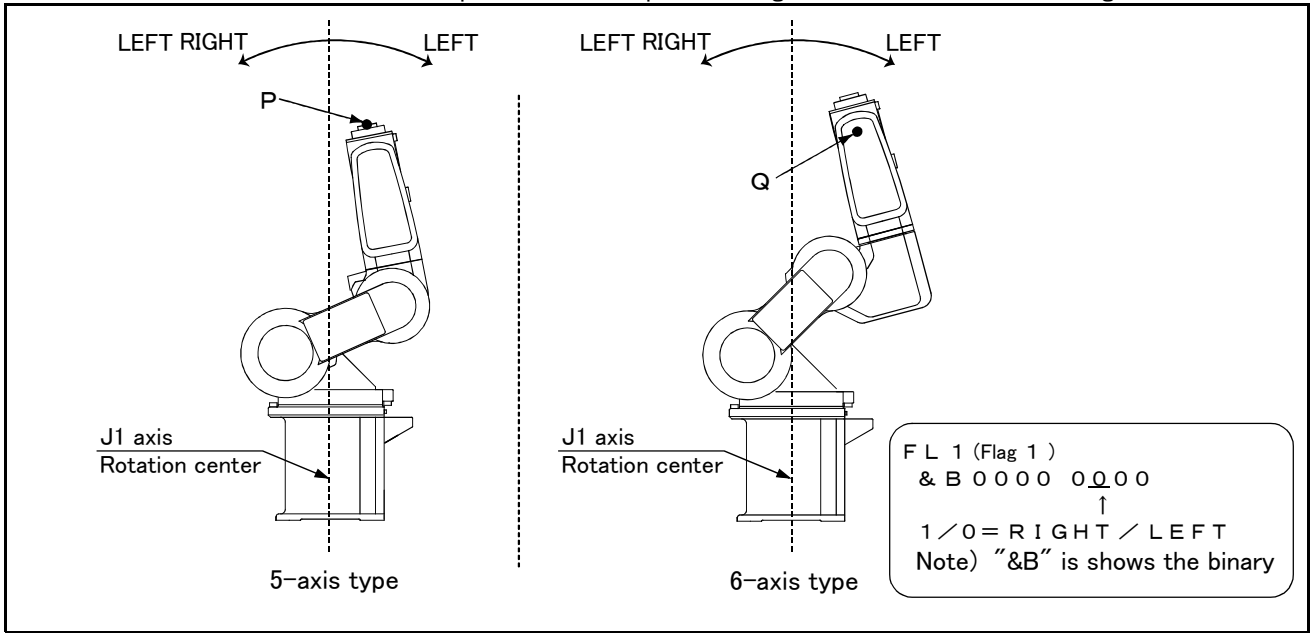


Fig.6-1 : Configuration flag (RIGHT/LEFT)

(2) ABOVE/BELOW

Q is center of J5 axis rotation in comparison with the plane through both the J3 and the J2 axis.

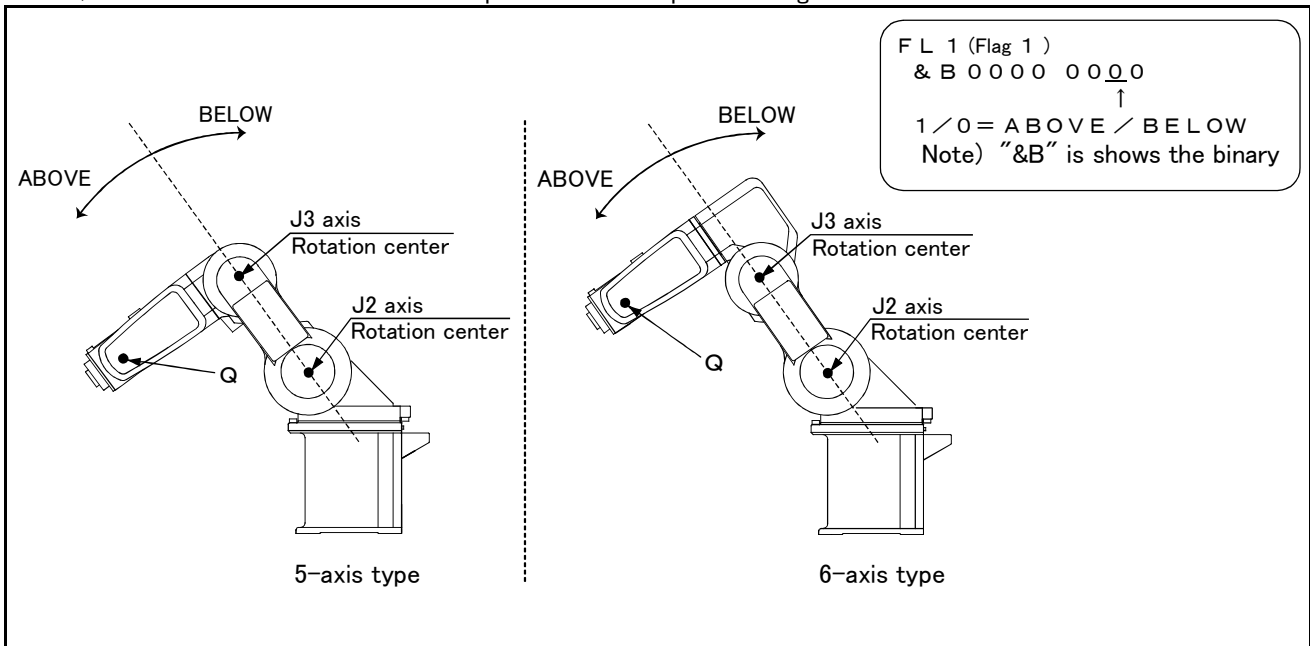


Fig.6-2 : Configuration flag (ABOVE/BELOW)

(3) NONFLIP/FLIP (6-axis robot only.)

This means in which side the J6 axis is in comparison with the plane through both the J4 and the J5 axis.

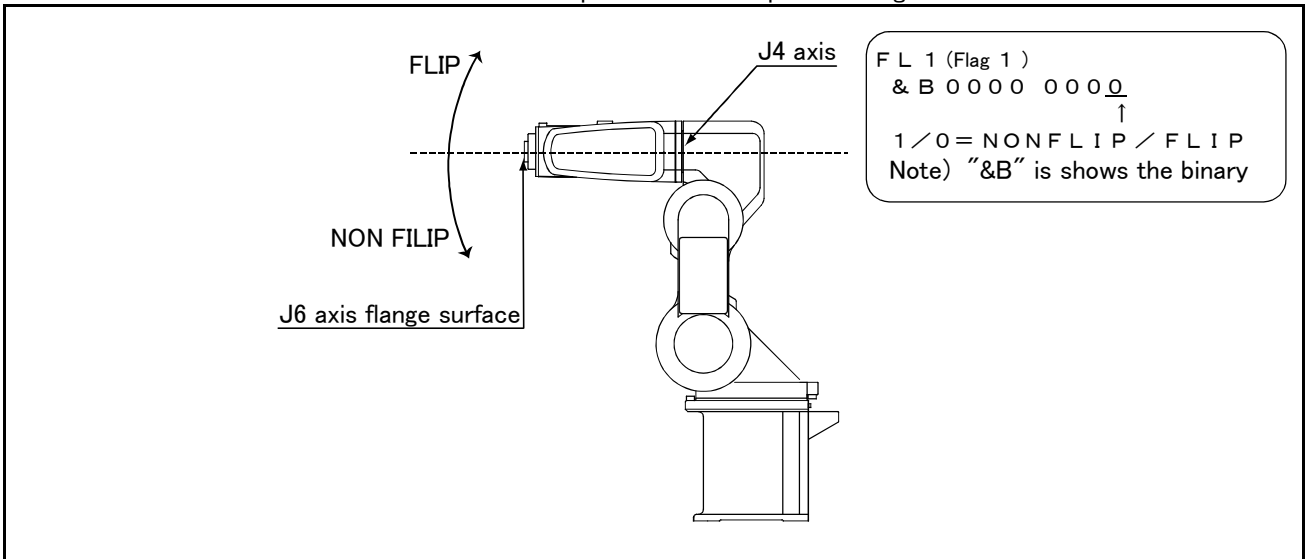


Fig.6-3 : Configuration flag (NONFLIP/FLIP)

HEADQUARTERS

MITSUBISHI ELECTRIC EUROPE
EUROPE B.V.
German Branch
Gothaer Straße 8
D-40880 Ratingen
Phone: +49 (0)2102 486-0
Fax: +49 (0)2102 486-1120
e mail: megfamail@meg.mee.com

MITSUBISHI ELECTRIC FRANCE
EUROPE B.V.
French Branch
25, Boulevard des Bouvets
F-92741 Nanterre Cedex
Phone: +33 1 55 68 55 68
Fax: +33 1 55 68 56 85
e mail: factory.automation@fra.mee.com

MITSUBISHI ELECTRIC IRELAND
EUROPE B.V.
Irish Branch
Westgate Business Park, Ballymount
IRL-Dublin 24
Phone: +353 (0) 1 / 419 88 00
Fax: +353 (0) 1 / 419 88 90
e mail: sales.info@meir.mee.com

MITSUBISHI ELECTRIC ITALY
EUROPE B.V.
Italian Branch
Via Paracelso 12
I-20041 Agrate Brianza (MI)
Phone: +39 (0)39 / 60 53 1
Fax: +39 (0)39 / 60 53 312
e mail: factory.automation@it.mee.com

MITSUBISHI ELECTRIC SPAIN
EUROPE B.V.
Spanish Branch
Carretera de Rubí 76-80
E-08190 Sant Cugat del Vallés (Barcelona)
Phone: +34 9 3 / 565 3131
Fax: +34 9 3 / 589 2948
e mail: industrial@sp.mee.com

MITSUBISHI ELECTRIC UK
EUROPE B.V.
UK Branch
Travellers Lane
GB-Hatfield Herts. AL10 8 XB
Phone: +44 (0)1707 / 27 61 00
Fax: +44 (0)1707 / 27 86 95
E-mail: automation@meuk.mee.com

MITSUBISHI ELECTRIC CORPORATION JAPAN
Office Tower "Z" 14 F
8-12,1 chome, Harumi Chuo-Ku
Tokyo 104-6212
Phone: +81 3 6221 6060
Fax: +81 3 6221 6075

MITSUBISHI ELECTRIC USA
AUTOMATION
500 Corporate Woods Parkway
Vernon Hills, IL 60061
Phone: +1 847 / 478 21 00
Fax: +1 847 / 478 22 83

EUROPEAN REPRESENTATIVES

GEVA AUSTRIA
Wiener Straße 89
AT-2500 Baden
Phone: +43 (0)2252 / 85 55 20
Fax: +43 (0)2252 / 488 60
e mail: office@geva.at

Getronics b.v. BELGIUM
Control Systems
Pontbeeklaan 43
BE-1731 Asse-Zellik
Phone: +32 (0)2 / 4 67 17 51
Fax: +32 (0)2 / 4 67 17 45
e mail: info.automation@getronics.com

INEA CR d.o.o. CROATIA
Drvinje 63
HR-10000 Zagreb
Phone: +385 (0)1/ 36 67 140
Fax: +385 (0)1/ 36 67 140
e mail: —

AutoCont CZECH REPUBLIC
Control Systems s.r.o.
Nemocnicni 12
CZ-70200 Ostrava 2
Phone: +420 (0)69 / 6152 111
Fax: +420 (0)69 / 6152 562
e mail: consys@autocont.cz

Kocks Ostrava s.r.o. CZECH REPUBLIC
Ul. Jezdiste 808
CZ-72000 Ostrava Hrabova
Phone: +420 596 / 735 095
Fax: +420 596 / 782 707
e mail: —

louis poulsen DENMARK
industri & automation
Geminivej 32
DK-2670 Greve
Phone: +45 (0)43 / 95 95 95
Fax: +45 (0)43 / 95 95 91
e mail: lpia@lpmail.com

Beijer Electronics OY FINLAND
Ansatie 6a
FIN-01740 Vantaa
Phone: +358 (0)9 / 886 77 500
Fax: +358 (0)9 / 886 77 555
e mail: info@beijer.fi

Kouvalias GREECE
Industrial Robots
25, El. Venizelou Ave.
GR-17671 Kallithea
Phone: +302 (0)10 / 958 92 43
Fax: +302 (0)10 / 953 65 14
e mail: robots@acci.gr

Axicon Automatika Kft. HUNGARY
Reitter F. U. 132
HU-1131 Budapest
Phone: +36 (0)1 / 412-0882
Fax: +36 (0)1 / 412-0883
e mail: office@axicon.hu

EUROPEAN REPRESENTATIVES

Meltrade Automatika Kft. HUNGARY
55, Harmat St.
HU-1105 Budapest
Phone: +36 (0)1 / 2605 602
Fax: +36 (0)1 / 2605 602
e mail: office@meltrade.hu

Getronics NETHERLANDS
Industrial Automation B.V.
Donauweg 2 B
NL-1043 AJ Amsterdam
Phone: +31 (0)20 / 587 6700
Fax: +31 (0)20 / 587 6839
e mail: info.gia@getronics.com

Beijer Electronics AS NORWAY
Teglverksveien 1
NO-3002 Drammen
Phone: +47 (0)32 / 24 30 00
Fax: +47 (0)32 / 84 85 77
e mail: info@beijer.no

MPL Technology Sp. z o.o. POLAND
ul. Sliczna 36
PL-31-444 Kraków
Phone: +48 (0)12 / 632 28 85
Fax: +48 (0)12 / 632 47 82
e mail: krakow@mpl.pl

ACP Autocomp a.s. SLOVAKIA
Chalupkova 7
SK-81109 Bratislava
Phone: +421 (02)5292 2254
Fax: +421 (02)5292 2248
e mail: info@acp-autocomp.sk

INEA d.o.o. SLOVENIA
Stegne 11
SI-1000 Ljubljana
Phone: +386 (0)1- 513 8100
Fax: +386 (0)1- 513 8170
e mail: inea@inea.si

Beijer Electronics AB SWEDEN
Box 426
S-20124 Malmö
Phone: +46 (0)40 / 35 86 00
Fax: +46 (0)40 / 35 86 02
e mail: info@beijer.se

ECONOTEC AG SWITZERLAND
Postfach 282
CH-8309 Nürensdorf
Phone: +41 (0)1 / 838 48 11
Fax: +41 (0)1 / 838 48 12
e mail: info@econotec.ch

GTS TURKEY
Darülaceze Cad. No. 43A Kat. 2
TR-80270 Okmeydani-Istanbul
Phone: +90 (0)212 / 320 1640
Fax: +90 (0)212 / 320 1649
e mail: gts@turk.net

EURASIAN REPRESENTATIVES

ELEKTROSTYLE RUSSIA
ul. Garschina 11
RU-140070 Moscow Oblast
Phone: +7 095 557-9756
Fax: +7 095 746-8880
e mail: mjuly@elektrostyle.ru

ELEKTROSTYLE RUSSIA
Krasnij Prospekt 220-1, Office 312
RU-630049 Novosibirsk
Phone: +7 3832 / 10 66 18
Fax: +7 3832 / 10 66 26
e mail: elo@elektrostyle.ru

ICOS RUSSIA
Ryazanskij Prospekt, 8A, Office 100
RU-109428 Moscow
Phone: +7 095 232-0207
Fax: +7 095 232-0327
e mail: mail@icos.ru

MIDDLE EAST REPRESENTATIVE

ILAN & GAVISH LTD ISRAEL
Automation Service
24 Shenkar St., Kiryat Arie
IL-49001 Petach-Tiqva
Phone: +972 (0) 3 / 922 18 24
Fax: +972 (0) 3 / 924 07 61
e mail: iandg@internet-zahav.net

AFRICAN REPRESENTATIVE

CBI Ltd SOUTH AFRICA
Private Bag 2016
ZAF-1600 Isando
Phone: +27 (0) 11 / 928 2000
Fax: +27 (0) 11 / 392 2354
e mail: cbi@cbi.co.za