

# GOT1000

GT1150/GT1155 to FR-E700 Inverter

Start-up Guide





# About this Manual

The texts, illustrations, diagrams and examples in this manual are only intended as aids to help explain the functioning, operation, use and programming of the GOT1000 terminals in combination with an FR-E700 Inverter.

If you have any questions regarding the installation and operation of the hardware described in this manual, please do not hesitate to contact your sales office or one of your Mitsubishi distribution partners.



## CAUTION:

*Do not attempt to install, operate, maintain or inspect the graphical operator terminal or the inverter until you have read through the corresponding instruction manual carefully and can use the equipment correctly. Do not use the inverter until you have a full knowledge of the equipment, safety information and instructions.*

You can also obtain information and answers to frequently asked questions from our Mitsubishi website under [www.mitsubishi-automation.com](http://www.mitsubishi-automation.com).

No part of this manual may be reproduced, copied, stored in any kind of information retrieval system or distributed without the prior express written consent of MITSUBISHI ELECTRIC.

MITSUBISHI ELECTRIC reserves the right to change the specifications of its products and/or the contents of this manual at any time and without prior notice.

© Version A November 2008

## Manual References:

Refer to the following manuals for more detailed explanations. For any further questions, please contact your local Mitsubishi Product Provider.

- GOT1000 Series Connection Manual 3/3 (SH(NA)-080532ENG)
- FR-E700 Instruction Manual Inverter (IB(NA)-0600336ENG-B)



## CAUTION:

*This Start-up Guide includes a brief summary of the main specifications of the GOT1000 graphic operation terminals and the FR-E700 series of inverters, which should be sufficient to enable experienced users to install and configure the units. For further information on the operation terminals and the inverters please refer to the above mentioned manuals.*

*Please observe also the safety precautions given in the manuals mentioned above.*



# Table of Contents

<b>1 Overview</b> .....	<b>1</b>
<b>2 Hardware Introduction</b> .....	<b>1</b>
<b>3 Cabling</b> .....	<b>2</b>
3.1 GOT and Inverter Wiring Diagrams .....	3
3.3 Programming Cables .....	4
<b>4 GT Designer 2</b> .....	<b>5</b>
<b>5 Inverter Settings</b> .....	<b>7</b>
<b>6 Station Setting</b> .....	<b>7</b>
6.1 Indirect Specification .....	8
<b>7 Confirm Communication</b> .....	<b>8</b>



## 1 Overview

This document provides a simple guide to setting up the GT1150 or GT1155 Graphic Operation Terminal (GOT) hardware and firmware for use with an FR-E700 Inverter.

## 2 Hardware Introduction

The GT1150 and GT1155 are GOT1000 Series touch panel interfaces with three built-in communication channels used for capturing user input to a system. They also have Compact Flash card interfaces and a Reset button built-in.

The models that are connectable to FREQROL inverters are identified in the table below::

Model		Display Size	Display Type	Comm. IF	Power
GT1150	-QLBD	5.7" 320 x 240 dot	STN, monochrome, 16 gray-scales	RS232 RS422 USB (for PC Commu- nication)	24 V DC
GT1155	-QSBD		STN, 256 colors		
	-QTBD		TFT, 256 colors		

**Tab. 1:** Specifications of the operator terminals




For new GT1150 and GT1155 units, included in the box should be the following items:

- (A) GT1150/GT1155
- (B) A sealed plastic bag containing
  - 1 rubber Dust/Water-Proof Packing
  - 4 metal Mounting Brackets
  - 4 M4 Mounting Screws

## 3 Cabling


### Power

All GT1150/GT1155 GOTs require an external 24V DC power supply to be connected to the Power Terminals on the back of the GOT.

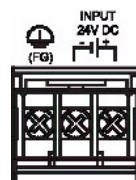


### Communication

For the GT1150/GT1155 terminal to communicate with the inverter, a communication cable is required. The type of cable used is dependent on the number of inverters used within the system, examples of which are illustrated below.

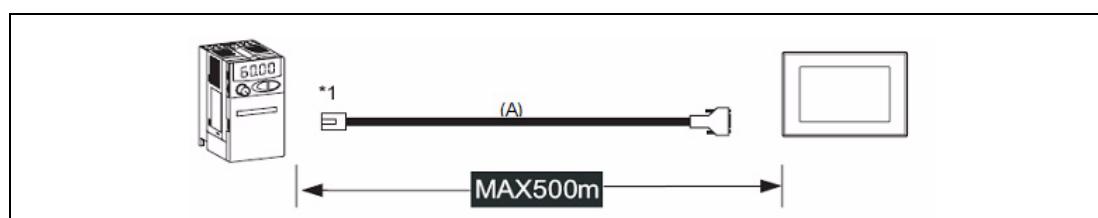

**Fig. 1:** One inverter connection

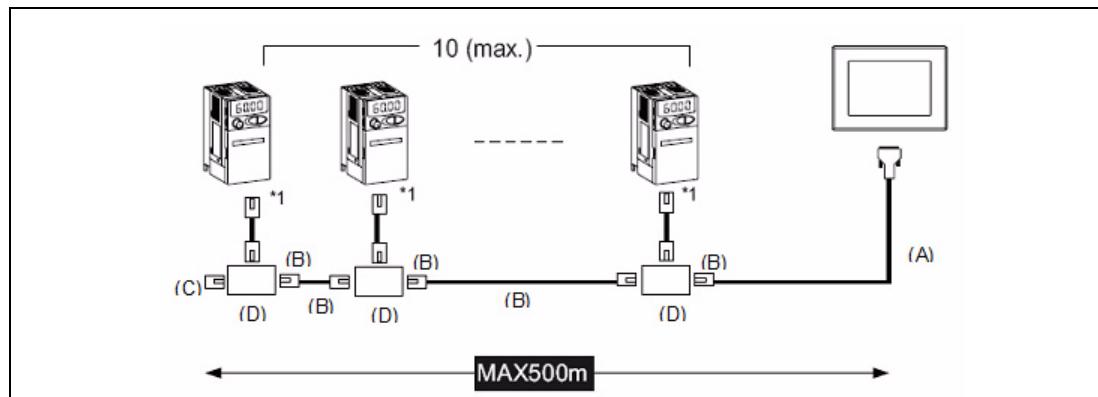

**Fig. 2:** Multi-drop connection


\*1 Connect to the PU port of the inverter.

Description to Fig. 1 and Fig. 2:



	A	B	C	D
Detailed view				
Standard	RS422	RS422	RS422	RS422
Meaning	Between inverter and GOT	Between distributor and inverter or between distributors	Terminating resistor	Distributor

For an explanation of the communication cables please refer to the following section 3.1.



### 3.1 GOT and Inverter Wiring Diagrams

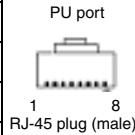GOT side		Cable connection and signal direction	Inverter side or distributor side (Modular connector)		
Signal name	Pin No.		Pin No.	Signal name	Pin layout <sup>①</sup>
SDA	1		3	RDA	 <p>PU port RJ-45 plug (male)</p>
SDB	6		6	RDB	
RDA	2		5	SDA	
RDB	7		4	SDB	
SG	5		1	SG	
RSA	3		2	P5S	
RSB	8		7	SG	
CSA	4		8	P5S	
CSB	9				

Tab. 2: RS-422 connection between inverter and GOT (Cable type A)

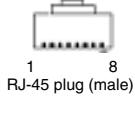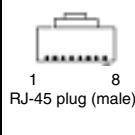Distributor side (Modular connector)			Cable connection and signal direction	Inverter side or distributor side (Modular connector)		
Pin layout <sup>①</sup>	Signal name	Pin No.		Pin No.	Signal name	Pin layout <sup>①</sup>
 <p>PU port RJ-45 plug (male)</p>	SDA	5		5	SDA	 <p>PU port RJ-45 plug (male)</p>
	SDB	4		4	SDB	
	RDA	3		3	RDA	
	RDB	6		6	RDB	
	P5S	2		2	P5S	
	P5S	8		8	P5S	
	SG	1		1	SG	

Tab. 3: RS-422 connection distributor and inverter (Cable type B)

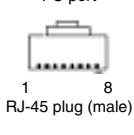Distributor side			Cable connection and signal direction
Pin layout <sup>①</sup>	Signal name	Pin No.	
 <p>PU port RJ-45 plug (male)</p>	SDA	5	 <p>Terminating resistor 100Ω 1/2W</p>
	SDB	4	
	RDA	3	
	RDB	6	
	P5S	2	
	P5S	8	
	SG	1	


Tab. 4: RS-422 connection for mounting a terminating resistor (Cable type C)

① The connector figure shows the engagement face.

### 3.2 Programming Cables

The GT1150 and GT1155 come pre-installed with an OS only and without any project data. To download a project from a PC running GT Designer2 to the GOT, a programming cable is required to connect the PC to one of the communication interfaces.

For a new out-of-the-box GOT, the easiest way to connect to the GOT is through the USB Mini-B type port on the front panel with a standard USB cable. After setting up the GOT communication settings from the GOT main menu or with GT Designer2, the RS-422 and RS-232C interfaces can also be used for program transfer. Connection via USB is shown below.

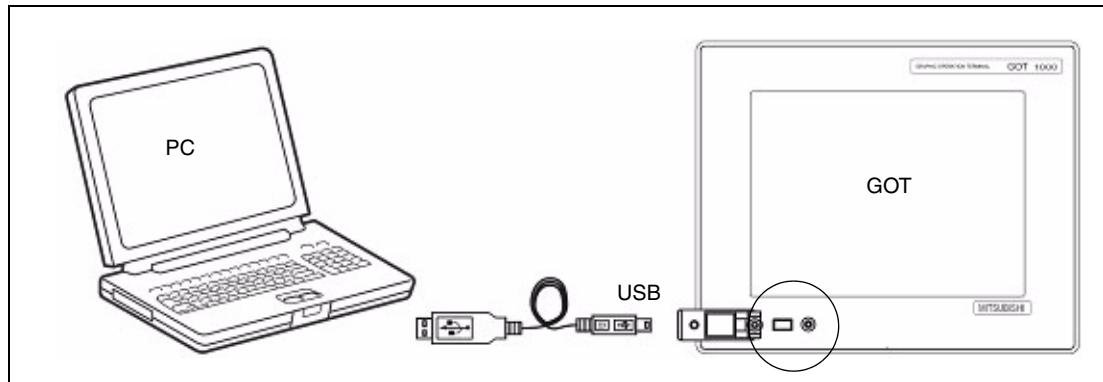

**Fig. 3:** Connection diagram

**4**


# GT Designer 2

**(Version 2.73 or later)**

To make sure the GT1150/GT1155 GOT is able to use the latest functions and features, it is the responsibility of the user to check and update the firmware (Standard monitor OS) of the GOT.


Launch the latest copy of GT Designer2 and start a new project for the GOT model “GT11\*\*-Q(320x240)” with the “FREQROL500/700” Inverter Type. Select **Yes** to set the Communication Setting and make sure the Standard I/F-1 CH No. is set to 1 before selecting **OK**. The “Screen Property” window that pops up for making a new screen can be either canceled or accepted for the following steps.

Go to the “Communication” menu and select “To/From GOT” to bring up the “Communicate with GOT” window. Go to the “Communication configuration” tab and select **USB**. With the GOT power ON, use the **Test** button to verify that the PC and GOT can communicate properly then turn the GOT power OFF.

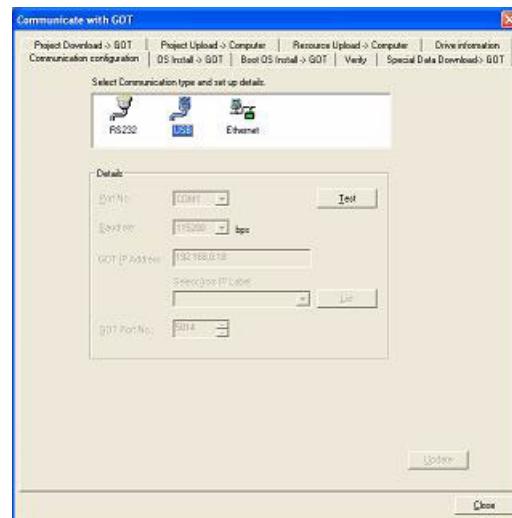**Installing OS and communication drivers**

Go to the “OS Install -> GOT” tab in the “Communicate with GOT” window of GT Designer2 and select “Standard monitor OS” and “Communication driver” – “FREQROL 500/700 [\*\*.\*.\*.\*]” from the data selection tree. Use the **Install** button to initiate the data transfer and update the firmware.

Once the firmware update has been completed the GOT will automatically reboot and all features will be up to date. Note that new project data will need to be downloaded to the GOT.

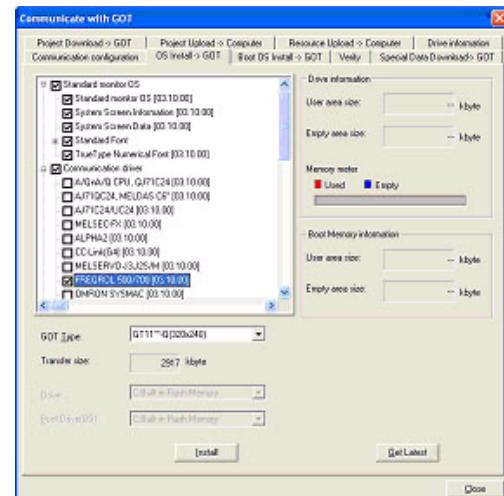

## 5 Inverter Settings

When setting the inverter communication parameters it is important to reset the power afterwards so that the settings are saved to the inverter.

The parameters shown in the following table must be set using the PU (Parameter Unit).

### NOTE

Do not change these parameters, even though it is possible to monitor them through the GOT. If they are changed, communication with the GOT is disabled.

Setting item	Parameter	Set Value	Setting Contents
Communication Station number	Pr.117	0 to 31	See following section
Communication Speed	Pr.118	192	19200 bps
Stop bit length	Pr.119	10	Data length: 7 bit Stop bit length: 1 bit
Parity check presence/absence	Pr.120	1	Odd
Number of Communication retries	Pr.121	9999	The inverter will not come to an alarm stop.
Communication check time interval	Pr.122	9999	Communication check suspension
Wait time setting	Pr.123	0	0ms
CR/LF selection	Pr.124	1	With CR, without LF
Protocol selection	Pr.549	0	Mitsubishi inverter protocol
Operation mode selection	Pr.79	0	PU operation mode
Communication startup mode selection	Pr.340	1	Network operation mode
EEPROM write selection	Pr.342	0	Written to RAM and EEPROM


**Tab. 5:** Inverter setting parameters

## 6 Station Setting

Set each station number while making sure that each station number is used only once. The station number can be set regardless of the cable connection order.

Station numbers do not have to be consecutive.

The setting of the Station number has to be between 0 and 31.

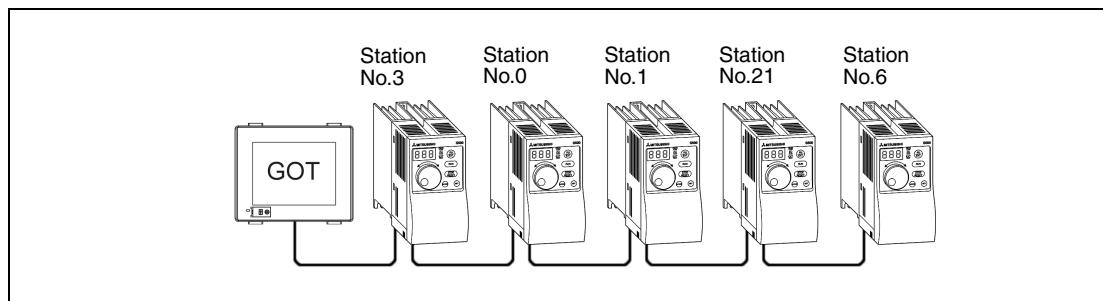

**Fig. 4:** Examples of station number setting

### 6.1 Indirect Specification


When setting the station number indirectly, the station number of the inverter can be changed using the 16-bit GOT internal data register (GD10 to GD25). When specifying the station No. from 100 to 155 on GT Designer 2, the value within GD10 to GD25 is equal to the station No..

Specification station No.	Compatible Device	Setting range
100	GD10	0 to 31 If the associated device contains a value outside this range an error (dedicated device is out of range) will occur.
101	GD11	
102	GD12	
103	GD13	
104	GD14	
105	GD15	
106	GD16	
107	GD17	
108	GD18	
109	GD19	
110	GD20	
111	GD21	
112	GD22	
113	GD23	
114	GD24	
115	GD25	

**Tab. 6:** Secification of the station number

## 7 Confirm Communication

Before downloading project data to the GOT, the I/O Check function can be used to verify that the GOT is communicating properly with the PLC. After pressing the “CPU” button, if no error is shown, communication has been set up correctly.

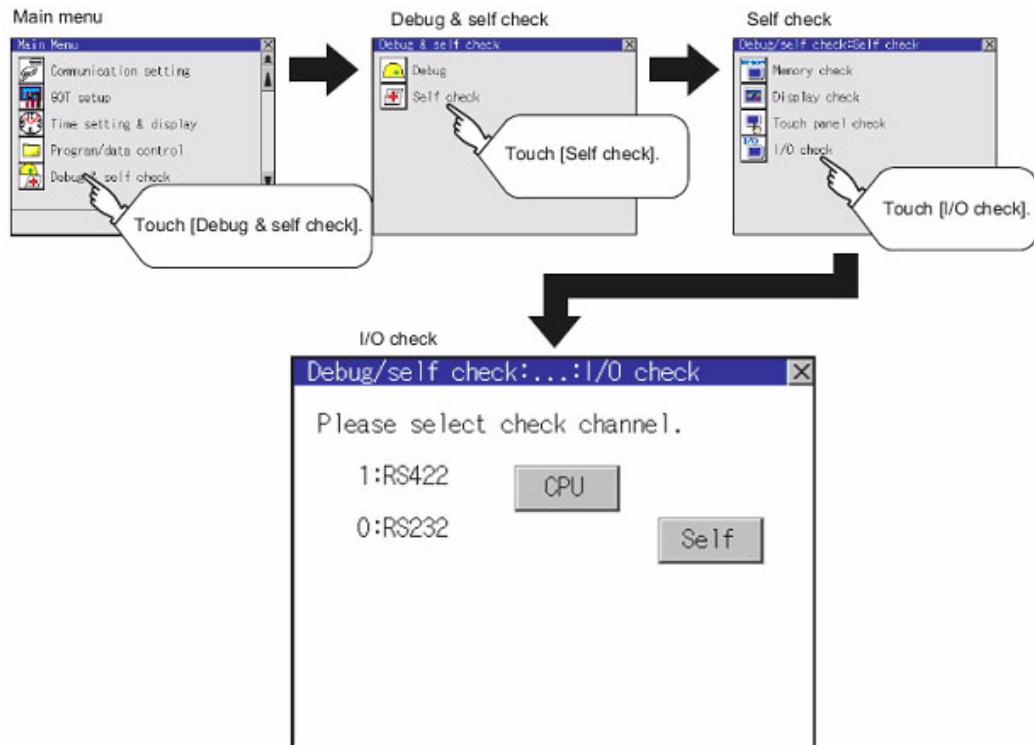



HEADQUARTERS		EUROPEAN REPRESENTATIVES		EUROPEAN REPRESENTATIVES		EURASIAN REPRESENTATIVES	
MITSUBISHI ELECTRIC EUROPE B.V. German Branch Gothaer Straße 8 <b>D-40880 Ratingen</b> Phone: +49 (0)2102 / 486-0 Fax: +49 (0)2102 / 486-1120	EUROPE	GEVA Wiener Straße 89 <b>AT-2500 Baden</b> Phone: +43 (0)2252 / 85 55 20 Fax: +43 (0)2252 / 488 60	AUSTRIA	INTEHSIS srl bld. Traian 23/1 <b>MD-2060 Kishinev</b> Phone: +373 (0)22 / 66 4242 Fax: +373 (0)22 / 66 4280	MOLDOVA	Kazpromautomatics Ltd. Mustafina Str. 7/2 <b>KAZ-470046 Karaganda</b> Phone: +7 7212 / 50 11 50 Fax: +7 7212 / 50 11 50	KAZAKHSTAN
MITSUBISHI ELECTRIC EUROPE B.V. <b>CZECH REPUBLIC</b> Czech Branch Radlicka 714/113 a <b>CZ-158 00 Praha 5</b> Phone: +420 251 551 470 Fax: +420-251-551-471		OKtyabrskaya 16/5, Off. 703-711 <b>BY-220030 Minsk</b> Phone: +375 (0)17 / 210 46 26 Fax: +375 (0)17 / 210 46 26	BELARUS	Koning & Hartman b.v. Haarlerbergweg 21-23 <b>NL-1101 CH Amsterdam</b> Phone: +31 (0)20 / 587 76 00 Fax: +31 (0)20 / 587 76 05	NETHERLANDS	CONSYS Promyshlennaya st. 42 <b>RU-198099 St. Petersburg</b> Phone: +7 812 / 325 36 53 Fax: +7 812 / 325 36 53	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. <b>FRANCE</b> French Branch 25, Boulevard des Bouvets <b>F-92741 Nanterre Cedex</b> Phone: +33 (0)1 / 55 68 55 68 Fax: +33 (0)1 / 55 68 57 57		Koning & Hartman b.v. Woluweelaan 31 <b>BE-1800 Vilvoorde</b> Phone: +32 (0)2 / 257 02 40 Fax: +32 (0)2 / 257 02 49	BELGIUM	Beijer Electronics AS Postboks 487 <b>N-3002 Drammen</b> Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77	NORWAY	Drive Technique STC 1-st Magistralny tupik, 10, bld 1 <b>RU-123290 Moscow</b> Phone: +7 495 / 786-21 00 Fax: +7 495 / 786-21 01	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. <b>IRELAND</b> Irish Branch Westgate Business Park, Ballymount <b>IRL-Dublin 24</b> Phone: +353 (0)1 4198800 Fax: +353 (0)1 4198890		AKHNATON 4 Andrej Ljapchev Blvd. Pb 21 <b>BG-1756 Sofia</b> Phone: +359 (0)2 / 817 6004 Fax: +359 (0)2 / 97 44 06 1	BULGARIA	MPL Technology Sp. z o.o. Ul. Krakowska 50 <b>PL-32-083 Balice</b> Phone: +48 (0)12 / 630 47 00 Fax: +48 (0)12 / 630 47 01	POLAND	ELECTROTECHNICAL SYSTEMS Derbenevskaya st. 11A, Office 69 <b>RU-115114 Moscow</b> Phone: +7 495 / 744 55 54 Fax: +7 495 / 744 55 54	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. <b>ITALY</b> Italian Branch Viale Colleoni 7 <b>I-20041 Agrate Brianza (MI)</b> Phone: +39 039 / 60 53 1 Fax: +39 039 / 60 53 312		INEA CR d.o.o. Losinjska 4 a <b>HR-10000 Zagreb</b> Phone: +385 (0)1 / 36 940 -01/-02/-03 Fax: +385 (0)1 / 36 940 -03	CROATIA	Sirius Trading & Services srl Aleea Lacul Morii Nr. 3 <b>RO-060841 Bucuresti, Sector 6</b> Phone: +40 (0)21 / 430 40 06 Fax: +40 (0)21 / 430 40 02	ROMANIA	ELEKTROSTILY Rubzowskaja nab. 4-3, No. 8 <b>RU-105082 Moscow</b> Phone: +7 495 / 545 3419 Fax: +7 495 / 545 3419	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. <b>SPAIN</b> Spanish Branch Carretera de Rubí 76-80 <b>E-08190 Sant Cugat del Vallés (Barcelona)</b> Phone: 902 131121 // +34 935653131 Fax: +34 935891579		AutoCont C.S., s.r.o. Technologicka 374/6 <b>CZ-708 00 Ostrava Pustkovec</b> Phone: +420 (0)59 / 5691 150 Fax: +420 (0)59 / 5691 199	CZECH REPUBLIC	Craft Con. & Engineering d.o.o. Bulevar Svetog Cara Konstantina 80-86 <b>SER-18106 Niš</b> Phone: +381 (0)18 / 292-24-4/5, 523 962 Fax: +381 (0)18 / 292-24-4/5, 523 962	SERBIA	RPS-AUTOMATIKA Budennovskiy 97, Office 311 <b>RU-344007 Rostov on Don</b> Phone: +7 8632 / 22 63 72 Fax: +7 8632 / 219 45 51	RUSSIA
MITSUBISHI ELECTRIC EUROPE B.V. <b>UK</b> UK Branch Travellers Lane <b>UK-Hatfield, Herts. AL10 8XB</b> Phone: +44 (0)1707 / 27 61 00 Fax: +44 (0)1707 / 27 86 95		B:TECH, a.s. U Borove 69 <b>CZ-1001 Havlickuv Brod</b> Phone: +420 (0)569 777 777 Fax: +420 (0)569-777 778	CZECH REPUBLIC	INEA SR d.o.o. Karadjordjeva 12/260 <b>SER-11300 Smederevo</b> Phone: +381 (0)26 / 617 163 Fax: +381 (0)26 / 617 163	SERBIA		
MITSUBISHI ELECTRIC CORPORATION <b>JAPAN</b> Office Tower "Z" 14 F 8-12, 1 chome, Harumi Chuo-Ku <b>Tokyo 104-6212</b> Phone: +81 3 622 160 60 Fax: +81 3 622 160 75		Beijer Electronics A/S Lykkegårdsvæj 17, 1. <b>DK-4000 Roskilde</b> Phone: +45 (0)46 / 75 76 66 Fax: +45 (0)46 / 75 56 26	DENMARK	AutoCont Control, s.r.o. Radlinského 47 <b>SK-02601 Dolny Kubin</b> Phone: +421 (0)43 / 5868210 Fax: +421 (0)43 / 5868210	SLOVAKIA		
MITSUBISHI ELECTRIC AUTOMATION, Inc. <b>USA</b> 500 Corporate Woods Parkway <b>Vernon Hills, IL 60061</b> Phone: +1 847 478 21 00 Fax: +1 847 478 22 53		Beijer Electronics Eesti OÜ Pärnu mnt.160i <b>EE-11317 Tallinn</b> Phone: +372 (0)6 / 51 81 40 Fax: +372 (0)6 / 51 81 49	ESTONIA	CS MTrade Slovensko, s.r.o. Vajanského 58 <b>SK-92101 Piešťany</b> Phone: +421 (0)33 / 7742 760 Fax: +421 (0)33 / 7735 144	SLOVAKIA		
MITSUBISHI ELECTRIC AUTOMATION, Inc. <b>USA</b> 500 Corporate Woods Parkway <b>Vernon Hills, IL 60061</b> Phone: +1 847 478 21 00 Fax: +1 847 478 22 53		Beijer Electronics OY Jaakonkatu 2 <b>FIN-1120 Vantaa</b> Phone: +358 (0)207 / 463 500 Fax: +358 (0)207 / 463 501	FINLAND	INEA d.o.o. Stegne 11 <b>SI-1000 Ljubljana</b> Phone: +386 (0)1 / 513 8100 Fax: +386 (0)1 / 513 8170	SLOVENIA		
UTECo A.B.E.E. <b>GREECE</b> 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999		MELTRADE Ltd. Fertő utca 14. <b>HU-1107 Budapest</b> Phone: +36 (0)1 / 431-9726 Fax: +36 (0)1 / 431-9727	HUNGARY	Beijer Electronics Automation AB Box 426 <b>SE-20124 Malmö</b> Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 35 86 02	SWEDEN		
UTECo A.B.E.E. <b>GREECE</b> 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999		Beijer Electronics SIA Vestienas iela 2 <b>LV-1035 Riga</b> Phone: +371 (0)784 / 2280 Fax: +371 (0)784 / 2281	LATVIA	Econotec AG Hinterdorferstr. 12 <b>CH-8309 Nürensdorf</b> Phone: +41 (0)44 / 838 48 11 Fax: +41 (0)44 / 838 48 12	SWITZERLAND		
UTECo A.B.E.E. <b>GREECE</b> 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999		Beijer Electronics UAB Savanoriu Pr. 187 <b>LT-02300 Vilnius</b> Phone: +370 (0)5 / 232 3101 Fax: +370 (0)5 / 232 2980	LITHUANIA	GTS Darulaceze Cad. No. 43 KAT. 2 <b>TR-34384 Okmeydani-Istanbul</b> Phone: +90 (0)212 / 320 1640 Fax: +90 (0)212 / 320 1649	TURKEY		
UTECo A.B.E.E. <b>GREECE</b> 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 211 / 1206 900 Fax: +30 211 / 1206 999		CSC Automation Ltd. 15, M. Raskova St., Fl. 10, Office 1010 <b>UA-02002 Kiev</b> Phone: +380 (0)44 / 494 33 55 Fax: +380 (0)44 / 494-33-66	UKRAINE				