



FOR MITSUBISHI FREQROL-A500L SERIES INVERTER

This compact and high-performance brake unit ensures operator safety

Brake Unit

MT-BU5

Brake Resistor

MT-BR5

INSTRUCTION MANUAL

MT-BU5 Brake Unit and MT-BR5 Brake Resistor

Use MT-BU5 Brake Unit and MT-BR5 brake resistor in combination with Mitsubishi FREQROL-A500L series general-purpose inverter. The combination of these units will consume the regenerative energy of the motor thermally, and as a result, the motor braking capability will be enhanced. If your machine needs a large braking torque to prevent the motor from being unnecessarily rotated by the load or to reduce speed immediately, Please use our brake unit and resistor.

■ Features

1. Greatly upgraded braking capability

The brake unit and resistor ensure excellent braking capability even during frequent use of the brake. This is because the allowable operation rate (% ED) for a rated short-time operation is very large (10% ED at 100% torque) when the motor has the same capacity as the brake unit.

2. Various capacities

There are various types of the brake units and re-resistors, such as 75k to 375k brake units and resistors for a rated power supply of 400V.

3. Easy wiring

Wiring is very easy because the cables necessary to connect the brake unit to the inverter unit are already connected to the brake unit before shipment.

4. Easy operation

The monitor function of the inverter unit enables you to check the brake operation rate during operation.

■ Specifications


Brake Unit	— (Note.1)	— (Note.1)	MT-BU5-H75K	MT-BU5-H150K	MT-BU5-H220K	MT-BU5-H280K	MT-BU5-H375K
Brake Resistor	— (Note.1)	— (Note.1)	1×MT-BR5-H75K	2×MT-BR5-H75K	3×MT-BR5-H75K	4×MT-BR5-H75K	5×MT-BR5-H75K
Resistor	—	—	6.5 Ω	6.5 Ω/2P	6.5 Ω/3P	6.5 Ω/4P	6.5 Ω/5P
DC input voltage	200V Type Less than 400V DC		400V Type Less than 800V DC				
Capacity of applicable motor	The braking torque and operation rate (% ED) depends on the capacity of the motor which is combined with the brake unit.						
Braking torque	The braking torque depends on the capacity of the motor which is combined with the brake unit and the rated time (short or continuous time).						
Operation rate(% ED)	The rated time depends on the capacity of the motor which is combined with the brake unit and on the braking torque.						
Applicable control unit	Mitsubishi general-purpose FR-A500L series inverters.						
Output signal	Resistor overheat (1a) The brake resistor mounts the output signal.						
Protective function	Fan and resistor overheat preventive functions						
Display	Braking torque operation rate (%ED) and fault (displayed on the inverter unit main body)						
Ambient conditions	Ambient temperature	-10°C~+50°C					
	Ambient humidity	90% RH or less					
	Storage temperature	-20°C~+65°C					
	Ambient atmosphere	Indoors: No corrosive gas, oil mist, flammable gas, dust, or dirt					
	Altitude and vibration	1,000m above sea level or less, 5.9m/s ² (.06G) or less (in accordance with JIS C0911)					
Protective structure (JEM1030)	Open type (IP00)						
Cooling method	Forced air cooling						

(Note.1) Development stages.

(Note.2) Select the optimum brake unit and brake unit and brake resistor by referring to the combination table.


Outline Dimensions

Brake unit

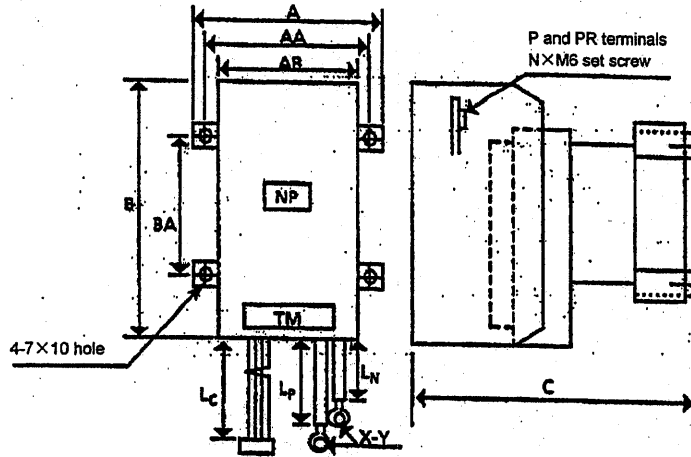

Brake unit model		A	AA	AB	B	BA	C	L _c	L _p	L _n	N	Approx. weight	X	Y
200V	-	118	102	85	200	100	256.5	-	-	-	1	1.5	-	-
	-	188	172	155	200	100	256.5	-	-	-	2	3.0	-	-
400V	MT-BU5-H75K	118	102	90	200	100	256.5	550	1740	1740	1	1.5	14	12
	MT-BU5-H150K	188	172	160	200	100	256.5	550	2000	2000	2	3.0	22	12
	MT-BU5-H220K	258	242	230	200	100	256.5	550	2000	2000	3	4.5	38	12
	MT-BU5-H280K	328	312	300	200	100	256.5	550	2330	2330	4	6.0	60	12
	MT-BU5-H375K	398	382	370	200	100	256.5	550	2330	2330	5	7.5	60	12

Brake resistor

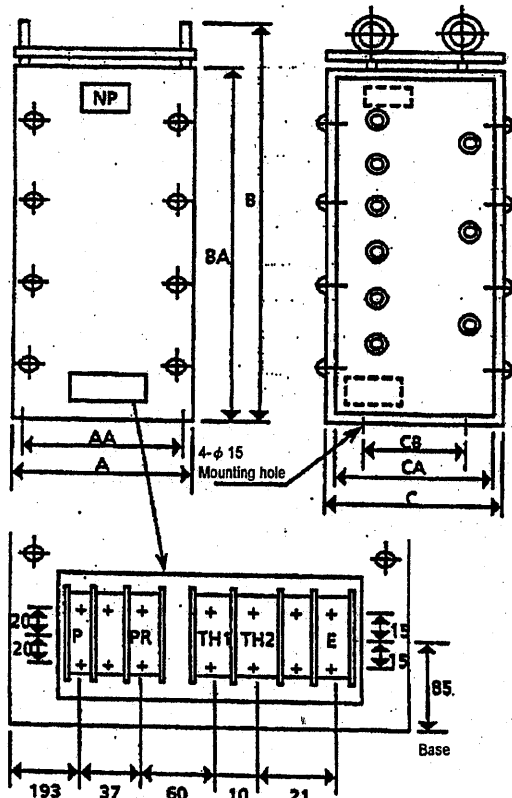

(Note1) Install the brake resistor in a well-ventilated area. If the resistor brake is installed in uneasily-heated area, such as inside the panel, be sure to ventilate the inside of the panel.

(Note2) The brake resistor temperature rises to 300deg. Therefore connect the cables carefully so that no cables come into contact with the resistor. Keep parts not resistant to heat 40 to 50 cm away from the resistor.

(Note3) If the operation rate of the brake unit exceeds the specified value, the resistor temperature will rise excessively. If this occurs turn off the input power of the inverter to protect the brake resistor from overheating.

※The resistor is equipped with an overheating prevention thermostat (a-contact).

If the thermostat is activated during normal operation, the inverter slow-down time will be too short. Prolong the set slow-down time.

Brake unit model		A	AA	B	BA	C	CA	CB	Resistor	Weight
200V	-	-	-	-	-	-	-	-	-	-
400V	MT-BR5-H75K	510	480	885	800	465	450	300	6.5 Ω	70 kg

■ Terminals

Brake unit

Terminal		Terminal name	Rating	Description
Main circuit	P	Brake resistor terminal set	-	This is the terminal to connect to the brake resistor. Some brake unit have two or more brake resistor terminal sets to that two or more resistors can be connected to the brake unit.
	PR			
	P/+	Brake unit input terminal	-	This is the cable to connect the P and N terminals of inverter. The connection cables are supplied with the brake unit.
	N/-			
Control circuit	GBR	Brake unit drive terminal	-	This is the brake unit control signal.
	EBR			
	THBP	Abnormal output detection terminal	-	This is an output signal that indicates that the brake unit is overheated. ※The cable for transmission of these control signals is supplied with the brake unit.
	THBN			

Brake resistor


Terminal		Terminal name	Rating	Description
Main circuit	P	Brake resistor input terminal set	-	This is the cable to connect the P and PR terminals of brake unit.
	PR			
Control circuit	TH1	Abnormal output detection terminal	1a contact AC110V 5A AC220V 3A	This is an output signal that indicates that the resistor is overheated.
	TH2			

Cable size

Brake unit model		Brake resistor model	Cable (P-P, PR-PR)
200V	-	-	-
	-	-	-
400V	MT-BU5-H75K	MT-BR5-H75K	14mm ²
	MT-BU5-H150K	2 × MT-BR5-H75K	2 × 14mm ²
	MT-BUR-H220K	3 × MT-BR5-H75K	3 × 14mm ²
	MT-BU5-H280K	4 × MT-BR5-H75K	4 × 14mm ²
	MT-BU5-H375K	5 × MT-BR5-H75K	5 × 14mm ²

Be sure to use the cables of the above recommended sizes or above.

Example of External Wiring

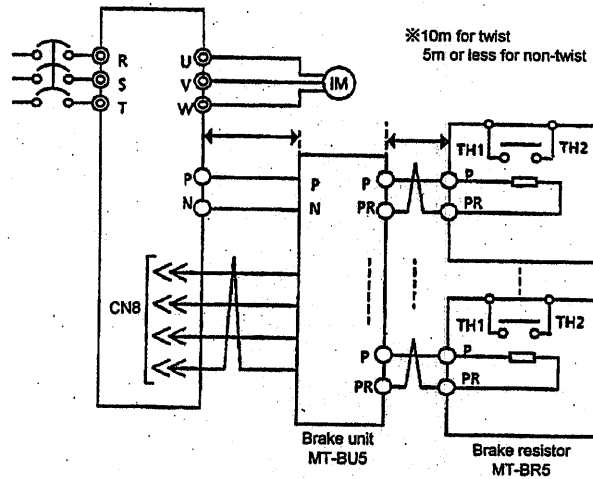

(Note1) When connecting the brake unit to the inverter unit, be sure to use the electric cables supplied with the brake unit.

(Note2) The main circuit wire is connected to the P and N terminals, and the control circuit wire is connected to the internal LL connector (CN8) after placing slits on the rubber bushing on the top of the inverter.

(Note3) The brake unit that uses multiple brake resistors has the same number of terminals as the brake resistor unit. Connect the one brake resistor to one set of terminals (P, PR).

Selection

[Application to inverter]

- Select the brake unit appropriate for the motor capacity.
- Even if an inverter 1-rank larger in capacity is used, the braking torque and operation rate(% ED) should be as follows:

•% ED at 100% braking torque during rated short-time operation

Motor capacity		37kW	55kW	75kW	90kW	110kW	150kW	160kW	220kW	280kW	375kW	
Inverter		200V	75k	75k	75k	90k	110k	-	-	-	-	
		400V	75k	75k	75k	110k	110k	150k	160k	220k	280k	375k
Brake Unit	200V	MT-BU5-55K	%ED	20	10	-	-	-	-	-	-	
		MT-BU5-110K	%ED	85	40	20	15	10	-	-	-	-
	400V	MT-BU5-H75K	%ED	40	15	10	-	-	-	-	-	-
		MT-BU5-H150K	%ED	-	70	40	25	15	10	-	-	-
		MT-BU5-H220K	%ED	-	-	85	55	40	20	15	10	-
		MT-BU5-H280K	%ED	-	-	-	95	60	30	30	15	10
MT-BU5-H375K	%ED	-	-	-	-	-	60	50	25	15	10	

•Braking torque (%) at 10% 15sec ED during rated short-time operation


Motor capacity		37kW	55kW	75kW	90kW	110kW	150kW	160kW	220kW	280kW	375kW		
Inverter		200V	75k	75k	75k	90k	110k	-	-	-	-		
		400V	75k	75k	75k	110k	110k	150k	160k	220k	280k	280k	
Brake Unit	200V	MT-BU5-55K	Braking torque (%)	145	100	70	60	50	-	-	-	-	
		MT-BU5-110K	Braking torque (%)	290	200	145	120	100	-	-	-	-	
	400V	MT-BU5-H75K	Braking torque (%)	200	135	100	80	65	50	45	30	25	20
		MT-BU5-H150K	Braking torque (%)	-	270	200	165	135	100	90	65	50	40
		MT-BU5-H220K	Braking torque (%)	-	-	290	240	200	145	135	100	75	55
		MT-BU5-H280K	Braking torque (%)	-	-	-	300	250	185	175	125	100	70
MT-BU5-H375K	Braking torque (%)	-	-	-	-	300	250	230	170	130	100		

※To obtain large braking torque, the motor should have optimum torque characteristics. Check the torque characteristics of the motor.

■ Allowable Continuous Power

Allowable continuous power for brake unit MT-BR5

Model		Allowable continuous power : WRC[kW]
200V	Development stages	-
400V	MT-BR5-H75K	7.5

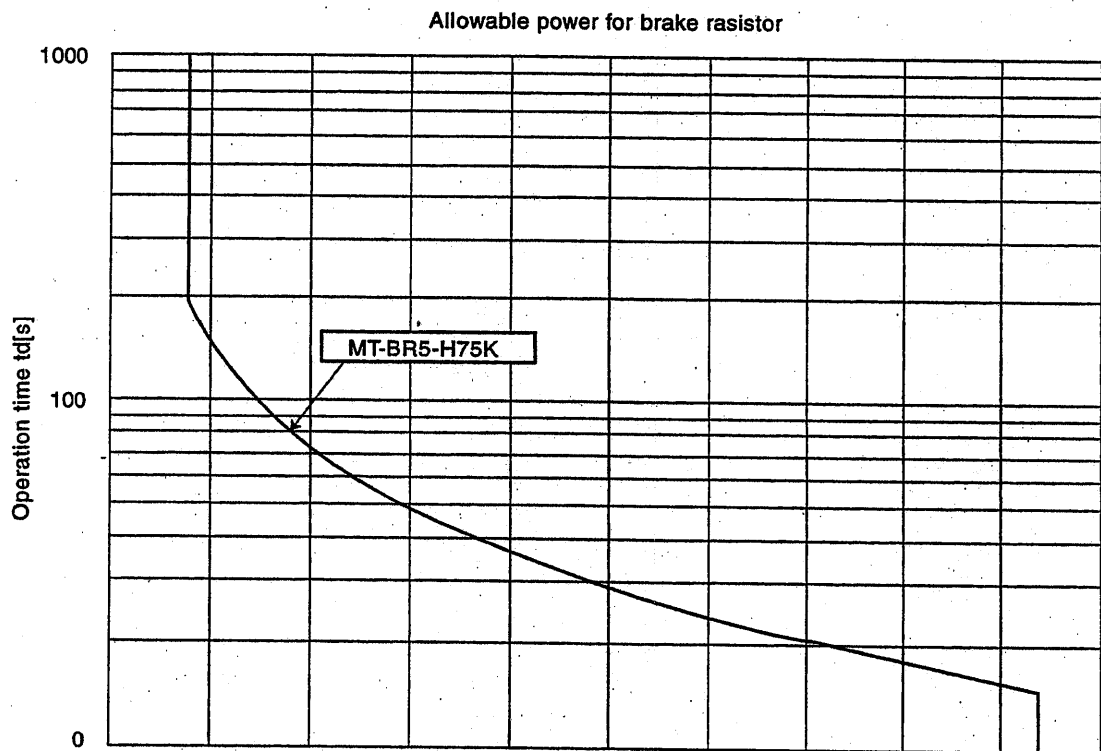


MT-BU5-H75K	0	10	20	30	40	50	60	70	80	90	100
MT-BU5-H150K	0	20	40	60	80	100	120	140	160	180	200
MT-BU5-H220K	0	30	60	90	120	150	180	210	240	270	300
MT-BU5-H280K	0	40	80	120	160	200	240	280	320	360	400
MT-BU5-H375K	0	50	100	150	200	250	300	350	400	450	500


Allowable power for brake resistor WRC[kW]

Braking Torque


MT-BU5-H75K / MT-BR5-H75K

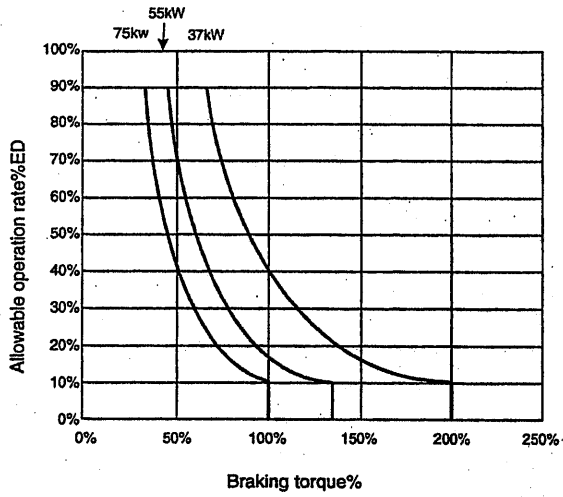


MT-BU5-H150K / 2 × MT-BR5-H75K

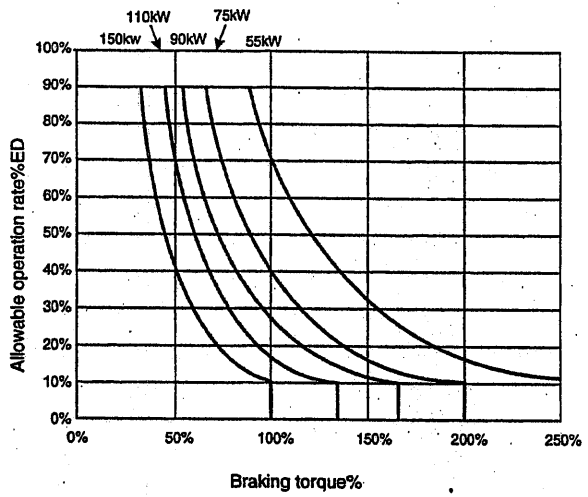


MT-BU5-H220K / 3 × MT-BR5-H75K

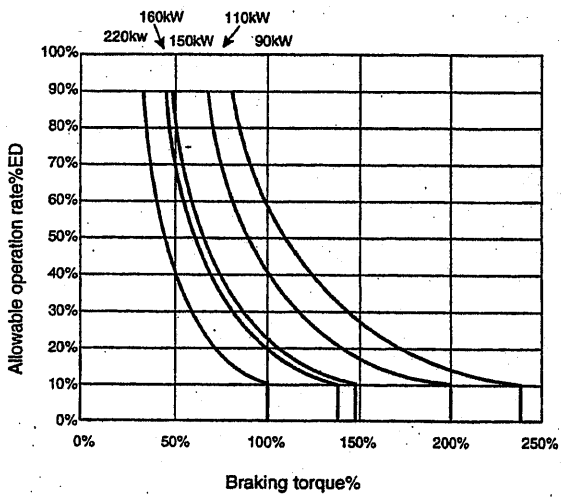

MT-BU5-H280K / 4 × MT-BR5-H75K

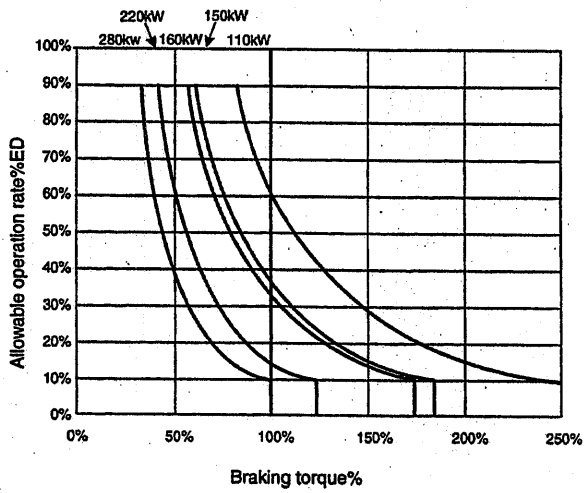

MT-BU5-H375K / 5 × MT-BR5-H75K

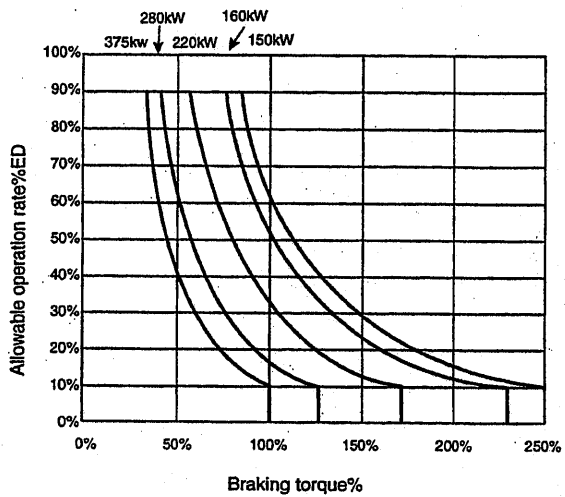


■ Operation

Connecting the brake unit

Remove the inverter unit's cover, and connect the cable with the brake resistor to the brake unit terminals P and PR. Connect the main circuit cable enclosed with the brake unit to the inverter unit's P and N terminals, and connect the control circuit cable to the LL connector CN8 on the upper left of the inverter.

※The rubber bushing must be cut, so take special care to safety.

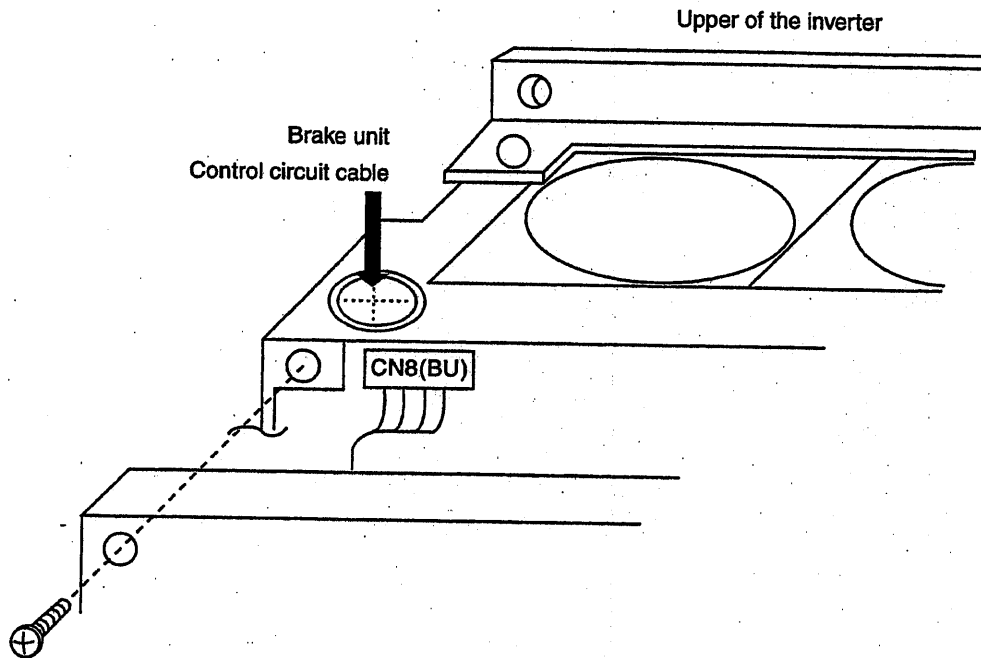

Setting parameters for inverter unit

Set the parameters for the inverter unit before starting the brake unit.

Pr.30 : 1 (Factory-set value : "0")

Pr.70 : Set the regenerative brake duty to 10%. (Factory set value : 0%)

Setting parameters for brake unit

- (1) Setting parameters for display of brake unit operation rate (Pr.52 to Pr.54 and Pr.158)
These parameters select the monitor and output signal function of the inverter unit so that DU, PU, and meter can display the brake unit operation rate.
- (2) Setting parameters for output of brake unit pre-alarm signal (Pr.190 to Pr.195)
The output terminal of the inverter unit will output a pre-alarm signal when the regenerative brake operation rate is 85% (detected setting Pr.70).
- (3) Brake circuit fault
If the brake unit overheats, the inverter will be stopped due to a "brake circuit fault", and DU and PU will display the main circuit fault "E.15".

HEADQUARTERS

MITSUBISHI ELECTRIC EUROPE B.V.
 German Branch
 Gothaer Straße 8
D-40880 Ratingen
 Phone: +49 (0)2102 486-0
 Fax: +49 (0)2102 486-1120
 e mail: megfamail@meg.mee.com

MITSUBISHI ELECTRIC EUROPE B.V.
 French Branch
 25, Boulevard des Bouvets
F-92741 Nanterre Cedex
 Phone: +33 1 55 68 55 68
 Fax: +33 1 55 68 56 85
 e mail: factory.automation@fra.mee.com

MITSUBISHI ELECTRIC EUROPE B.V.
 Irish Branch
 Westgate Business Park, Ballymount
IRL-Dublin 24
 Phone: +353 (0) 1 / 419 88 00
 Fax: +353 (0) 1 / 419 88 90
 e mail: sales.info@meir.mee.com

MITSUBISHI ELECTRIC EUROPE B.V.
 Italian Branch
 Via Paracelso 12
I-20041 Agrate Brianza (MI)
 Phone: +39 039 60 53 1
 Fax: +39 039 60 53 312
 e mail: factory.automation@it.mee.com

MITSUBISHI ELECTRIC EUROPE B.V.
 Spanish Branch
 Carretera de Rubí 76-80
E-08190 Sant Cugat del Vallés
 Phone: +34 9 3 565 3131
 Fax: +34 9 3 589 2948
 e mail: industrial@sp.mee.com

MITSUBISHI ELECTRIC EUROPE B.V.
 UK Branch
 Travellers Lane
GB-Hatfield Herts. AL10 8 XB
 Phone: +44 (0) 1707 / 27 61 00
 Fax: +44 (0) 1707 / 27 86 95
 e mail: automation@meuk.mee.com

MITSUBISHI ELECTRIC CORPORATION
 Office Tower "Z" 14 F
 8-12,1 chome, Harumi Chuo-Ku
Tokyo 104-6212
 Phone: +81 3 622 160 60
 Fax: +81 3 622 160 75

MITSUBISHI ELECTRIC AUTOMATION
 500 Corporate Woods Parkway
Vernon Hills, IL 60061
 Phone: +1 847 478 21 00
 Fax: +1 847 478 22 83

EUROPEAN REPRESENTATIVES

GEVA AUSTRIA
 Wiener Straße 89
AT-2500 Baden
 Phone: +43 (0)2252 / 85 55 20
 Fax: +43 (0)2252 / 488 60
 e mail: office@geva.at

TEHNIKON BELARUS
 Oktjabrskaya 16/5, Ap 704
BY-220030 Minsk
 Phone: +375 (0)17 / 2104626
 Fax: +375 (0)17 / 2275830
 e mail: tehnikon@belsonet.net

Getronics b.v. BELGIUM
 Control Systems
 Pontbeeklaan 43
BE-1731 Asse-Zellik
 Phone: +32 (0)2 / 467 17 51
 Fax: +32 (0)2 / 467 17 45
 e mail: infoautomation@getronics.com

TELECON CO. BULGARIA
 4, A. Ljapchev Blvd.
BG-1756 Sofia
 Phone: +359 (0)2 / 97 44 058
 Fax: +359 (0)2 / 97 44 061
 e mail: —

INEA CR d.o.o. CROATIA
 Losinjaska 4 a
HR-10000 Zagreb
 Phone: +385 (0) 1 / 36 940-01
 Fax: +385 (0) 1 / 36 940-03
 e mail: inea@inea.hr

AutoCont CZECH REPUBLIC
 Control Systems s.r.o.
 Nemocnici 12
CZ-70200 Ostrava 2
 Phone: +420 59 / 6152 111
 Fax: +420 59 / 6152 562
 e mail: consys@autocont.cz

louis poulsen DENMARK
 industri & automation
 Geminivej 32
DK-2670 Greve
 Phone: +45 (0)43 / 95 95 95
 Fax: +45 (0)43 / 95 95 91
 e mail: lpia@lpmail.com

UTU Elektrotehnika AS ESTONIA
 Pärnu mnt.160i
EE-10621 Tallinn
 Phone: +372 (0)6 / 51 72 80
 Fax: +372 (0)6 / 51 72 88
 e mail: utu@utu.ee

UTU POWEL OY FINLAND
 Box 236
FIN-28101 Pori
 Phone: +358 (0)2 / 550 800
 Fax: +358 (0)2 / 550 8841
 e mail: tehoelektronikka@urhotuominen.fi

UTECO A.B.E.E. GREECE
 5, Mavrogenous Str.
GR-18542 Piraeus
 Phone: +302 (0)10 / 42 10 050
 Fax: +302 (0)10 / 42 12 033
 e mail: uteco@uteco.gr

Meltrade Automatika Kft. HUNGARY
 55, Harmat St.
HU-1105 Budapest
 Phone: +36 (0)1 / 2605 602
 Fax: +36 (0)1 / 2605 602
 e mail: office@meltrade.hu

SIA POWEL LATVIA
 Lienes iela 28
LV-1009 Riga
 Phone: +371 784 2280
 Fax: +371 784 2281
 e mail: utu@utu.lv

UAB UTU POWEL LITHUANIA
 Savanoriu Pr. 187
LT-2053 Vilnius
 Phone: +370 (0)52323-101
 Fax: +370 (0)52322-980
 e mail: powel@utu.lt

EUROPEAN REPRESENTATIVES

Intehsis Srl MOLDOVA
 Cuza-Voda 36/1-81
MD-2061 Chisinau
 Phone: +373 (0)2 / 562 263
 Fax: +373 (0)2 / 562 263
 e mail: intehsis@mdl.net

Getronics b.v. NETHERLANDS
 Control Systems
 Donauweg 2 B
NL-1043 AJ Amsterdam
 Phone: +31 (0)20 / 587 6700
 Fax: +31 (0)20 / 587 6839
 e mail: info.gia@getronics.com

Motion Control NETHERLANDS
 Automation b.v.
 Markenweg 5
NL-7051 HS Varsseveld
 Phone: +31 (0)315 / 257 260
 Fax: +31 (0)315 / 257 269
 e mail: —

Beijer Electronics AS NORWAY
 Teglværksveien 1
NO-3002 Drammen
 Phone: +47 (0)32 / 24 30 00
 Fax: +47 (0)32 / 84 85 77
 e mail: info@beijer.no

MPL Technology Sp. z o.o. POLAND
 ul. Sliczna 36
PL-31-444 Kraków
 Phone: +48 (0)12 / 632 28 85
 Fax: +48 (0)12 / 632 47 82
 e mail: krakow@mpl.pl

Sirius Trading & Services srl ROMANIA
 Str. Biharia Nr. 67-77
RO-013981 Bucuresti 1
 Phone: +40 (0) 21 / 201 1146
 Fax: +40 (0) 21 / 201 1148
 e mail: sirius@siriustrading.ro

INEA SR d.o.o. SERBIA AND MONTENEGRO
 Karadjordjeva 12/260
SCG-113000 Smederevo
 Phone: +381 (0)26/ 617 - 163
 Fax: +381 (0)26/ 617 - 163
 e mail: inea_sr@verat.net

ACP Autocomp a.s. SLOVAKIA
 Chalupkova 7
SK-81109 Bratislava
 Phone: +421 (02)5292-2254
 Fax: +421 (02)5292-2248
 e mail: info@acp-autocomp.sk

INEA d.o.o. SLOVENIA
 Stegne 11
SI-1000 Ljubljana
 Phone: +386 (0)1 513 8100
 Fax: +386 (0)1 513 8170
 e mail: inea@inea.si

Beijer Electronics AB SWEDEN
 Box 426
S-20124 Malmö
 Phone: +46 (0)40 / 35 86 00
 Fax: +46 (0)40 / 35 86 02
 e mail: info@beijer.de

ECONOTEC AG SWITZERLAND
 Postfach 282
CH-8309 Nürensdorf
 Phone: +41 (0)1 / 838 48 11
 Fax: +41 (0)1 / 838 48 12
 e mail: info@econotec.ch

GTS TURKEY
 Darülaceze Cad. No. 43A KAT: 2
TR-80270 Okmeydani-Istanbul
 Phone: +90 (0)212 / 320 1640
 Fax: +90 (0)212 / 320 1649
 e mail: gts@turk.net

CSC Automation UKRAINE
 15, M. Raskova St., Fl. 10, Off. 1010
UA-02002 Kiev
 Phone: +380 (0)44 / 238 83 16
 Fax: +380 (0)44 / 238 83 17
 e mail: csc-a@csc-a.kiev.ua

EURASIAN REPRESENTATIVES

Avtomatika Sever Ltd. RUSSIA
 Lva Tolstogo St. 7, Off. 311
RU-197376 St Petersburg
 Phone: +7 812 / 11 83 238
 Fax: +7 812 / 11 83 239
 e mail: as@avtsev.spb.ru

CONSYS RUSSIA
 Promyshlennaya St. 42
RU-198099 St Petersburg
 Phone: +7 812 / 325 36 53
 Fax: +7 812 / 325 36 53
 e mail: consys@consys.spb.ru

ELEKTROSTYLE RUSSIA
 Poslannikov Per., 9, Str.1
RU-107005 Moscow
 Phone: +7 095 / 542-4323
 Fax: +7 095 / 956-7526
 e mail: info@estl.ru

ELEKTROSTYLE RUSSIA
 Krasnij Prospekt 220-1, Office 312
RU-630049 Novosibirsk
 Phone: +7 3832 / 10 66 18
 Fax: +7 3832 / 10 66 26
 e mail: elo@elektrostyle.ru

ICOS RUSSIA
 Ryazanskij Prospekt, 8A, Office 100
RU-109428 Moscow
 Phone: +7 095 / 232 0207
 Fax: +7 095 / 232 0327
 e mail: mail@icos.ru

SMENA RUSSIA
 Polzunova 7
RU-630051 Novosibirsk
 Phone: +7 095 / 416 4321
 Fax: +7 095 / 416 4321
 e mail: smena-nsk@yandex.ru

STC Drive Technique RUSSIA
 Poslannikov per., 9, str.1
RU-107005 Moscow
 Phone: +7 095 / 786 21 00
 Fax: +7 095 / 786 21 01
 e mail: info@privod.ru

MIDDLE EAST REPRESENTATIVE

SHERF Motion Techn. Ltd ISRAEL
 Rehov Hamerkava 19
IL-58851 Holon
 Phone: +972 (0)3 / 559 54 62
 Fax: +972 (0)3 / 556 01 82
 e mail: —

AFRICAN REPRESENTATIVE

CBI Ltd SOUTH AFRICA
 Private Bag 2016
ZA-1600 Isando
 Phone: +27 (0)11 / 928 2000
 Fax: +27 (0)11 / 392 2354
 e mail: cbi@cbi.co.za